



# INSTALLATION MANUAL



- STEP 2. REMOVE PROTECTIVE SHIPPING MATERIALS ..... 44
- STEP 3. COMPLETE HINGED ROOF ..... 44
- STEP 4. REPAIR OR INSTALL MARRIAGE LINE GASKET ..... 46
- STEP 5. POSITION ADDITIONAL HOME SECTIONS ..... 47
- STEP 6. CONNECT FLOORS ..... 48
- STEP 7. CONNECT ROOF ..... 49
- STEP 8. CONNECT WALLS ..... 51
- STEP 9. ATTACH TAG UNITS ..... 53
- STEP 10. REMOVE TEMPORARY ITEMS ..... 54
- STEP 11. FASTEN HOME TO FOUNDATION ..... 54
- STEP 12. BACKFILL AND GRADE ..... 54
- STEP 13. BUILD STAIRS ..... 54
- COMPLETE ROOF AND EXTERIOR WALLS ..... 55**
  - STEP 1. COMPLETE ROOF ..... 55
  - STEP 2. COMPLETE TAG UNIT ROOF ..... 57
  - STEP 3. COMPLETE SIDE WALLS ..... 58
- CONNECT CROSSOVERS ..... 59**
  - STEP 1. CONNECT DUCTS ..... 59
  - STEP 2. CONNECT ELECTRICAL CROSSOVERS ..... 62
  - STEP 3. INSTALL ELECTRICAL BONDING ..... 64
  - STEP 4. CONNECT WATER LINES ..... 65
  - STEP 5. CONNECT DRAIN, WASTE, AND VENT LINES ..... 66
  - STEP 6. CONNECT GAS LINES ..... 68
  - STEP 7. CONNECT TELEPHONE AND CABLE TV WIRING ..... 68
- COMPLETE THE INTERIOR ..... 69**
  - STEP 1. ALIGN MARRIAGE WALLS ..... 69
  - STEP 2. FINISH GYPSUM BOARD ..... 69
  - STEP 3. COMPLETE WALL AND CEILING FINISHES ..... 70
  - STEP 4. COMPLETE CARPET ..... 70
  - STEP 5. COMPLETE TRIM ..... 70
  - STEP 6. INSTALL SHIP LOOSE ITEMS ..... 70
- INSTALL STABILIZING SYSTEM ..... 71**
  - PIER CONSTRUCTION ..... 72
  - TIEDOWN INSTALLATION AND PLACEMENT ..... 74
  - TIEDOWN SPACINGS ..... 78
  - MATE LINE ANCHORAGE ..... 80
  - LONG. ANCHORAGE ..... 81
  - INSTALL STRAPS ..... 82
  - TIGHTEN AND ADJUST STRAPS ..... 86
- CONNECT UTILITIES ..... 87**
  - STEP 1. CONNECT ELECTRICAL SERVICE ..... 87
  - STEP 2. CONNECT WATER SERVICE ..... 90
  - STEP 3. CONNECT GAS SERVICE ..... 93
  - STEP 4. CONNECT OIL SERVICE ..... 94
- PREPARE APPLIANCES AND EQUIPMENT ..... 96**
  - INSTALL AIR CONDITIONER OR HEAT PUMP ..... 96
  - PREPARE HEATING SYSTEM ..... 97
  - INSTALL REMOTE HEATING AND COOLING EQUIPMENT ..... 97

# Index of Steps

**INTRODUCTION** ..... 4

**IMPORTANT NOTICES** ..... 4

**SAFETY** ..... 4

**RESOURCES** ..... 5

**FEDERAL PREEMPTION**..... 5

**DEFINITIONS** ..... 5

**ENGINEER’S STAMP**..... 7

**SYMBOLS USED IN THE MANUAL** ..... 7

**ABBREVIATIONS**..... 7

**ALTERNATIVE FOUNDATION SYSTEMS** ..... 7

**DISPLAY AND STORAGE OF THE HOME** ..... 8

**GETTING STARTED**..... 9

**STEP 1. LOCATE THE DATA PLATE** ..... 9

**STEP 2. CONFIRM WIND ZONE**..... 9

**STEP 3. CONFIRM THERMAL ZONE**..... 10

**STEP 4. CONFIRM ROOF-LOAD ZONE**..... 11

**STEP 5. CHECK LOCAL CODES AND SECURE PERMITS**..... 13

**PREPARE THE SITE** ..... 14

**STEP 1. PLAN SITE ACCESS** ..... 14

**STEP 2. DETERMINE HOME LOCATION AND LAYOUT** ..... 14

**STEP 3. CLEAR AND GRADE THE SITE**..... 15

**STEP 4. DETERMINE SOIL CONDITION** ..... 15

**STEP 5. DETERMINE SOIL-BEARING CAPACITY AND FROST LINE**..... 16

**STEP 6. DETERMINE GROUND ANCHOR HOLDING CAPACITY**..... 19

**INSTALL FOOTINGS**..... 20

**STEP 1. DESIGN POINT LOAD SUPPORTS** ..... 22

**STEP 2. DESIGN FRAME SUPPORTS (Homes Without Perimeter Blocking)**..... 25

**STEP 3. DESIGN FRAME AND PERIMETER SUPPORTS (Homes With Perimeter Blocking)**..... 26

**STEP 4. SELECT FOOTING MATERIALS**..... 28

**STEP 5. SIZE FOOTINGS** ..... 29

**STEP 6. INSTALL FOOTINGS**..... 31

**CONSTRUCT FOUNDATIONS** ..... 35

**STEP 1. OBTAIN A FOUNDATION DESIGN** ..... 35

**STEP 2. EXCAVATE** ..... 35

**STEP 3. CONSTRUCT THE FOOTING OR SLAB**..... 35

**STEP 4. CONSTRUCT THE PERIMETER WALL** ..... 35

**STEP 5. INSTALL INTERIOR SUPPORTS** ..... 36

**STEP 6. WATERPROOF FOUNDATION WALL**..... 36

**STEP 7. BACKFILL AND GRADE** ..... 36

**SET THE HOME**..... 37

**STEP 1. PREPARE FOR SET** ..... 37

**STEP 2. POSITION HOME SECTION** ..... 37

**STEP 3. LIFT HOME**..... 37

**STEP 4. CONSTRUCT PIERS**..... 39

**COMPLETE MULTI-SECTION SET**..... 44

**STEP 1. INSTALL MARRIAGE LINE ANCHORS** ..... 44

MODEL MANUFACTURER'S INSTALLATION MANUAL



FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
 APPROVED  
 02  
 2/15/2011

# Index of Steps

PREPARE VENTILATION SYSTEM .....	98	300.001C
PREPARE FUEL-BURNING WATER HEATER.....	99	
PREPARE CLOTHES DRYER .....	99	
PREPARE SMOKE ALARMS .....	100	
PREPARE FIREPLACES .....	100	
PREPARE KITCHEN AND BATH APPLIANCES / FIXTURES.....	102	
INSTALL EXTERIOR LIGHTING.....	103	
INSTALL CEILING FANS AND LIGHTING .....	103	
TEST ELECTRICAL SYSTEM.....	104	
<b>COMPLETE EXTERIOR WORK .....</b>	<b>106</b>	
STEP 1. REPAIR AND SEAL BOTTOM BOARD .....	106	
STEP 2. INSTALL GROUND MOISTURE RETARDER .....	106	
STEP 3. INSTALL SKIRTING.....	107	
STEP 4. COMPLETE SITE-BUILT STRUCTURES .....	108	
<b>PREPARE HOME FOR OCCUPANCY .....</b>	<b>109</b>	
STEP 1. VERIFY ALTERNATIVE CONSTRUCTION (A/C) INSPECTION.....	109	
STEP 2. COMPLETE INSPECTION CHECKLIST.....	109	
STEP 3. COMPLETE ENERGY STAR CHECKLIST.....	109	
STEP 4. CLEAN THE HOME.....	109	
<b>COMPLETE INSTALLATION CHECKLIST .....</b>	<b>110-112</b>	

MODEL MANUFACTURER'S INSTALLATION MANUAL



FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
APPROVED  
02  
2/15/2011

# Using the Manual

This manual is organized into a series of steps that will take you through the entire installation process using only those pages required for the specific home being installed. First, review the entire manual, including the Introduction chapter. As you read it, identify sections of the manual that you will need; identify other documents or information you will need; construct lists of tools and materials required for your particular installation; and make sure you have everything you need before starting work.

After reviewing the entire manual, refer to the sequence of installation steps in the table below. Identify the pathway for your installation and follow the arrows downward. Select either **Single Section Home** or a **Multi-Section Home** and choose the column corresponding to the home's foundation type, either **Pier and Ground Anchor** or **Load-Bearing Perimeter Wall** (see **Definitions**, p. 5). Then complete the work in each of the sections starting with **Getting Started**.

If using an alternative (proprietary) foundation system, the installation process will change from that described in this manual. Consult the system manufacturer directions for instructions. See page 7 for alternative foundation system criteria.

SINGLE SECTION HOME		MULTI-SECTION HOME	
Pier and Ground Anchor	Load-Bearing Perimeter Wall	Pier and Ground Anchor	Load-Bearing Perimeter Wall
Getting Started (p. 9) ▼			
Prepare the Site (p. 14) ▼			
Install Footings (p. 20) ▼	Construct Foundation (p. 35) ▼	Install Footings (p. 20) ▼	Construct Foundation (p. 35) ▼
Set the Home (p. 37) ▼	Connect Utilities (p. 87) ▼	Set the Home (p. 37) ▼	Complete Roof and Exterior Walls (p. 55) ▼
Install Stabilizing System (p. 71) ▼	Prepare Appliances and Equipment (p. 96) ▼	Complete Multi-Section Set (p. 44) ▼	Connect Crossovers (p. 59) ▼
Connect Utilities (p. 87) ▼	Complete Under the Home and Site Built Structures (p. 106) ▼	Complete Roof and Exterior Walls (p. 55) ▼	Complete Interior (p. 69) ▼
Prepare Appliances and Equipment (p. 96) ▼	Prepare Home for Occupancy (p. 109) ▼	Connect Crossovers (p. 59) ▼	Connect Utilities (p. 87) ▼
Complete Under the Home and Site Built Structures (p. 106) ▼	Complete Installation Checklist (p. 110)	Complete Interior (p. 69) ▼	Prepare Appliances and Equipment (p. 96) ▼
Prepare Home for Occupancy (p. 109) ▼		Install Stabilizing System (p. 71) ▼	Complete Under the Home and Site Built Structures (p. 106) ▼
Complete Installation Checklist (p. 110)		Connect Utilities (p. 87) ▼	Prepare Home for Occupancy (p. 109) ▼
		Prepare Appliances and Equipment (p. 96) ▼	Complete Installation Checklist (p. 110)
		Complete Under the Home and Site Built Structures (p. 106) ▼	
		Prepare Home for Occupancy (p. 109) ▼	
		Complete Installation Checklist (p. 110)	

## Disclaimer

The Manufactured Housing Research Alliance, its members, consultants, contractors and representatives make no representations, warranty or guarantee, express or implied, as to the accuracy or appropriateness of any materials or information in this manual for use in a specific

February 1, 2011

CHAMPION 

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS APPROVED  
R A D C  
02

2/15/2011

home, nor assume any liability for the use of the information, methods, or materials contained herein, or for damages arising from any such use.

Copyright © 2008 Manufactured Housing Research Alliance

ISSN 1529-3424



R A D C  
FEDERAL MANUFACTURED  
HOUSING CONSTRUCTION  
& SAFETY STANDARDS  
APPROVED  
02  
2/15/2011

# Introduction

This installation manual contains instructions that must be followed for the proper installation of the home. It complies with the HUD Model Manufactured Home Installation Standards. Please read all instructions and any other documents (including addendum pages and supplements) that may apply to the specific home prior to commencing site work or installation.

This installation manual covers permits and site work through final inspection of the installation. It covers both single and multi-section homes installed over pier and anchor, load bearing crawl space walls and basement foundations. It contains instructions, including specifications and procedures, for the set and hookup of manufactured homes to be used as single-family dwellings.

The importance of correct installation cannot be over-emphasized. Correct installation is absolutely essential to homeowner satisfaction and the structural integrity of the home. All instructions must be followed to provide the customer with a safe, quality home.

No manual can cover all circumstances that may exist for certain home designs or building sites. For questions, further clarification, or if you encounter conditions at the site or in the design of the home or its foundation not covered by this manual, please contact Champion Home Builders Inc. (see **Resources**, p. 5), a registered engineer, or registered architect.

Supplemental addendum pages may be included with this manual. Supplements include requirements not covered in this manual or that supersede the manual instructions.

Once the home installation is complete, leave this manual with the home.

## IMPORTANT NOTICES

- Champion Home Builders Inc. is not responsible for installation or for the materials supplied by the set-up crew at the time of installation. The installer may be responsible for any deviations from the installation instructions of this manual.
- To keep the home in compliance with its warranty, the home installation must follow the procedures described in this manual or other procedures approved by Champion Home Builders Inc. Deviation from the instructions in this manual may void the home's warranty. Any alterations or changes to the home shall be approved by a registered engineer or registered architect and may still be subject to warranty violations.
- When an installer does not provide support and anchorage in accordance with the approved manufacturer's installation instructions, or encounters site conditions (such as areas that are subject to flood damage or high seismic risk) or other conditions that prevent the use of the instructions provided in this manual, the installer must obtain special site-specific instructions or use a design approved by a registered engineer or registered architect.
- The installer must possess a valid installation license as a manufactured home installer.
- If the installer identifies failures of the home to comply with the Federal Manufactured Home Construction and Safety Standards (the HUD Code), the installer must notify the Champion Home Builders Inc. and retailer.

## SAFETY

There are potential hazards associated with the installation of a manufactured home. Home installers are licensed, and as experienced professionals, should recognize these hazards, be qualified to work with them, and be capable of providing safe work practices and equipment that minimize the risks of injury.

Only qualified persons should install a manufactured home. As qualified professionals in the field of manufactured home installation, installers are the experts and must be aware of the hazards and conditions faced. Warnings are published throughout this manual as reminders. These reminders may not cover all hazards, all potential hazards, or all possible consequences of improper or unsafe installation practices.

Construction crews should be trained in the skills required and be supervised by experienced personnel. Installers should regularly inspect work performed by crews and subcontractors.

Obey OSHA regulations, particularly those related to home construction, such as Title 29 Code of Regulations Part 1926. For copies of OSHA regulations, call (202) 512-1800 or visit [www.osha.gov](http://www.osha.gov) on the web.

February 1, 2011

**CHAMPION** 

FEDERAL MANUFACTURED  
HOUSING CONSTRUCTION  
& SAFETY STANDARDS  
APPROVED  
02

2/15/2011

## RESOURCES

300.005

### Manufacturer contact information:

Champion Home Builders Inc.  
P.O. Box 427 – 1660 Rowe Ave.  
Worthington, MN. 56187  
Telephone: (507)376-9460  
Fax: (507)376-5915

### Office of Regulatory Affairs and Manufactured Housing

US Department of Housing and Urban Development  
451 Seventh Street, SW, Room 9164  
Washington, DC 20410-8000  
Telephone: (202) 708-6423 or (800) 927-2891  
FAX: (202) 708-4213

### State Administrative Agencies

A list of SAAs may be found on the web at [www.hud.gov](http://www.hud.gov) or by contacting the Office of Regulatory Affairs and Manufactured Housing.

## FEDERAL PREEMPTION

This home was engineered, constructed, and inspected in conformance with the Federal Manufactured Home Construction and Safety Standards of the US Department of Housing and Urban Development (24 CFR Part 3280, commonly referred to as the "HUD Code") in effect on the date of manufacture. These Standards set forth minimum requirements for the design and construction of manufactured homes designed to be used as dwellings.

Individual states, counties and cities shall have no authority to establish standards regarding the construction or safety of a manufactured home. A metal certification label is affixed to each section of the home to certify that it has been constructed and inspected to comply with these Standards. The design plans and in-plant construction of all homes are inspected by independent third party agencies to assure compliance with the Standards.

The installation of the home and any alterations made to the home shall conform to the requirements of the Federal Manufactured Home Construction and Safety Standards and the HUD Model Manufactured Home Installation Standards. These installation instructions are minimum requirements. Applicable local or state laws may have more stringent installation requirements than outlined in this manual and must be followed. Consult with the local authority having jurisdiction (LAHJ) for regulations that may require licenses and/or permits or which may affect procedures described in this manual.

## DEFINITIONS

**ANCHOR ASSEMBLY.** Any device or other means designed to transfer loads to the ground.

**ANCHORING EQUIPMENT.** Ties, straps, cables, turnbuckles, chains, and other approved components, including tensioning devices that are used to secure a manufactured home to anchor assemblies.

**ANCHORING SYSTEM.** A combination of anchoring equipment and anchor assemblies that will, when properly designed and installed, resist the uplift, overturning, and lateral forces on the manufactured home.

**BASEMENT.** A load-bearing perimeter wall foundation that includes habitable space (finished or unfinished, heated or unheated) partly or completely below grade.

**CRAWLSPACE.** The space underneath the home's floor system, enclosed with either load- or non-load bearing perimeter walls. The ground may be covered with a concrete slab or by a plastic ground cover. Crawlspace walls must be vented.

**CROSSOVERS.** Utility interconnections between sections of multi-section homes, including heating and cooling ducts, electrical circuits, and water pipes, drain plumbing, and gas lines.

**DATA PLATE.** An information sheet located at the main electrical panel, in the utility room, in a bedroom closet, or in a cabinet in the kitchen. It contains a unique identification number and identifies the wind zone, roof load zone, and climatic zone for which the home was constructed.

**DIAGONAL TIE.** A tie intended to resist horizontal or shear forces, but which may resist vertical, uplift, and overturning forces.

**FOOTING.** That portion of the support system that transmits loads directly to the soil.

- GROUND ANCHOR.** A specific anchoring assembly device designed to transfer home loads to the ground.
- H-BEAM.** Steel H-beams are often used to support a home over a basement or crawlspace. They span across the foundation from sidewall to sidewall, typically with an intermediate support pier and footing (typically in the center point resulting in a line of piers under the centerline of a double section home).
- INFORMATION PACKET.** A set of important documents provided with the home including warranties, information on high wind coverage, and other features of the specific home.
- INSTALLATION LICENSE.** The proof that an installer meets the requirements for installing manufactured homes under the HUD-administered installation program.
- LABELED.** Equipment or materials to which has been attached a label, symbol, or other identifying mark of a certified testing laboratory, inspection agency, or other an organization concerned with product evaluation. The label indicates compliance with nationally recognized standards or tests to determine suitable usage in a specified manner.
- LISTED OR CERTIFIED.** Included in a list published by a nationally recognized testing laboratory, inspection agency, or other organization concerned with product evaluation that maintains periodic inspection of production of listed equipment or materials, and whose listing states either that the equipment or material meets nationally recognized standards or has been tested and found suitable for use in a specified manner.
- LOAD-BEARING PERIMETER WALL FOUNDATION.** A support system for the home whereby the home is mechanically fastened to a structural wall(s) that transfers gravity, lateral, and uplift loads to the ground.
- LOCAL AUTHORITY HAVING JURISDICTION (LAHJ).** The state, city, county, municipality, utility, or organization that has local responsibilities that must be complied with during the installation of a manufactured home.
- MUST.** Indicates a mandatory requirement.
- N/A.** Indicates not applicable.
- PIER.** That portion of the support system between the footing and the manufactured home, exclusive of shims. Types of piers include, but are not limited to: (1) manufactured steel stands; (2) pressure-treated wood; (3) manufactured concrete stands; (4) concrete blocks; and (5) portions of foundation walls.
- PIER AND GROUND ANCHOR FOUNDATION.** A support system for the home that employs piers under the chassis and other locations to support gravity loads and employs ground anchors and tie downs (the stabilizing system) to resist lateral and uplift loads.
- PERIMETER BLOCKING.** Regularly spaced piers supporting the sidewalls and marriage line of the home. Some homes require perimeter blocking in addition to supports under the home's frame.
- QUALIFIED.** Has the necessary knowledge and skills gained from experience and training that will allow performance of the job safely, competently, and in accordance with all applicable codes, standards, rules, and regulations. Meets all necessary qualification tests including any license and certification requirements that may be in effect in the area where the home will be installed.
- RAMADA.** Any freestanding roof or shade structure, installed or erected over a manufactured home or any portion thereof.
- SHOULD.** Indicates a recommendation that is strongly advised but not mandatory.
- SHALL.** Indicates a mandatory requirement.
- SITE FOR A MANUFACTURED HOME.** A designated parcel of land designed for the accommodation of one manufactured home, its accessory buildings or structures, and accessory equipment, for the exclusive use of the occupants of the home.
- SKIRTING.** A weather-resistant material used to enclose the perimeter, under the living area of the home, from the bottom of the manufactured home to grade.
- STABILIZING SYSTEM.** All components of the anchoring and support systems, such as piers, footings, ties, anchoring equipment, anchoring assemblies, or any other equipment, materials and methods of construction, that support and secure the manufactured home to the ground.
- SUPPORT SYSTEM.** Pilings, columns, a combination of footings, piers, foundation walls, caps, and shims and any combination thereof that will, when properly installed, support and secure the manufactured home to the ground.
- TIE.** Straps, cable, or securing devices used to connect the manufactured home to anchoring assemblies.

February 1, 2011



FEDERAL MANUFACTURED  
 HOUSING CONSTRUCTION  
 & SAFETY STANDARDS  
 02  
 APPROVED  
 2/15/2011

**UTILITY CONNECTION.** The connection of the manufactured home to utilities that include, but are not limited to, electricity, water, sewer, gas, or fuel oil. 300.007

**VERTICAL TIE.** A tie intended to resist uplifting and overturning forces.

**WIND ZONE.** The areas designated on the Basic Wind Zone Map, as further defined by the Manufactured Home Construction and Safety Standards.

## ENGINEER'S STAMP

Certain pages of this manual display the seal of a registered engineer. Federal guidelines only require the seal from one state to be displayed, but the details herein apply to all states.

## SYMBOLS USED IN THE MANUAL



This icon indicates an important warning. It is critical to heed these warnings.



This icon indicates a recommended best practice. While not required, following these practices will result in a superior installation, reducing the chance that cosmetic or durability related complaints might arise.

## ABBREVIATIONS

<b>ABS</b>	Acrylonitrile Butadiene Styrene	<b>max.</b>	Maximum
<b>ANSI</b>	American National Standards Institute	<b>MHCSS</b>	Manufactured Home Construction and Safety Standards
<b>APA</b>	American Plywood Association	<b>min.</b>	Minimum
<b>ASTM</b>	American Society for Testing and Materials	<b>mph</b>	Mile(s) per hour
<b>AWPA</b>	American Wood Preservers Association	<b>NEC</b>	National Electric Code
<b>CFM</b>	Cubic feet per minute	<b>NFIP</b>	National Flood Insurance Program
<b>CFR</b>	Code of Federal Regulations	<b>NFPA</b>	National Fire Protection Association
<b>DWV</b>	Drain, Waste, Vent	<b>o.c.</b>	On center
<b>EMT</b>	Electrical metallic tubing	<b>OSHA</b>	Occupational Safety and Health Administration
<b>FEMA</b>	Federal Emergency Management Agency	<b>oz</b>	Ounce(s)
<b>ft</b>	Foot/feet	<b>p.</b>	Page
<b>ga</b>	Gauge	<b>psf</b>	Pounds per square foot
<b>HUD</b>	US Department of Housing and Urban Development	<b>psi</b>	Pounds per square inch
<b>in</b>	Inch(es)	<b>SAA</b>	State Administrative Agency
<b>LAHJ</b>	Local Authority Having Jurisdiction	<b>sq ft</b>	Square foot/feet
<b>lb(s)</b>	Pound(s)		

## ALTERNATIVE FOUNDATION SYSTEMS

Alternative foundation systems or designs are permitted if they are approved by the Local Authority Having Jurisdiction (LAHJ) and a recognized HUD Third Party Agency, and are in accordance with either of the following:

- Systems or designs are manufactured and installed in accordance with their listings by a nationally recognized testing agency based on a nationally recognized testing protocol; or

- System designs are prepared by a registered engineer or a registered architect or tested and certified by a registered engineer or registered architect in accordance with acceptable engineering practice and are manufactured and installed so as not to take the home out of compliance with the Manufactured Home Construction and Safety Standards.

## DISPLAY AND STORAGE OF THE HOME


### WEATHER PROTECTION

If the installation is not started immediately upon delivery of the home, the retailer and/or installer has the responsibility to ensure the exterior weather protection covering of marriage walls and the roof of homes with hinged roofs has not been damaged during shipment. Inspect the home immediately upon the delivery and frequently during storage. Promptly repair tears in the home closure materials to prevent damage from the elements. Inspect and repair roof shingles and siding as needed.

### SUPPORTING A HOME FOR DISPLAY

When a new or used manufactured home is to be displayed at a retail location, temporarily block and support the home. Set up single-section homes with single block piers spaced no further apart than 12 feet o.c. beneath each I-beam. The tire and axle system may be used as one of these required supports, and the hitch jack may be used as another. Locate the first pier no further than two feet from the rear end of the home (**Figure 1**). Place additional piers along the perimeter on either side of openings greater than four feet (i.e. sliding glass doors, bay windows, etc.).

For multi-section homes, locate additional piers along the marriage line under support columns. These locations will be marked by Champion Home Builders Inc.

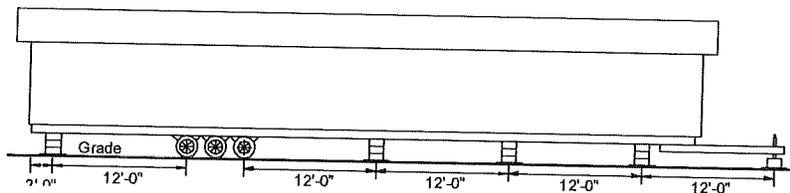

**Figure 1.** Supporting a home for display

For all homes, place footings below each pier. Footings may be placed directly on the surface grade without excavation and may be ABS pads, 2 x 10 by 16 inch long pressure treated lumber or 16" x 16" by 4 inch thick concrete pads.

### SUPPORTING A HOME FOR STORAGE

To prevent damage to homes being stored but not on display (i.e. people shall not be permitted inside the home) for a period exceeding 30 days, locate piers below each I-beam no further than two feet from each end of the home and at the approximate center between the tire and axle system and pier at hitch end of home.

# Getting Started

This chapter covers a few steps that, taken now, will avoid problems later in the installation process.

## Follow the Steps below:

- ▼ STEP 1. LOCATE THE DATA PLATE (p. 9)
- ▼ STEP 2. CONFIRM WIND ZONE (p. 9)
- ▼ STEP 3. CONFIRM THERMAL ZONE (p. 10)
- ▼ STEP 4. CONFIRM ROOF-LOAD ZONE (p. 11)
- ▼ STEP 5. CHECK LOCAL CODES AND SECURE PERMITS (p. 13)

## STEP 1. LOCATE THE DATA PLATE

Locate the data plate inside the home (Figure 2), typically inside the Master Bedroom closet.

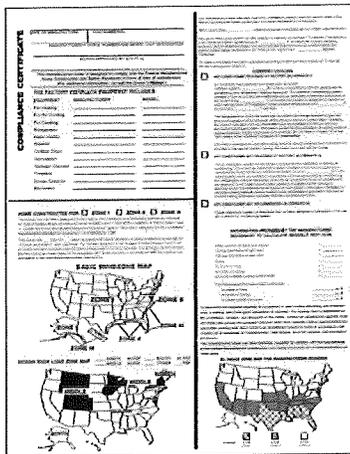


Figure 2. Sample data plate

The information on the data plate will be used to verify that the home was designed for the proper location.

## STEP 2. CONFIRM WIND ZONE

From Table 1, identify the wind zone for the home. Verify that the home conforms to the following rules and any special requirements determined by the LAHJ.

- No home may be located in a higher wind zone than that indicated on the data plate. (Example: a home designed for Wind Zone II cannot be placed in Wind Zone III.)
- A home may be located in a lower wind zone than that indicated on the data plate. (Example: a home designed for Wind Zone II can be placed in either Wind Zone II or I.)
- Homes located within 1,500 feet of the coastline in Wind Zones II and III must be designed to withstand exposure 'D' conditions. This will be indicated on the data plate.



**Site appropriateness.** If the site is not accessible, not appropriate for the planned support system or cannot be properly graded, notify the purchaser, the retailer and HUD, with the reasons why the site is unsuitable. Do not install the home until all issues are remedied.

If the home does not conform to these rules, contact the Champion Home Builders Inc. immediately.

**TABLE 1. WIND ZONE BY LOCALITY**

300.010

<b>Wind Zone I</b>	
All areas except those areas listed below as being within Wind Zone II or III	
<b>Wind Zone II</b>	
Alabama	Counties of Baldwin and Mobile
Florida	All counties except those listed below as within Wind Zone III
Georgia	Counties of Bryan, Camden, Chatham, Glynn, Liberty, McIntosh
Louisiana	Parishes of Acadia, Allen, Ascension, Assumption, Calcasieu, Cameron, East Baton Rouge, East Feliciana, Evangeline, Iberia, Iberville, Jefferson Davis, Lafayette, Livingston, Pointe Coupee, St. Helena, St. James, St. John the Baptist, St. Landry, St. Martin, St. Tammany, Tangipahoa, Vermillion, Washington, West Baton Rouge, and West Feliciana
Maine	Counties of Hancock and Washington
Massachusetts	Counties of Barnstable, Bristol, Dukes, Nantucket, and Plymouth
Mississippi	Counties of George, Hancock, Harrison, Jackson, Pearl River, and Stone
North Carolina	Counties of Beaufort, Brunswick, Camden, Chowan, Columbus, Craven, Currituck, Jones, New Hanover, Onslow, Pamlico, Pasquotank, Pender, Perquimans, Tyrrell, and Washington
South Carolina	Counties of Beaufort, Berkeley, Charleston, Colleton, Dorchester, Georgetown, Horry, Jasper, and Williamsburg
Texas	Counties of Aransas, Brazoria, Calhoun, Cameron, Chambers, Galveston, Jefferson, Kennedy, Kleberg, Matagorda, Nueces, Orange, Refugio, San Patricio, and Willacy
Virginia	Cities of Chesapeake, Norfolk, Portsmouth, Princess Anne, and Virginia Beach
<b>Wind Zone III</b>	
Hawaii	Entire state
Alaska	Coastal regions (as determined by the 90 mph isotach on the ANSI/ASCE 7-88 map)
Florida	Counties of Broward, Charlotte, Collier, Dade, Franklin, Gulf, Hendry, Lee, Martin, Manatee, Monroe, Palm Beach, Pinellas, and Sarasota
Louisiana	Parishes of Jefferson, La Fourche, Orleans, Plaquemines, St. Bernard, St. Charles, St. Mary, and Terrebonne
North Carolina	Counties of Carteret, Dare, and Hyde
Other	All regions of the U.S. Territories of American Samoa, Guam, Northern Mariana Islands, Puerto Rico, Trust Territory of the Pacific Islands, and the United States Virgin Islands

### STEP 3. CONFIRM THERMAL ZONE


From **Table 2**, identify the thermal (UO) zone for the home. Verify that the home conforms to the following rules.

- No home may be located in an area with a higher thermal zone number than that indicated on the data plate. (Example: a home designed for Thermal Zone 2 cannot be placed in Thermal Zone 3.)
- A home may be located in a lower thermal zone than that indicated on the data plate. (Example: a home designed for Thermal Zone 2 may be placed in either Thermal Zone 2 or 1.)
- In no case may a home designated for installation in the "Humid & Fringe Climate," as identified on the data plate, be located outside of this region (**Table 2**).

If the home does not conform to these rules, contact the Champion Home Builders Inc. immediately.

300.011

**Figure 3. Thermal (UO) zone map**

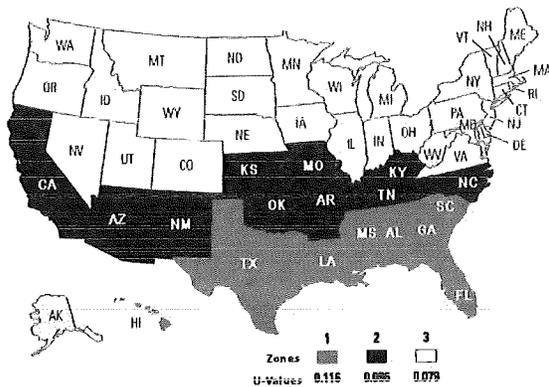

**TABLE 2. HUMID AND FRINGE CLIMATE ZONES**

Humid and Fringe Climate Zone	
Alabama	Counties of Baldwin, Barbour, Bullock, Butler, Choctaw, Clarke, Coffee, Conecuh, Covington, Crenshaw, Dale, Escambia, Geneva, Henry, Houston, Lowndes, Marengo, Mobile, Monroe, Montgomery, Pike, Washington, and Wilcox
Florida	All counties and locations
Georgia	Counties of Appling, Atkinson, Bacon, Baker, Ben Hill, Berrien, Brantley, Brooks, Bryan, Calhoun, Camden, Charleton, Chatham, Clay, Clinch, Coffee, Colquitt, Cook, Crisp, Decatur, Dougherty, Early, Echols, Effingham, Evans, Glynn, Grady, Irwin, Jeff Davis, Lanier, Lee, Liberty, Long, Lowndes, McIntosh, Miller, Mitchell, Pierce, Quitman, Randolph, Seminole, Tattnall, Terrell, Thomas, Tift, Turner, Ware, Wayne, and Worth
Hawaii	All counties and locations
Louisiana	All counties and locations
Mississippi	Counties of Adams, Amite, Claiborne, Clarke, Copiah, Covington, Forrest, Franklin, George, Greene, Hancock, Harrison, Hinds, Issaquena, Jackson, Jasper, Jefferson, Jefferson Davis, Jones, Lamar, Lawrence, Lincoln, Marion, Pearl River, Perry, Pike, Rankin, Simpson, Smith, Stone, Walthall, Warren, Wayne, and Wilkinson
North Carolina	Counties of Brunswick, Carteret, Columbus, New Hanover, Onslow, and Pender
South Carolina	Counties of Beaufort, Berkeley, Charleston, Colleton, Dorchester, Georgetown, and Horry
Texas	Counties of Anderson, Angelina, Aransas, Atascosa, Austin, Bastrop, Bee, Bexar, Brazoria, Brooks, Burleson, Caldwell, Calhoun, Cameron, Camp, Cass, Chambers, Cherokee, Colorado, Comal, De Witt, Dimmit, Duval, Falls, Fayette, Fort Bend, Franklin, Freestone, Frio, Galveston, Goliad, Gonzales, Gregg, Grimes, Guadalupe, Hardin, Harris, Harrison, Hays, Henderson, Hidalgo, Hopkins, Houston, Jackson, Jasper, Jefferson, Jim Hogg, Jim Wells, Karnes, Kaufman, Kennedy, Kinney, Kleberg, La Salle, Lavaca, Lee, Leon, Liberty, Limestone, Live Oak, Madison, Marion, Matagorda, Maverick, McMullen, Medina, Milam, Montgomery, Morris, Nacogdoches, Navarro, Newton, Nueces, Orange, Panola, Polk, Rains, Refugio, Robertson, Rusk, Sabine, San Augustine, San Jacinto, San Patricio, Shelby, Smith, Starr, Titus, Travis, Trinity, Tyler, Upshur, Uvalde, Val Verde, Van Zandt, Victoria, Walker, Waller, Washington, Webb, Wharton, Willacy, Williamson, Wilson, Wood, Zapata, and Zavala

## STEP 4. CONFIRM ROOF LOAD ZONE

From Table 3, identify the Roof Load Zone for the home. Verify that the home conforms to the following rules.

- No home may be placed in an area with a higher roof load than that indicated on the data plate. (Example: a home designed for the South (20 psf) Roof Load Zone cannot be placed in the Middle (30 psf) Roof Load Zone).
- A home may be located in an area with a lower roof load than that indicated on the data plate. (Example: a home designed for the Middle (30 psf) Roof Load Zone may be placed in the South (20 psf) Roof Load Zone).
- There are special high roof load areas (primarily in mountains) not shown on the map. Contact the LAHJ or SAA for information about these areas. The home's data plate will indicate if the home has been designed for one of these high roof load areas.
- Ramadas may be used in areas with roof live loads greater than 40 psf. Ramadas are to be self-supporting, except that any connection to the home

must be for weatherproofing only.

300.012

**TABLE 3. ROOF LOADS BY LOCALITY**

<b>North (40 psf roof load)</b>	
Alaska	All counties
Maine	Counties of Aroostook, Piscataquis, Somerset, Penobscot, Waldo, Knox, Hancock, Washington
<b>Middle (30 psf roof load)</b>	
Colorado	All counties
Idaho	All counties
Iowa	Counties of: Buena Vista, Butler, Calhoun, Cerro Gordo, Cherokee, Chickasaw, Clay, Dickinson, Emmet, Floyd, Franklin, Hamilton, Hancock, Hardin, Howard, Humboldt, Ida, Kossuth, Lyon, Mitchell, O'Brien, Osceola, Palo Alto, Plymouth, Pocahontas, Sac, Sioux, Webster, Winnebago, Worth, Wright
Maine	Counties of Androscoggin, Cumberland, Franklin, Kanabec, Lincoln, Oxford, Sagadahoc, York
Massachusetts	County of Essex
Michigan	Counties of Alger, Alcona, Alpena, Antrim, Baraga, Benzie, Charlevoix, Cheboygan, Chippewa, Crawford, Delta, Dickson, Emmet, Gogebic, Grand Traverse, Houghton, Iron, Kalkaska, Keweenaw, Leelanau, Luce, Mackinac, Marquette, Menominee, Missaukee, Montmorency, Ogemaw, Ontonagon, Oscoda, Otsego, Presque Isle, Roscommon, Schoolcraft, Wexford
Minnesota	Counties of Aitkin, Anoka, Benton, Blue Earth, Brown, Cass, Carlton, Carver, Chippewa, Chisago, Cook, Cottonwood, Crow Wing, Dakota, Dodge, Douglas, Faribault, Fillmore, Freeborn, Goodhue, Grant, Hennepin, Hubbard, Itasca, Isanti, Jackson, Kandiyohi, Kanabec, Koochiching, Lac qui Parle, Lake, Le Sueur, Lincoln, Lyon, McLeod, Meeker, Morrison, Millie Lacs, Mower, Martin, Murray, Nicollet, Nobles, Olmsted, Pipestone, Pine, Pope, Ramsey, Redwood, Renville, Rice, Rock, St. Louis, Sibley, Scott, Steele, Sherburne, Swift, Stearns, Stevens, Todd, Wadena, Wright, Washington, Wabasha, Winona, Waseca, Watonwan, Yellow Medicine
Montana	All Counties
New Hampshire	All Counties
New York	Counties of Cayuga, Clinton, Essex, Erie, Franklin, Fulton, Genesee, Hamilton, Herkimer, Jefferson, Lewis, Livingston, Madison, Monroe, Montgomery, Niagara, Oneida, Onondaga, Ontario, Orleans, Oswego, St. Lawrence, Saratoga, Schenectady, Seneca, Warren, Washington, Wayne, Wyoming, Yates
South Dakota	Counties of Brookings, Clay, Codington, Deuel, Grant, Hamlin, Hanson, Hutchinson, Kingsbury, Lake, Lincoln, McCook, Miner, Minnehaha, Moody, Turner, Union, Yankee
Utah	All Counties
Vermont	Counties of Addison, Caledonia, Chittenden, Essex, Franklin, Grand Isle, Lamoille, Orange, Orleans, Rutland, Washington, Windsor
Wisconsin	Counties of Ashland, Bayfield, Barron, Buffalo, Burnett, Clark, Chippewa, Door, Douglas, Dunn, Eau Claire, Florence, Forest, Iron, Jackson, Langlade, Lincoln, Marathon, Marinette, Menominee, Oconto, Oneida, Pepin, Pierce, Polk, Price, Rusk, St. Croix, Sawyer, Taylor, Trempealeau, Vilas, Washburn
Wyoming	All Counties
<b>South (20 psf roof load)</b>	
Other	The states and counties not listed for the Middle or North roof load zone above are deemed to be within the South roof load zone.

Is the data plate present and the home placed in the appropriate wind, thermal, and roof load zones?

- ▶ YES, go to STEP 5, CHECK LOCAL CODES AND SECURE PERMITS, (p. 13).
- ▶ NO, Stop installation activities and notify the home retailer, purchaser and HUD.

February 1, 2011

**CHAMPION** 

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
APPROVED  
02  
2/15/2011

## STEP 5. CHECK LOCAL CODES AND SECURE PERMITS

Local regulations may set conditions for the sitting and installation of a manufactured home. Consult the LAHJ, state manufactured housing association, and the state SAA (See **Resources**, p. 5) for the specific local requirements, including:

- Building codes that may affect the construction of site built structures and infrastructure.
- Local requirements regulating the installation of manufactured homes.
- Setback requirements for property lines, streets, yards, and courts.
- Fire separation distances.
- Development covenants for the specific property.
- The locations of flood hazard areas and any special foundation requirements for homes installed in those areas.
- In some areas, building permits are required to install manufactured homes. Prior to making any alteration to the site and the home, contact the LAHJ to determine if plan approval and permits are required.



### Areas subject to flooding.

The foundation specifications contained in this manual are NOT intended to address flood loads. If the home is in the flood plain, consult a registered engineer.

▶ go to **Prepare the Site** (p. 14)

## Prepare the Site

A properly prepared site is critical to a good quality installation and the long term structural stability of the home.

This chapter explains the process of planning the site, evaluating the soil, and preparing the site for construction of the home's support system.

### Follow the Steps below:

- ▼ **STEP 1. PLAN SITE ACCESS** (p. 14)
- ▼ **STEP 2. DETERMINE HOME LOCATION AND LAYOUT** (p. 14)
- ▼ **STEP 3. CLEAR AND GRADE THE SITE** (p. 15)
- ▼ **STEP 4. DETERMINE SOIL CONDITIONS** (p. 15)
- ▼ **STEP 5. DETERMINE SOIL BEARING CAPACITY AND FROST LINE** (p. 15)
- ▼ **STEP 6. DETERMINE GROUND ANCHOR HOLDING CAPACITY** (p. 16)

### STEP 1. PLAN SITE ACCESS

Planning the route to the site is typically the responsibility of the retailer or transportation company. Whoever is responsible must secure state permits from the states through which the home will pass.

In planning the route, avoid obstructions that might interfere with the passage of the home, such as low hanging wires and trees, low overpasses, and bridges not suitable for the load. Contact the utility company if wires need to be moved. Do not allow branches, bushes, or other foliage to scrape against the home as the home is moved to the site. Avoid ditches, berms, steep slopes, and soft ground. Identify and fill any holes and soft spots into which the transporter's wheels may sink. Avoid moving over steep changes in grade (20 degrees or more).

If required, provide for home storage and staging areas on the site. Plan the delivery and staging of home sections and materials so that after all deliveries are complete, home sections and materials can be accessed for use and installed in the appropriate sequence. Orient home sections so they do not have to be rotated or excessively maneuvered during the installation process. Plan for temporary needs, such as dumpsters, portable toilets, crew parking, delivery vehicle drop-offs and concrete mixer deliveries.

Before moving the manufactured home to the site, inform the LAHJ and make sure the site is prepared and utilities are available.

### STEP 2. DETERMINE HOME LOCATION AND LAYOUT

The home location may have already been determined by others. If not, plan the home location and layout in compliance with the regulations researched in **Getting Started, STEP 5. CHECK LOCAL CODES AND SECURE PERMITS** (p. 9). Contact utilities for locations of existing infrastructure, such as underground cables, pipes, and electrical lines. When planning the site improvements, consider the following:

- The home location should be level.
- Avoid contact with large trees, steep slopes, poorly drained areas, and potential flood zones.
- Preserve trees and shrubs for shade, visual screens, and windbreaks.



**Site Preparation.** The home manufacturer has no control over the site planning and installation of the home unless the manufacturer is responsible for the home's installation. Final responsibility for site preparation, including soil stability and frost heave control, lies with the installer. An improperly prepared site may result in the denial of a foundation-related warranty claim.



**Fire separation.** Comply with any LAHJ fire separation requirements or the requirements NFPA 501A, 2003 edition (Chapter 6).

February 1, 2011

FEDERAL MANUFACTURED  
HOUSING CONSTRUCTION  
& SAFETY STANDARDS  
APPROVED  
R A D C  
02  
2/15/2011

CHAMPION

- Plan the driveway, parking areas, septic, well, other structures, and utility lines.
- Consider future additions, such as screen rooms, porches, and awnings.

### STEP 3. CLEAR AND GRADE THE SITE

Trim overhanging foliage considering future growth, potential storms, swaying in wind and snow/ice-weighted branches. Remove organic material such as vegetation, wood, roots, twigs, dead branches, grass, and brush from directly under the home. Remove any debris that could become termite infested from the site and surrounding area. Remove all other debris from the home location, including roots from beneath footing locations. Properly dispose of all items.



Crown the site (**Figure 4**) away from the foundation for the first ten feet with a minimum slope of 1/2 inch per foot. Where property lines, walls, slopes, or other physical conditions prohibit this slope, provide the site with drains, swales, or grading to drain water away from the structure. Any fill required to grade the site should be inorganic "controlled fill" applied in a maximum of four inch layers, compacted between each layer to at least 90% of its maximum relative density. Direct runoff away from the site using ditches and berms (**Figure 5**). If the home will have skirting, start grading from two feet in from the edge of the home.



**Site drainage.** Moisture under the home can result in structural damage to the floor system and other parts of the home. Failure to provide adequate slope/drainage can result in moisture-related problems such as mold, mildew, and erosion.

**Figure 4.** Crown the soil under the home to prevent water ponding

**Figure 5.** Direct runoff away from the home

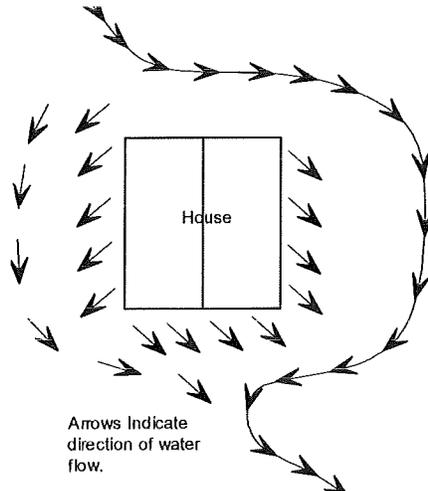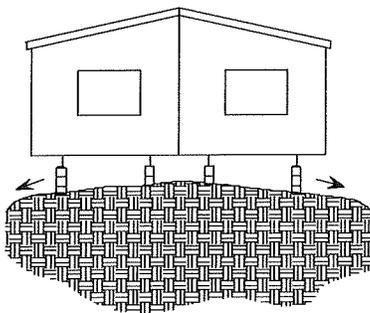

Grade the ground so that water under porches, decks, and recessed entries flows away from the home. If proper grading is not possible, use other methods such as a drain tile and automatic sump pump system to remove any water that may collect under the home.

The home is suitable for the installation of gutters and downspouts. When gutters and downspouts are installed, direct runoff away from the home.

### STEP 4. DETERMINE SOIL CONDITIONS

Examine the soil type under the proposed home location to make sure it is suitable for placement of a home. The design of the home's support system, including footing/pier spacing and size, will in part be determined by the bearing capacity of the soil, and if ground anchors are used, by the soil's withdrawal strength.

The soil under every portion of the support system must meet the following criteria:

- The soil must be firm and undisturbed (not previously excavated) or fill compacted to at least 90% of its maximum relative density. Uncompacted fill will settle over time, causing the home to shift and become unlevel.
- Fill must not contain large debris. This too will settle over time.



**Soil.** Inadequate soil bearing capacity or a support system mismatched to the soil characteristics can result in excessive or differential settlement of the home, which can cause the home to go out of level,



FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
 APPROVED  
 02

2/15/2011

- The soil must not be comprised of organic clays or peat. Organic material can decay, causing settlement, and also may harbor pests that can infest the home.
- The water table must be below the lowest level of the planned support system/foundation. A soil's bearing capacity can be greatly reduced when it is saturated with water. Note that water tables may vary with seasonal or climactic conditions. Consult a geologist or the LAHJ if you are unsure of the water table level.
- The soil must not be a highly expansive type. Expansive soils can expand when they become saturated with water, causing the home to shift and become unlevel. If soils are expansive, contact a registered engineer, or registered architect to assist with the design of the foundation system.

### Does the soil meet these criteria?

- ▶ **YES**, go to **STEP 5, DETERMINE SOIL BEARING CAPACITY AND FROST LINE**, (p. 16).
- ▶ **NO**. Consult a registered engineer, registered architect, or geologist to determine a suitable soil bearing capacity.

## STEP 5. DETERMINE SOIL-BEARING CAPACITY AND FROST LINE

The soil under a home must be capable of withstanding the loads imposed by the weight of the home, its support system and furnishings, as well as any loads imposed by wind, snow, or other climactic conditions.

### SOIL-BEARING CAPACITY

Determine the soil-bearing capacity in pounds per square foot (psf) before designing a support system. The higher the capacity (psf), the more weight the soil can hold without unduly compressing. As the soil-bearing capacity increases, footings can be reduced in size or spaced farther apart.

Use one or more of the following methods to determine the site's soil bearing capacity:

- **Test the soil.** Hire a registered geologist, registered engineer, or registered architect to determine the soil classification and maximum allowable soil bearing capacity by testing the soil in accordance with generally accepted engineering practice.
- **Obtain soil records.** The local office of the U.S. Department of Agriculture's Natural Resources Conservation Service ([www.soils.usda.gov](http://www.soils.usda.gov)) and/or the LAHJ may have test results and/or soil analyses on file for the area.
- **Conduct a pocket penetrometer test.** Use a pocket penetrometer to estimate allowable soil-bearing capacity as follows:
  1. Select a location that will be under a footing.
  2. Clear an area of a minimum of one square foot at least four inches deep or to the depth of the bottom of the planned footing.
  3. Using the instructions provided with the pocket penetrometer, take at least five readings.
  4. Discard the high and low readings and average the remaining readings. Round this result down to the nearest soil-bearing value shown in the right column of **Table 4**.
  5. Confirm that the rounded result matches the soil description on **Table 4**.
- **Determine soil-bearing value by visual examination.** If one of the options above is not available, the values on **Table 4** can be used to establish soil-bearing capacity by visual examination. This method provides lower capacity values than the options above. Accurate soil identification typically requires special training or expertise. An engineer or building code official may be able

resulting in jammed doors and windows, cracks in finishes and ruptured plumbing connections.



### Soil bearing capacity.

Support systems on soils with bearing capacities less than 1,000 psf must be designed by a registered engineer or registered architect and approved by the LAHJ.

### Limitations of pocket penetrometers.

Pocket penetrometers do not work on sand or gravel. Use **Table 4** to determine allowable pressure for these types of soils. If you encounter a layer of gravel, test the soil under the gravel. Do not put the penetrometer on stones larger than its tip as this will provide an inaccurate reading.

February 1, 2011

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
02  
APPROVED

2/15/2011

CHAMPION

300.017

to assist in classifying the soil found on the site.



**TABLE 4. SOIL-BEARING CAPACITY BY SOIL TYPE**

Soil Type (and classification)	Allowable Pressure (psf)
Rock or hard pan (class 1)	4,000
Sandy gravel and gravel; very dense and/or cemented sands; coarse gravel/cobbles; preloaded silts, clays and coral (class 2)	2,000
Sand; silty sand; clayey sand; silty gravel; medium dense coarse sands; sandy gravel; very stiff silt, sand clays (class 3)	1,500
Clay, sandy clay, silty clay, clayey silt (classes 4A and 4B)	1,000
Uncompacted fill, peat, organic clays (class 5)	Professional testing required


Note to table: No allowances made for overburden pressure, embedment depth, water table height, or settlement problems.

- **Use default capacity.** Use an allowable pressure of 1,500 psf, unless site-specific information requires the use of lower values based on soil classification and type according to **Table 4**.

Note that soil types may vary across a home site. In this case, the soil with the lowest bearing capacity should be assumed when designing the support system. Keep a record of the soil-bearing capacity value; it will be used later to design the home's support system.

### FROST LINE

In climates subject to ground freezing, consult the LAHJ, a registered engineer, or registered architect to determine the depth of the frost line. **Figure 6** may be used as a guideline when there is no specific local determination. Keep a record of the frost depth; it will be used later to design the home's support system.

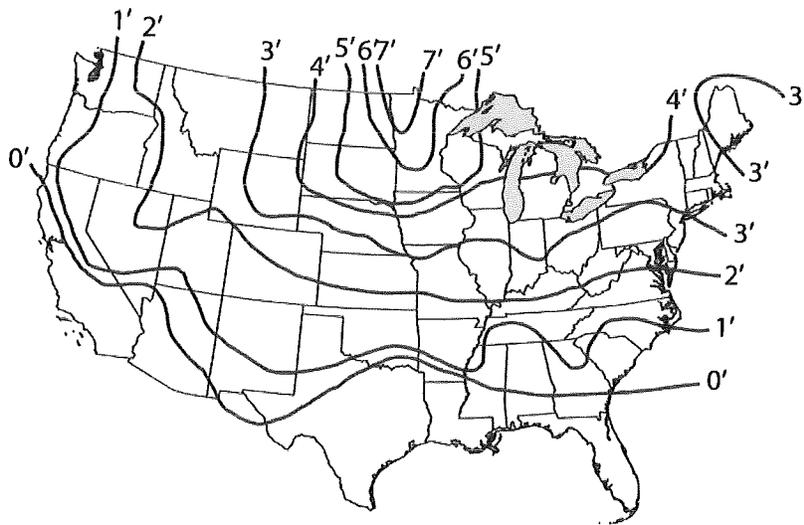

**Figure 6.** Average frost penetration depth (in feet)

Will this installation use auger-type ground anchors?

- ▶ YES, go to **STEP 6, DETERMINE GROUND ANCHOR HOLDING CAPACITY**, (p. 19)
- ▶ NO, go to **Construct Foundation**, (p. 35)



**Torque Probe.** Before using the torque probe, check with the utility companies for the location of

February 1, 2011

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
 APPROVED  
 02

2/15/2011

## STEP 6. DETERMINE GROUND ANCHOR HOLDING CAPACITY

When using auger-type ground anchors to tie down the home, first, use a torque probe to determine the anchor-holding strength of the soil on the site.

Use a torque probe with a shaft of sufficient length to test the soil at the depth of the anchor helical plate. Augur the probe into the ground, and following the probe manufacturer's instructions, take the torque wrench reading in the area where the anchors will be installed and at the depth of the anchor helix. If the soil varies in consistency across the site, then use the lowest reading. Based on this reading, consult the anchor manufacturer's charts to select the anchor type(s).

300.019  
underground cables or pipes  
to avoid contact with the  
probe shaft.

What type of support system will this installation use?

- ▶ For pier and ground anchor, go to **Install Footings**, (p. 25)
- ▶ For load-bearing perimeter wall, go to **Construct Foundation**, (p. 35)

## Install Footings

This chapter provides instructions for the design and construction of individual footings that transfer the load from a single pier to the ground. A footing and pier together (discussed in **Set the Home**) is referred to as a "support." A footing may also be designed to carry the load of multiple piers (often called "strip" footings). The design of strip footings is not covered in this manual. Alternate Frost Free Foundation Design (J-9 thru J-19.2) is available upon request.

### Follow the Steps below:

- ▼ **STEP 1. DESIGN POINT LOAD SUPPORTS** (p. 22)
- ▼ **step 2. DESIGN FRAME SUPPORTS** (Homes Without Perimeter Blocking) (p. 25)
- ▼ **STEP 3. DESIGN FRAME AND PERIMETER SUPPORTS** (Homes With Perimeter Blocking) (p.26)
- ▼ **STEP 4. SELECT FOOTING MATERIALS** (p.28)
- ▼ **STEP 5. SIZE FOOTINGS** (p.29)
- ▼ **STEP 6. INSTALL FOOTINGS** (p.31)

### REQUIRED SUPPORT PIERS

All homes will require support piers with footings to be installed under the frame steel beams, marriage line (for multi-section homes), exterior walls and any location where heavy loads (i.e., water beds, whirlpool tubs, etc.) are located.

Large concentrated loads or point-loads occur on each side of the marriage line openings and sidewall openings and at the locations where the heavy loads occur. The piers that support these large concentrated loads are called 'Point-Load Support Piers'.


Large snow loads from the roof (40 PSF and larger) also require support piers to be installed below the marriage line and exterior walls to help support these large roof snow loads. The piers that support these large snow loads are called 'Perimeter Support Piers'

The frame steel beams which support both floor and roof loads must also be supported by support piers. The piers that support the frame steel beams are called 'Frame Support Piers'.

Highland Mfg. Co. may have provided a blocking diagram (or labels, tags, paint or other markings on the home) which indicate the required locations and/or loads for the exterior wall, marriage line, perimeter and/or frame support piers for your home. If so, the diagram, labels, tags or other marking provided on your home take precedence over the following directions provided in this manual.

The installer must create a sketch of the home that includes the exterior walls, the frame steel beams and the marriage line(s), if a multi-section home. This sketch will be used to locate each support pier and specify the size of the corresponding required footing. **Figure 6.5** is an example of such a support plan sketch.

*NOTE: When the roof load exceeds 40 psf, 'perimeter block piers' must also be installed below each sidewall and centered below the mate line. Piers should first be installed below each end of all opening for openings exceeding 48 inches in width (use standard pier sizing methods for these piers) and then additional 'perimeter block piers' should be installed within 2' of each end of the floor and at a maximum spacing not to exceed 8' o.c. between the opening piers. See Table C to determine the load requirements for these 'perimeter block piers'.*

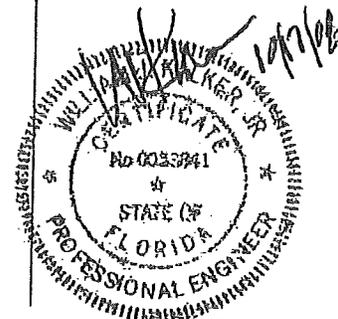

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
APPROVED  
02  
R A D

2/15/2011

300.021


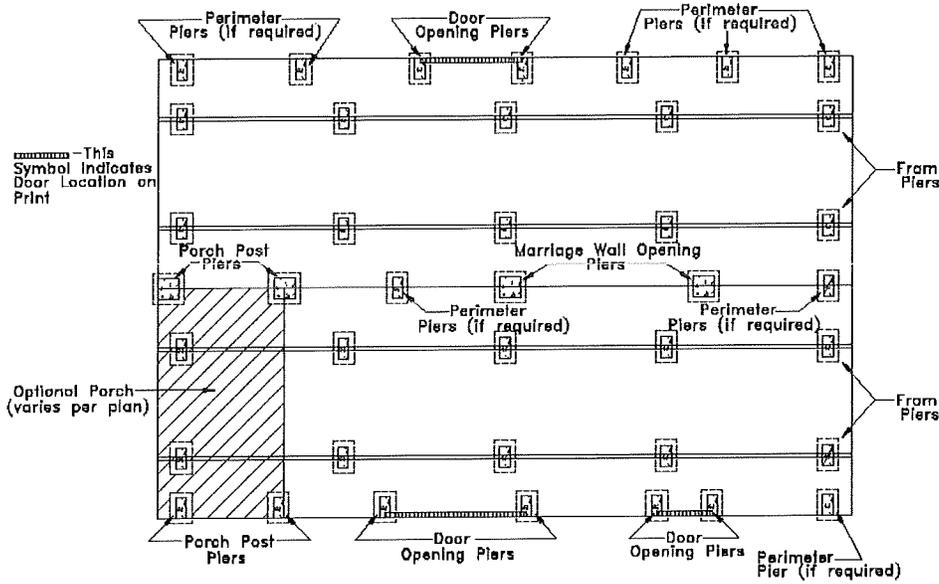


Figure 6.5 Example

As the location and load for each support pier is determined, note it on the support plan sketch. When selecting locations for supports, keep in mind that increasing the spacing between the frame and perimeter support piers will increase the loads which must be supported by those piers and the size of the footings required below the piers.

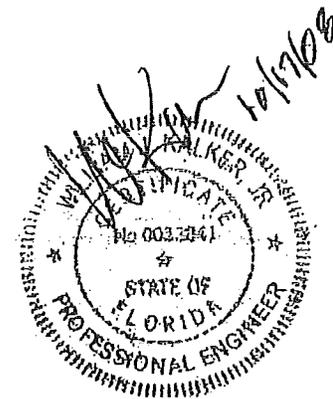

Available home sizes manufactured by Highland Mfg. Co.

Highland Call Size	Box Width	Roof Overhang	Frame Spacing
"14 Wide" (single wide)	13'-8"	6"	82 1/2"
"16 Wide" (single wide)	15'-0"	7"	82 1/2"
"24 Wide" (double wide)	23'-8" (11'-10" per half)	16"	82 1/2"
"28 Wide" (double wide)	27'-4" (13'-8" per half)	10"	82 1/2"
"32 Wide" (double wide)	29'-0" (14'-6" per half)	16"	82 1/2"

Note: Maximum overhang dimensions are shown – smaller overhangs may be constructed.

## STEP 1: DESIGN POINT-LOAD SUPPORT PIERS

Point-loads exist when a support column in the sidewall or marriage wall (or other load bearing wall) is installed on each side of an opening in the wall and supports the roof loads from the opening or when a large, heavy object is installed on the floor. In all such cases, the load must be transmitted down to the ground and/or a point-load support pier must be installed below the load. Point-load support piers must be installed as noted below:


- On both side of exterior doors in the sidewalls or other load bearing exterior walls (piers are not required at the exterior doors in non-bearing walls such as endwalls)
- On both sides of other openings in exterior bearing walls when the opening is four feet or greater in width. This requirement includes multiple window openings when any opening width is four feet or greater without wall framing studs separating the window openings.
- On both sides of marriage wall (on marriage line) openings when the opening is four feet or greater in width.
- At marriage wall (on marriage line) isolated columns.(i.e., columns with openings on each side) when either of the spans is an opening four feet or greater in width.
- Load-bearing porch posts.
- Under heavy (400 lbs or greater) items, such as heavy furniture, waterbeds, fireplaces and large fish tanks.

Mark the required point-load support locations on the sketch. Supports are not required where the manufacturer has reinforced the floor (i.e., with additional outriggers or floor joists) and when the reinforcement is noted in the documentation provided with the home. See Figure #7 and Figure #8 to identify typical point-load support pier locations.




# Install Footings

300.023

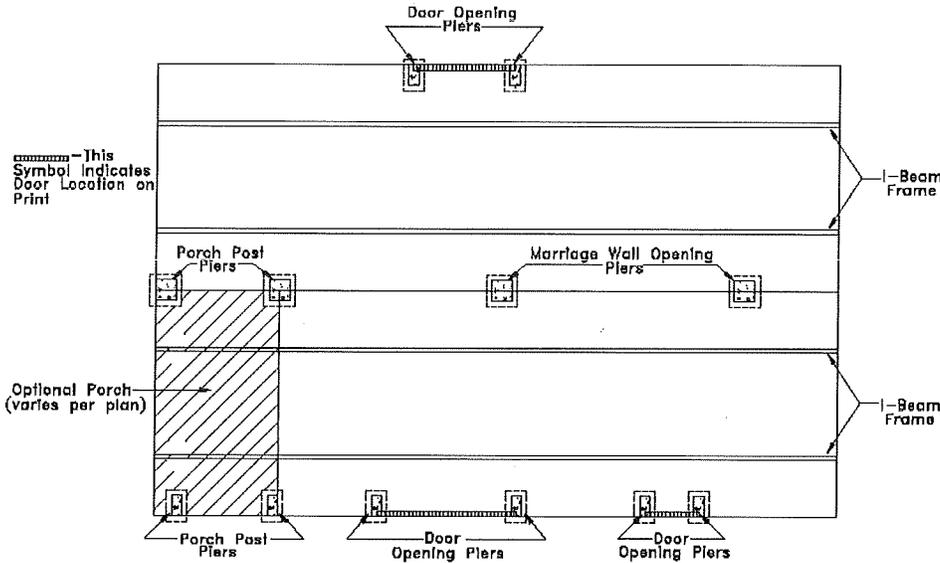


**Figure 7.** Typical point-load support locations

Note: Perimeter Support Pier and Frame Support Piers are not shown in this detail.

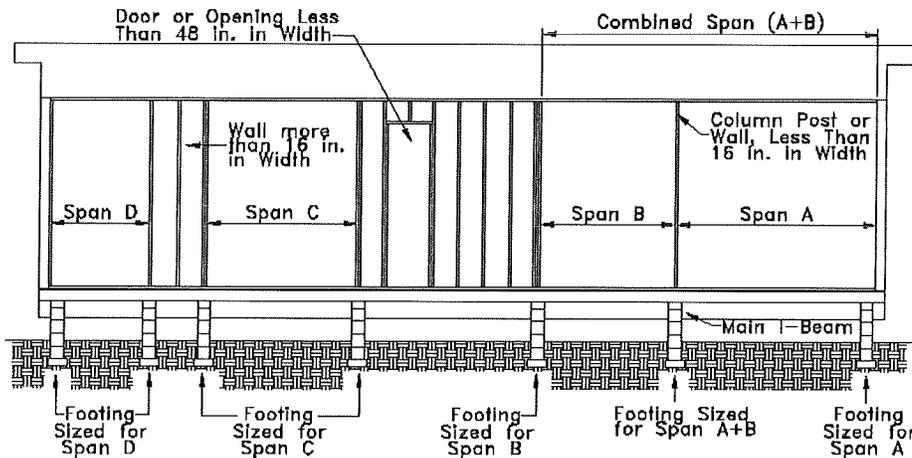

**Figure 8.** Typical point-load support locations along the marriage line – the point load schematic for the sidewalls would be similar

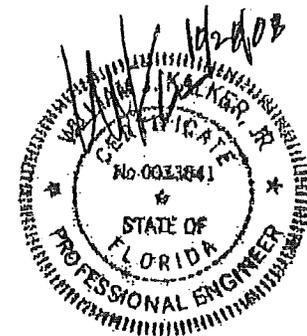

MODEL MANUFACTURER'S INSTALLATION MANUAL

CHAMPION

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS APPROVED  
02

2/15/2011

### CALCULATE POINT-LOAD SUPPORT PIER LOADS

Use **Table A** to determine the loads to be supported by the piers installed below each point-load. First find the portion of the Table with the appropriate roof load zone and building width. Then find the row(s) corresponding to the opening spans (see for Figure #8 for guidance on determining the span dimensions) which exist in your home to determine the point loads to be supported at each end of the opening.

If the support stud(s) are supporting loads from spans on both sides of the stud(s), compute the load from each span and add the respective loads together to determine the total load to be supported at that location.

The numbers in the columns under the "M" and "S" headings are the loads on the supports located on each side of the marriage line openings (i.e., marriage wall openings) and sidewall openings, respectively. Interpolation for openings between the values shown in the Table is permitted.

The load to be supported by the piers installed below large floor loads must be determined from the manufacturer of the item installed on the floor.

Note the required loads next to each point-load support pier on the support pier sketch.


TABLE A. POINT LOAD TABLE (POINT LOAD IS TO BE SUPPORTED BY FOOTING)

Location		Roof load zone and maximum section width											
		MIDDLE (30 PSF)						NORTH (40 PSF or 45 PSF)					
		14' or 16' Single Wide		24' or 28' Double Wide		32' Double Wide		14' or 16' Single Wide		24' or 28' Double Wide		32' Double Wide	
Span in feet	M	S	M	S	M	S	M	S	M	S	M	S	
4'	n/a	646	*1094	614	*1160	686	n/a	889	*1504	844	*1595	944	
8'	n/a	1293	*2187	1227	*2320	1373	n/a	1178	*3007	1687	*3190	1888	
12'	n/a	1939	*3281	1841	*3480	2059	n/a	2666	*4511	2531	*4785	2831	
16'	n/a	2586	*4374	2454	*4640	2746	n/a	3555	*6015	3375	*6380	3775	
20'	n/a	---	*5468	---	*5800	---	n/a	---	*7519	---	*7975	---	
24'	n/a	---	*6562	---	*6960	---	n/a	---	*9022	---	*9570	---	

M=Marriage  
S=Sidewall  
Loads shown are in pounds

(Reference: Calc #3 \*PG 1/6 - K-822)  
(Reference: Calc #2 \*PG 1/10 - K-821)

\* 'M' or marriage wall opening pier loads consider the loads from each module of multi-wide buildings

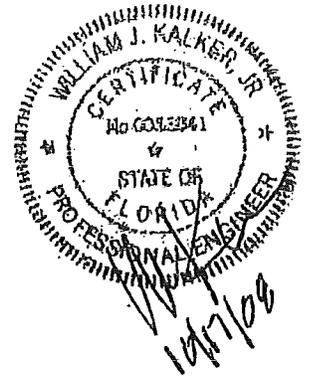

Determine from the data plate and/or other documents if the home requires perimeter blocking.


- ▶ If perimeter blocking is NOT required, go to **STEP 2, DESIGN FRAME SUPPORTS** (Homes Without Perimeter Blocking).
- ▶ If perimeter blocking is required, go to **STEP 3, DESIGN FRAME AND PERIMETER SUPPORTS** (Homes With Perimeter Blocking)

## STEP 2. DESIGN FRAME SUPPORT PIERS FOR HOMES WITHOUT PERIMETER SUPPORT PIERS

### DETERMINE LOCATIONS

All homes require regularly spaced supports to be installed below the main frame steel beams. Select a spacing to be used for these frame support piers and sketch them on the support plan. Keep in mind that frame support piers under homes with 10" or 12" deep steel beams cannot be spaced more than 10 feet on-center. Greater distances between the frame support piers will require larger footings to be installed below the piers.

Figure 9 shows typical frame support pier locations.

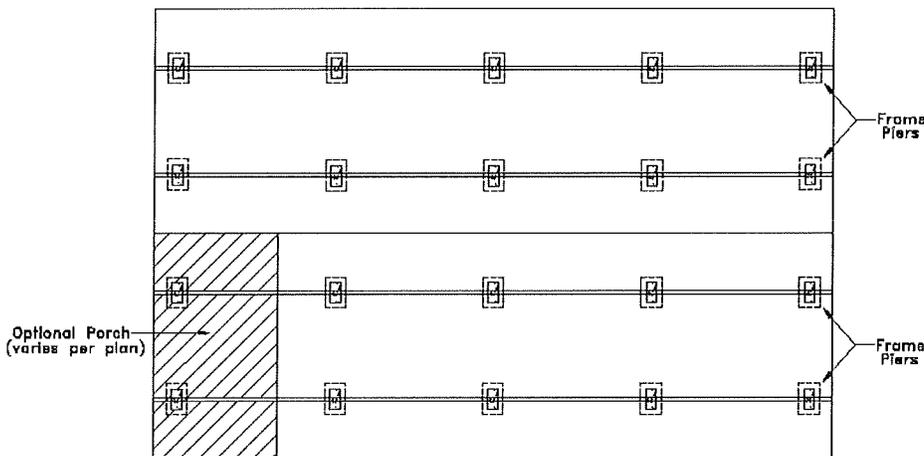

### Spacing frame supports.

There must be a support located near the end of each I-beam such that there is no more than 12 inches of beam past the edge of the support.

**Figure 9.** Typical support locations for homes not requiring regularly spaced perimeter supports


Note: Perimeter Support Piers and Point-Load Support Piers are not shown in this detail.

Note: Perimeter Support Piers and Point-Load Support Piers are not shown in this detail.

### CALCULATE FRAME SUPPORT PIER LOADS

Use **Table B** to determine the loads on frame support piers. Find the column with the appropriate roof load zone and building width. Find the row corresponding to the selected frame support (pier) spacing. The number in the intersecting cell is the load.

Loads on all frame support piers can be assumed to be equal if the support pier spacing's are equal. However, if different frame support pier spacing's are used than each support pier with a different spacing should have its load calculated separately.

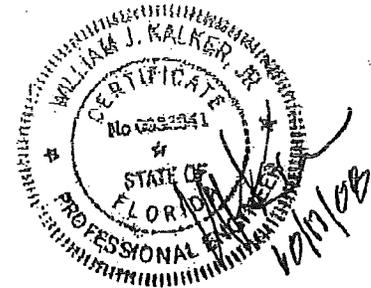

Note the location and load required of each support pier on the support pier sketch.

TABLE B. LOAD ON FRAME SUPPORT PIERS FOR HOMES NOT REQUIRING PERIMETER BLOCKING

Maximum Support Spacing	Roof load zone and maximum section width				
	MIDDLE (30 PSF)				
	14' Single Wide	16' Single Wide	24' Double Wide	28' Double Wide	32' Double Wide
4'	2768	3021	2572	2822	3051
6'	4153	4531	3858	4233	4576
8'	5537	6042	5144	5644	6102
10'	6921	7552	6430	7056	7627

Loads shown are in pounds (Reference: Calc #1 \*PG 1/10 - K-820)

### STEP 3. DESIGN FRAME SUPPORT PIERS AND PERIMETER SUPPORT PIERS FOR HOMES WITH PERIMETER SUPPORT PIERS

#### DETERMINE SUPPORT PIER LOCATIONS

When the roof snow load equals or exceeds 40 PSF, Perimeter Support Piers must be installed below the load bearing exterior walls and centered below the mate lines. This requirement for Perimeter Support Piers will be indicated on the data plate and/or documents included with the home.

Perimeter Support Piers must be installed within 2' of each end of the floor and at a spacing not to exceed 8 feet on-center. Homes which required a Perimeter Support Pier spacing less than 8 feet will have the maximum spacing indicated on the data plate and/or other documents included with the home.

Perimeter Support Piers are only to be installed below the bearing walls. Bearing walls are those walls that support the ends of roof trusses or rafters (typically sidewalls and marriage walls are bearing walls, but not the endwalls of main units or non-load bearing sidewalls in tag units).


To minimize the number of required Perimeter Support Piers, first install the Point-Load Support Piers (use method noted earlier in the Section) and then install the required Perimeter Support Piers at each end of the home. A Point Load Support Pier installed within 2 feet of the end of the home will take the place of the required Perimeter Support Pier (an additional Perimeter Support Pier will not be required at that location)

Between these piers, install additional Perimeter Support Piers at a spacing not exceeding the maximum allowable spacing described above. Note, Perimeter Support Piers are not required in areas where a marriage wall opening occurs and/or where the roof loads are not transmitted to the floor construction. The figure below identifies



#### Spacing frame supports.

There must be a support located near the end of each I-beam such that there is no more than 12 inches of beam past the edge of the support.

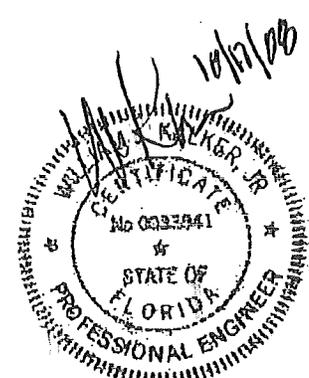


FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS APPROVED  
R.A.D.C. 02

2/15/2011

typical support pier locations for homes requiring perimeter support piers..

300.027

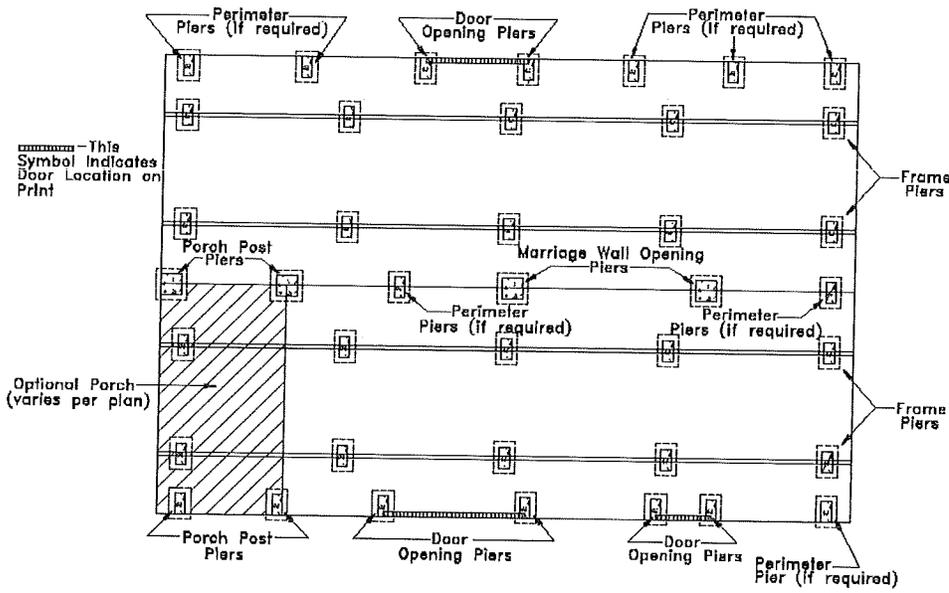

**Figure 10.** Typical support locations for homes requiring perimeter supports

Note: Perimeter Support Piers, Point-Load Support Piers and Frame Support Piers are shown in this detail


### CALCULATE SUPPORT PIER LOADS

Use **Table C** to determine the loads on the Frame Support Piers and Perimeter Support Piers (below the sidewalls and mate lines) for homes which require Perimeter Support Piers. Find the column with the appropriate roof load zone and building width. Find the rows corresponding to the selected support (pier) spacing. The values in the intersecting cells are the loads to be supported by the Frame Support Piers, Sidewall Perimeter Support Piers ('Perimeter' row) and Marriage Wall Perimeter Support Piers ('Marriage' row).

Loads on support piers of a given type (Frame, Sidewall Perimeter or Marriage Wall Perimeter) can be assumed to be equal if the support pier spacing's are equal. However, if different support pier spacing's are used then each support pier with a different spacing should have its load calculated separately.

Note the location and load required of each support pier on the support pier sketch.

MODEL MANUFACTURER'S INSTALLATION MANUAL

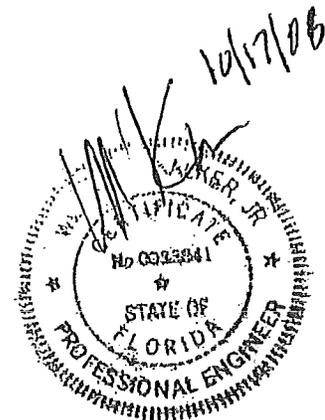

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS APPROVED  
 RAD 02


2/15/2011

TABLE C. LOAD ON FRAME AND PERIMETER SUPPORTS FOR HOMES REQUIRING PERIMETER BLOCKING

		Roof load zone and maximum section width					
		NORTH (40 PSF or 45 PSF)					
		14' Single Wide	16' Single Wide	24' Double Wide	28' Double Wide	32' Double Wide	
Maximum Support Spacing	4'	Frame	3209	3506	3007	3282	3566
		Perimeter	1615	1778	1596	1688	1888
		Marriage	n/a	n/a	2603	3007	3190
	6'	Frame	4813	5258	4511	4924	5348
		Perimeter	2422	2686	2392	2532	2832
		Marriage	n/a	n/a	3904	4511	4785
	8'	Frame	6418	7011	6014	6565	7131
		Perimeter	3230	3556	3190	3374	3776
		Marriage	n/a	n/a	5205	6015	6380

Loads shown are in pounds

(Reference: Calc #1 \*PG 1/10 - K-820)  
 (Reference: Calc #2 \*PG 1/10 - K-821)  
 (Reference: Calc #3 \*PG 1/10 - K-822)

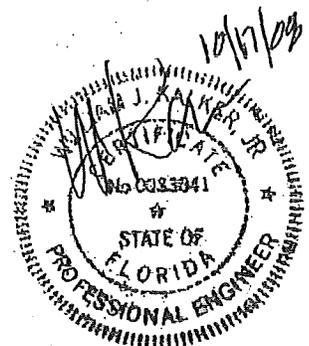

## STEP 4. SELECT FOOTING MATERIAL

Select one of the products and materials from Table 5 for the footings.



FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS APPROVED  
 02  
 2/15/2011

**TABLE 5. FOOTING MATERIALS**

Material	Appropriate Use	Specification
Poured concrete	All soil types	Minimum 6" thick poured-in-place concrete pads, slabs, or ribbons with at least a 28 day compressive strength of 3,000 psi. Cast-in-place concrete footings may also require reinforcing steel based on acceptable engineering practice, the design loads, and site specific soil conditions.
Pre-cast concrete	All soil types	Minimum 4" thick nominal precast concrete pads meeting or exceeding ASTM C 90-02a. Standard Specification for Load Bearing Concrete Masonry Units, without reinforcement, with at least a 28-day compressive strength of 2,500 psi.
ABS plastic	Stable soils	Use in accordance with the pad manufacturer's instructions. Must be certified for use in the soil classification at the site, listed and labeled for the required load capacity.
Proprietary systems	Consult system manufacturer	Consult system manufacturer.

**Will footings be concrete?**

- ▶ **YES, go to STEP 5, SIZE FOOTING,**
- ▶ **NO, see footing system manufacturer's instructions. For on-grade footings, the ground moisture barrier may be installed now – see Complete Exterior Work, STEP 2, INSTALL GROUND MOISTURE RETARDER (p. 106) then go to Set the Home (p. 37).**



**Frost protection.** When selecting footing materials, bear in mind the need for frost protection. Not all footing materials are suitable for freezing climates..

## STEP 5. SIZE FOOTINGS

Once the load on the footing and the soil-bearing capacity are known, calculate the size of each footing as follows:

1. From Table 6 determine if the pier is to be of single-stack blocks (8 inch x 16 inch) or double-stack blocks (16 inch x 16 inch) pier.
2. Locate the group of rows in Table 7 with the soil-bearing capacity determined in **Prepare the Site, STEP 5. DETERMINE SOIL-BEARING CAPACITY AND FROST LINE** (p. 16). Use the next lowest value if the exact value does not appear.
3. Read across the table to determine the minimum required footing area and the minimum footing thickness for the corresponding footing type (single or double-stacked blocks).
4. The required footing size may be changed by selecting another support spacing. (Table A, B, or C)

**TABLE 6. PIER CONFIGURATION**

Pier location	Height	Configuration	Maximum load
Frame	Less than 36 in (except corner piers more than 3 blocks high)	Single-stack blocks with long side perpendicular to I-beam	8,000 lbs.
	Between 36 in and 67 in and corner piers over 3 blocks high	Double, interlocked blocks	16,000 lbs.
	Over 67 in	Double, interlocked blocks	16,000 lbs.
Perimeter	54 in or less	Single-stack blocks with long side parallel to perimeter rail (rim joist)	8,000 lbs.
Marriage line	54 in or less	Single-stack blocks with long side perpendicular to the marriage line	8,000 lbs.
Perimeter and Marriage	Between 54 in and 80 in	Double, interlocked blocks	16,000 lbs.




**TABLE 7. FOOTING DIMENSIONS**

Soil Bearing Capacity	Minimum Footing Area (sq. in.)	Minimum Footing Dimensions (in.)	8 in. x 16 in. pier (single-stack blocks)		16 in. x 16 in. pier (double-stack blocks)	
			Unreinforced cast-in-place min. thickness (in.)	Maximum footing capacity (lbs)	Unreinforced cast-in-place min. thickness (in.)	Maximum footing capacity (lbs)
1000	256	16 x 16	6	1680	6	1680
	384	24 x 16	6	2530	6	2530
	576	24 x 24	8	3600	6	3800
	1024	32 x 32	12	6040	8	6400
	1296	36 x 36	14	7420	10	7870
	2304	48 x 48	20	8000	16	12800
1500	256	16 x 16	6	2570	6	2570
	384	24 x 16	6	3860	6	3860
	576	24 x 24	8	5600	6	5800
	1024	32 x 32	12	8000	8	9950
	1296	36 x 36	-	-	10	12370
	2304	48 x 48	-	-	16	16000
2000	256	16 x 16	6	3406	6	3460
	384	24 x 16	6	5200	6	5200
	576	24 x 24	8	7600	6	7800
	1024	32 x 32	12	8000	8	13510
	1296	36 x 36	-	-	10	16000
	2304	48 x 48	-	-	-	-
2500	256	16 x 16	6	4350	6	4350
	384	24 x 16	6	6530	6	6530
	576	24 x 24	8	8000	6	9800
	1024	32 x 32	-	-	8	16000
	1296	36 x 36	-	-	-	-
	2304	48 x 48	-	-	-	-
3000	256	16 x 16	6	5240	6	5240
	384	24 x 16	6	7860	6	7860
	576	24 x 24	8	8000	6	11800
	1024	32 x 32	-	-	8	16000
	1296	36 x 36	-	-	-	-
	2304	48 x 48	-	-	-	-
4000	256	16 x 16	6	7020	6	5240
	384	24 x 16	6	8000	6	7860
	576	24 x 24	-	-	8	11800
	1024	32 x 32	-	-	10	16000
	1296	36 x 36	-	-	-	-
	2304	48 x 48	-	-	-	-

Note: The capacity values listed have been reduced by the dead load of the concrete footing.

Design footings to comply with the following additional requirements:

- Design each footing at least slightly larger than the base of the pier it supports.

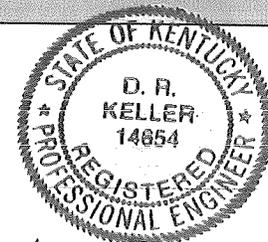

*D. R. Keller*




2/15/2011

MODEL MANUFACTURER'S INSTALLATION MANUAL

slightly larger than the minimum required area to allow slight adjustment of the pier location during home installation.

- Design footings with a footing extension (projection beyond the base of the pier) no greater than the footing thickness. (Figure 11) Increase footing thickness if necessary.

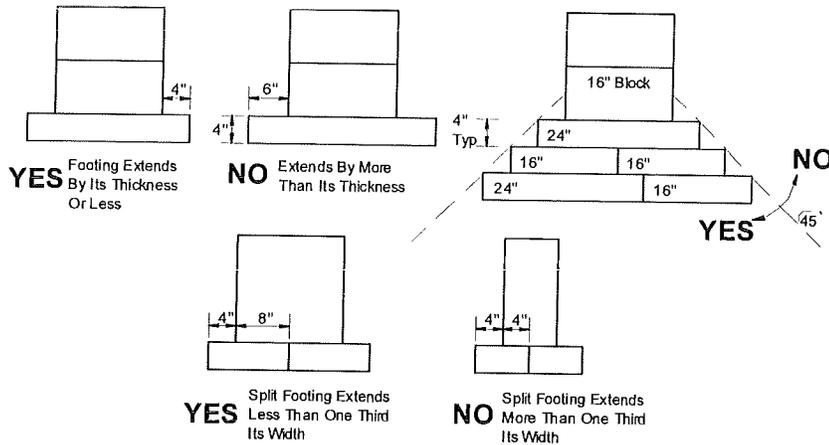

**Figure 11.** Maximum footing extensions

- The footing sizes shown are for square pads and are based on the surface area (square inches). Design non-square footings such that the area and depth is equal to or greater than the area and depth of the square footing shown in Table 7, and the distance from the edge of the pier to the edge of the footing is not more than the thickness of the footing.
- For four-inch thick unreinforced precast concrete footings, use the minimum footing size for the six-inch cast-in-place footing from Table 7.

## STEP 6. INSTALL FOOTINGS

Construct the footings as follows:


- Maintain the distance between adjacent piers to within 10% of the tabulated spacing and so the average distance between any adjacent spans is equal to or less than the tabulated spacing.
- Whenever possible, place point load supports directly under the required locations. If plumbing, electrical, mechanical equipment interferes, place supports no more than 6 inches in either direction of the support point.
- Recess perimeter blocking supports and perimeter point load supports no more than 10 inches from the edge of the floor with added support as shown in Figure 12.



**Placing Concrete anchors.**  
If anchors will be placed in concrete, follow instructions in **Install Stabilizing System** (p. 71) to determine anchor layout. Either place anchors immediately after the concrete has been poured or drill them in after the concrete has set.

# Install Footings

300.032

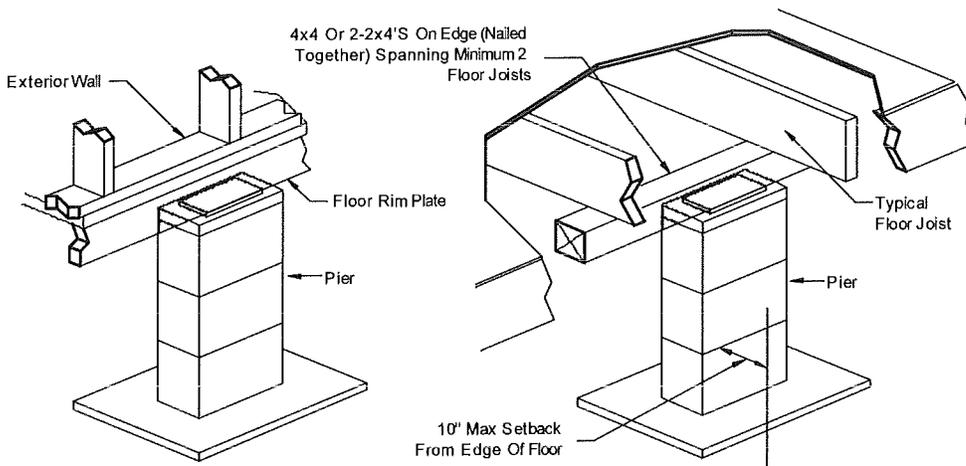

**Figure 12.** *Perimeter supports*

- If footings are rectangular, orient them so that the long side is perpendicular to the home's I-beam.
- Place the bottom of footings on firm, undisturbed soil or on controlled fill, free of grass and organic matter.
- In freezing climates protect footings from the effects of frost heave in accordance with any LAHJ requirements (see **Prepare the Site**, p. 14). Place the bottom of the footings below the frost line (insulated foundations and monolithic slabs are other frost protection options not covered in this manual).
- Make sure the top surface of the footing is level, flat, and smooth.
- In accordance with the American Concrete Institute publication ACI-308, maintain curing measures before construction or installation onto the concrete footing begins, until a minimum of 70% of the specified 28-day compressive strength has been achieved. The ACI recommended time to attain this level of strength is seven days for ASTM C150 Type 1 mixtures and 10 days for Type II mixtures. Full design live and dead loads may not be applied until the 28-day duration has elapsed for achieving full strength.



**Excavation.** If excavation is required, mark the footing locations on the ground with stakes before beginning to dig.

▶ go to **Set the Home** (p. )

# Install Footings

300.033

MODEL MANUFACTURER'S INSTALLATION MANUAL

**CHAMPION** 

R A D C C  
FEDERAL MANUFACTURED  
HOUSING CONSTRUCTION  
& SAFETY STANDARDS  
APPROVED  
02  
2/15/2011

January 31, 2011

# Install Footings

300.034

CHAMPION 

January 31, 2011

RADCO FEDERAL MANUFACTURED  
HOUSING CONSTRUCTION  
& SAFETY STANDARDS  
02  
APPROVED  
2/15/2011

## Construct Foundation

(FOR HOMES WITH LOAD-BEARING PERIMETER WALL)

Crawl space access and ventilation, shall be designed per IRC 408.

This chapter provides guidelines and recommendations for the design and construction of a basement or crawlspace foundation using a load-bearing perimeter wall. A load-bearing perimeter wall foundation system uses a wall along the outer edge of the home to support the home's outside walls. This perimeter support works with interior supports such as piers, columns, and cross beams that support the home's frame and, if multi-section, marriage line.

### Follow the Steps below:

- ▼ **STEP 1. OBTAIN A FOUNDATION DESIGN** (p. 35)
- ▼ **STEP 2. EXCAVATE** (p. 35)
- ▼ **STEP 3. CONSTRUCT THE FOOTING OR SLAB** (p. 35)
- ▼ **STEP 4. CONSTRUCT THE PERIMETER WALL** (p. 35)
- ▼ **STEP 5. INSTALL INTERIOR SUPPORTS** (p.36)
- ▼ **STEP 6. WATERPROOF FOUNDATION WALL** (p. 36)
- ▼ **STEP 7. BACKFILL AND GRADE** (p. 36)

### STEP 1. OBTAIN A FOUNDATION DESIGN

If a load-bearing perimeter wall foundation design has not been provided by the home manufacturer, it is the responsibility of the retailer and/or home owner to provide a design approved by an engineer or architect, licensed in the state where the home will be installed. The approved design must comply with the LAHJ regulations for foundation design, waterproofing, and drainage, and the following:

- The foundation perimeter bearing wall must be supported with a concrete slab or continuous strip footing around the perimeter of the home. Interior piers must be supported by a slab or footings. If footings are used under interior piers, they may be designed as in **Prepare Footings**, p. 25
- Slabs must extend to the edges of the home.
- Footings and slabs must be protected from the effects of frost heave by extending the footings to or below the frost line or by using a frost protected shallow foundation design.

### STEP 2. EXCAVATE

Excavate for the foundation, properly disposing of the earth that is not needed for backfill or site-grading purposes.

### STEP 3. CONSTRUCT THE FOOTINGS OR SLAB

Construct the foundation according to the approved design, including the perimeter foundation wall, drainage system, footing(s), and/or slab.

### STEP 4. CONSTRUCT THE PERIMETER WALL

Unless the approved design requires otherwise, construct the perimeter wall with mortared and reinforced concrete blocks or reinforced poured-in-place concrete. Install reinforcement according to the approved design or LAHJ. Install ventilation and access openings according to the approved design, or if not specified, according to the requirements in **Complete Under the Home, STEP 3 INSTALL SKIRTING** (p. 107).

When constructing pockets for an H-beam system, measure the beam depth and



#### Using engineered designs.

This section is NOT intended to provide a complete design for a buildable foundation. A complete design must be obtained that is suitable for the local area and sealed by a professional engineer or registered architect, licensed in the state.

#### Foundation ready home.

Make sure that homes to be installed on a basement or a crawlspace have been ordered with a recessed frame or as foundation-ready, where the frame is designed to avoid interference with the foundation wall.

#### Checking the water table.

For basements, check for a high water table. The water table may vary seasonally or based on weather conditions. A geologist can perform an algae test to determine the water table

CHAMPION


FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
APPROVED  
02  
2/15/2011

# Construct Foundation

300.036

locate the pockets carefully. It is critical that when the home's frame rests on top of the H-beam, the perimeter of the floor rests squarely on the foundation wall sill plate (**Figure 13**). Leave room for a two-inch nominal, pressure treated wood spacer on top of the wall pockets (to prevent corrosion, the steel beams must not be in direct contact with concrete). Leave at least one inch for thermal expansion at the ends of the beams and maintain a minimum of two inches of bearing area for the beams in the pockets (yielding a minimum pocket depth of three inches).

Bolt a pressure treated wood sill plate (minimum 2 x 6) to the top of the foundation wall. If the home's siding cannot be nailed through, use a 2 x 10 sill plate that extends into the foundation 1-1/4 inches (**Figure 14**). The home can then be connected to the foundation by fastening the sill plate into the floor joists from below. Connect the home to the foundation according to the approved design. Recess nuts into the sill plate and cut off the ends of bolts so they do not project above the sill plate and interfere with the placement of the home.

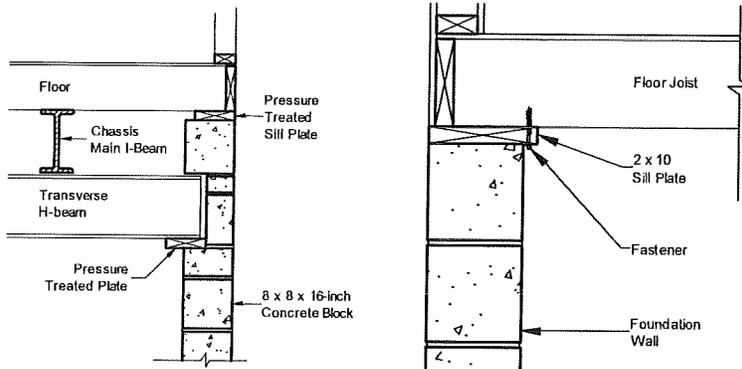

level. The foundation design must account for a high water table.

**Level the wall.** Make sure the foundation is level and straight with no more than a 1/4 inch vertical variation over the entire foundation and no more than 1/8 inch vertical variation over any two-foot length.

**Check for Plates.** When using an H-beam system, check and compensate for reinforcement plates that add thickness to the chassis beam at axle locations.

**Figure 13.** H-beam installation

**Figure 14.** Connection using 2 x 10 sill plate



### Limits of excavation.

When a crane will be used, excavate no more than two feet outside the foundation perimeter. Unexcavated ground will provide a more stable base for the crane.

**Footing heights.** Pour footings to a height that will reduce the need to cut blocks or shim when building peri-meter walls and piers.



**Backfilling.** Backfill against basement walls only after the home is connected to the foundation or the basement walls may deflect inward or collapse.

## STEP 5. INSTALL INTERIOR SUPPORTS

Install piers, columns and H-beams to support the interior of the home according to the approved design.

## STEP 6. DAMP PROOF FOUNDATION WALL

Damp proof the foundation wall no less than up to the height of the planned backfill.

Is this a basement foundation?

- ▶ YES, go to Set the Home, (p. 37).
- ▶ NO, go to STEP 7. BACKFILL AND GRADE, (p. 38)

## STEP 7. BACKFILL AND GRADE

Backfill against the foundation wall to the height of the damp proofing. Take care to not damage the drainage system. Grade the fill as per **Prepare the Site** (p. 14).

Does the approved foundation design call for ground anchors?

- ▶ YES, go to Install Stabilizing Systems, (p. 71).
- ▶ NO, go to Set the Home, (p. 37).

# Set the Home

This chapter describes the process of installing the first section of the home (for single section homes this is the only section) onto the foundation.

## Follow the Steps below:

- ▼ **STEP 1. PREPARE FOR SET** (p.37)
- ▼ **STEP 2. POSITION HOME SECTION** (p.37)
- ▼ **STEP 3. LIFT HOME** (p. 37)
- ▼ **STEP 4. CONSTRUCT PIERS** (p. 39)

### STEP 1. PREPARE FOR SET

Before beginning the home set, complete the following:

- Confirm that the site is properly cleared and graded (see **Prepare the Site**, p. 14).
- Ensure that the footings are in place and properly located.
- Install any utilities that will be difficult to install (e.g. those below grade beneath the home) after the home is in place.
- Secure or remove from the home and properly store all ship loose items (refer to shipping documents for items shipped with the home).
- Inspect the home interior, exterior and all provided materials, appliances, and equipment. Immediately report any damage or shortages to the manufacturer.
- The ground moisture retarder may be installed now or after the home is complete. See **Complete Exterior Work, STEP 2. INSTALL GROUND MOISTURE RETARDER** (p. 106) for requirement and then return here.

For perimeter bearing wall foundations:

- Check that the length and width of the home match with the foundation walls.
- Check that the two main diagonal measurements of the foundation are equal.
- Check that the foundation walls and other support points are within 1/4 inch of level overall and within 1/8 inch of level within any four foot distance.
- For multi-section homes, check that each pair of diagonal measurements for each portion of the foundation corresponding to a home section are equal.
- For multi-section homes, find the electrical bonding lugs on the front or rear outriggers. Reverse them to the inside of the outrigger using star washers so they will be accessible after the home is placed on the foundation walls.
- If using an H-beam system, remove the frame's shackle hanger if it will interfere with proper placement of the beam.

### STEP 2. POSITION HOME SECTION

Position the home section in its final location (if possible, move the heaviest section of the home into place first). Then place materials needed to construct support piers near their final locations under the home as determined in **Install Footing Section**.

### STEP 3. LIFT HOME

There are three primary methods available to place the home on the foundation: jacking, rolling and craning. Jacks, often with roller systems, are typically used for pier and anchor foundations; roller systems are commonly used for crawlspace foundations with load-bearing perimeter walls; and cranes are most commonly used for basement



**Clearances under the home.** After the home is leveled, the resulting distance between the bottom of the entire chassis main frame beam and the ground must be no less than 12 inches.

**Utilize proper cribbing.** Manufactured homes weigh several tons. No one should be under the home (whether it is moving or stationary) unless proper cribbing is in place (**Figure 15**). Failure to utilize proper cribbing may result in serious injury or death.



**Leveling during jacking.** Keep the home's floor as level as possible during jacking. Twisting or warping the floor can damage the structure and finishing. Use as many jacks as necessary to keep the floor flat and level.

CHAMPION 

FEDERAL MANUFACTURED  
HOUSING CONSTRUCTION  
& SAFETY STANDARDS  
APPROVED  
02  
R A D

2/15/2011

foundations.

## JACKS


If jacks are to be used, comply with all jacking safety precautions and the procedure below. Lifting the home with jacks involves potential risks and must be done with utmost care and caution. Failure to follow jacking warnings and procedures may result in serious injury or death. Please read the Jacking Safety Precautions before lifting the home with jacks.

### JACKING SAFETY PRECAUTIONS

- No one should be under the home's I-beams while the jacks are being operated or while the home is supported only on the jacks.
- Use jacks only for raising the home. Do not rely on the jacks to support the home.
- If possible, raise the home only on one side so that the other side is in contact with the ground. Leave the hitch connected to the vehicle or other stabilizing equipment.
- Obey all OSHA regulations.
- Make sure adequate safety cribbing (**Figure 15**) is in place whenever the home is placed on jacks.
- Use a minimum of two commercial quality jacks, each with a rating of at least 12 tons.
- Jack only on the main chassis I-beam, centering jacks directly under the beam.
- Do not jack on a seam (joint between flanges of twin I-beams).
- To distribute the concentrated loads from jacks to I-beam, place a minimum 3/8-inch thick steel plate, a C-channel, a 1½-inch thick hardwood block or a commercial jacking plate, between the main chassis I-beam and the jack head.
- Locate the jack base on firm ground. Never jack on freshly disturbed soil or where an underground sewer pipe may be located.
- Use a firm support under the jack base to prevent tipping or settling of the jack. A minimum 16" x 16" or larger wood or rigid fiberglass pad is recommended. Never use concrete blocks as a support for a jack.

Follow the jacking sequence outlined below to avoid overstressing structural members:

1. **Block wheels.** Block the wheels so the house does not roll.
2. **Install cribbing.** Install safety cribbing (**Figure 15**).

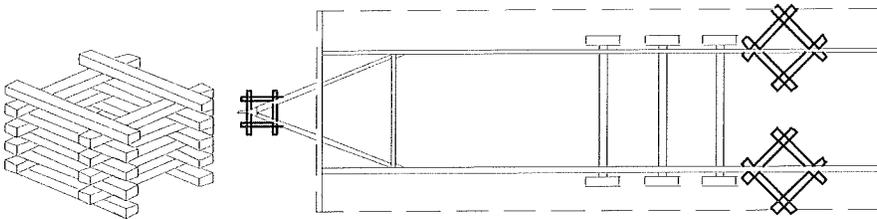

3. **Level lengthwise.** Locate one jack at the hitch and level the section lengthwise (such that the front and rear of the section are at the same height).
4. **Locate frame jacks.** Place a minimum of one jack just forward of the first spring hanger and another just behind the last spring hanger of the I-beam on the side of the home that is lowest (making sure not to place jacks where the piers will go). Place jacks no more than 20 feet apart and no more than 20 feet from each end of the I-beam.
5. **Lift the home.** Operating the jacks simultaneously (or sequentially in very small increments), lift the home section until it is slightly higher than the final desired pier height.

**Figure 15.** Stack 4" x 6" by 5' long timbers as shown to form safety timbers. Place safety timbers under home behind axle area and under hitch.

300.038

## ROLLER SYSTEMS

When using a roller system, comply with the equipment manufacturer's directions and the following sequence:

1. **Establish staging area.** Establish a staging area directly adjacent to one or both sides of the foundation.
2. **Setup rollers.** Set up the roller system according to the equipment manufacturer's directions.
3. **Fasten bump blocks.** Temporarily fasten wooden bump blocks on the sill plates at the ends of the foundation to stop the home from rolling at the desired location.
4. **Roll home.** Roll the home into place over the foundation.
5. **Remove bump blocks.** Remove the blocks before installing the next section of a multi-section home.

## CRANES

When using a crane, follow these guidelines:

- Position the home section(s) and crane (taking the boom reach into consideration) such that they do not have to be repositioned during the set.
- Use enough properly sized straps to maintain balance of the home and to prevent damage to the structure.
- Place straps under walls or posts, including temporary posts used to support the opening. Do not position lifting straps under marriage wall openings.
- Use a properly sized spreader bar to maintain a vertical lift, to avoid placing compression forces on the eaves and to reduce any tendency to slip.
- Connect a rope to at least one point on the home so it can be controlled while aloft.
- Make provisions to retrieve the straps/cables after the home is set. If using a cradle system, notch the sill plate where the straps will fall. For a sling system, notch and reinforce the home's rim joist to keep the strap from slipping and allow the strap to be removed after the home is set.
- Always set the home section farthest from the crane first so that subsequent section(s) need not be lifted over previously set sections.

Have the interior foundation supports already been designed and installed as part of an approved load-bearing perimeter wall foundation?

- ▶ YES, go to Complete Multi-Section Set, (p. 44) or go to Connect Utilities, (p. 87) for single section homes.
- ▶ NO, go to STEP 4. INSTALL PIERS, (p. 39).

## STEP 4. CONSTRUCT PIERS

For the side of the home section that is up on jacks, place piers on footings or pads following the home manufacturer's blocking plan (or tags). If no plan was provided, use the support plan developed in **Install Footings** (p. 20). Start at one end of the home section and work toward the other noting the required pier material specifications and procedure described below.

Construct piers so as to provide a stable foundation for the home using materials listed in the specifications box below and based on the location of the pier and its height as measured from the top of the footing or pad to the top of the cap. See **Table 9** for pier construction requirements.



**Designing piers.** Incorrect size, location or spacing of piers may result in serious structural damage to the home. Install piers at all required locations. Failure to do so may lead to sagging floors, walls, and roofs, and could void the home's warranty.

**TABLE 8. PIER MATERIAL MINIMUM SPECIFICATIONS**

Component	Specification
Concrete Block	Nominal dimensions of at least 8" x 8" x 16"; minimum load 8,000 lbs; conforming to ASTM designation C90, grade N.
Caps	Solid masonry (nominal 4" x 8" x 16" pre-cast concrete without reinforcement); pressure treated lumber (nominal 2" x 8" x 16"); or steel (minimum 1/2" thick, corrosion protected by a min. of a 10 mil coating of an exterior paint or equivalent).
Spacers	Nominal 2" thick boards.
Shims (also called wedges)	Hardwood, minimum 4" width by minimum 6" length by maximum 1" thick (nominal); plastic must be listed with maximum load capacity; used in pairs.
Commercial metal or pre-cast concrete piers	Available in various sizes stamped with maximum load capacity and listed or labeled for the required vertical load capacity, and where required by design, for the appropriate horizontal load capacity. Metal or other manufactured piers must be provided with protection against weather deterioration and corrosion at least equivalent to that provided by a coating of zinc on steel of .30 oz per sq. ft of surface coated.
Pressure treated wood	With a water borne preservative, in accordance with AWPA Standard U1-04 for Use Category 4B ground contact applications.


**TABLE 9. PIER CONSTRUCTION**

Pier location	Height	Configuration	Maximum offset top to bottom	Maximum load	Mortar and reinforcement
Frame	Less than 36 in (except corner piers more than 3 blocks high)	Single-stack blocks with long side perpendicular to I-beam	1/2"	8,000 lbs.	Not required
	Between 36 in and 67 in and corner piers over 3 blocks high	Double, interlocked blocks	1" (1/2" up to 36" high)	16,000 lbs.	Not required
	Over 67 in	Designed by a registered engineer or registered architect			
Perimeter	54 in or less*	Single-stack blocks with long side parallel to perimeter rail (rim joist)	1/2" up to 36" high, 1" over 36" high	8,000 lbs.	Not required
Marriage line	54 in or less*	Single-stack blocks with long side perpendicular to the marriage line	1/2" up to 36" high, 1" over 36" high	8,000 lbs.	Not required


\* Construct perimeter and marriage line piers over 54 inches according to the requirements for frame piers of the same height.

- 1. Prepare footing surface.** Make sure the footing surface upon which the pier sits is flat and smooth. Before placing the pier on the footing, clean dirt, rocks, or other material off the surface of the footing. For cast-in-place concrete footings, if the footing surface is uneven, create a level, flat surface by placing a treated board on the footing and mortaring on the first block (or manufactured pier base), or by placing the first block (or manufactured pier base) on a layer of premix dry sand mortar.
- 2. Stack blocks.** Stack concrete blocks with their hollow cells aligned vertically. When piers are constructed of blocks stacked side-by-side, orient each layer at right angles to the previous one (**Figure 16**) and plan blocks so that split caps will be perpendicular to the blocks they rest on and to the I-beam.

Figure 16. Frame pier construction

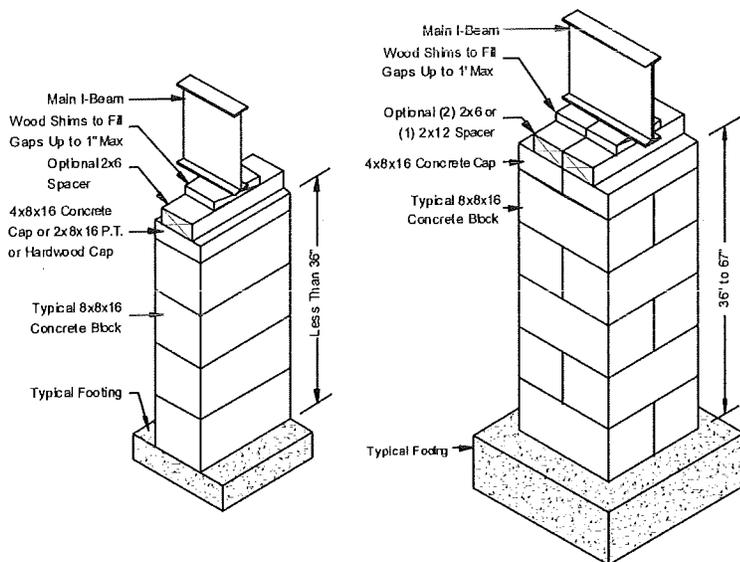

3. **Cap piers.** Place a cap on hollow block piers to evenly distribute the structural load. Use caps the same length and width as the piers they rest upon. When using split caps on double-stacked block piers, install the caps with the long dimension perpendicular to the joint in the blocks below and to the main I-beam.
4. **Install shims.** Use shims to level the home and fill any gaps between the base of the I-beam and the top of the pier cap. Always use shims in pairs (Figure 17). Drive them in tightly so they do not occupy more than one inch of vertical space. When the space to be shimmed is greater than one inch and less than the minimum thickness of available caps or concrete blocks, use hardwood dimensional lumber (two inches maximum thickness) or 2" or 4" thick concrete block. For split caps, install shims and dimensional lumber/blocks over each individual cap.

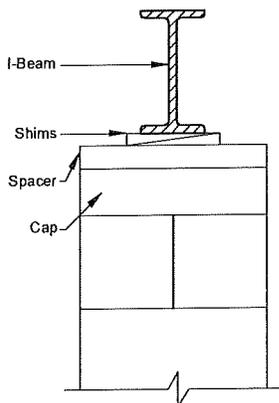

5. **Set up level.** Set up a water level with the fluid level at the desired height of the main piers. Carefully lower the side of the section down onto the leveled piers, adjusting the final height with shims.



**Curing time of mortar.**

Where wet mortar is used to construct or level piers, allow it to cure to at least 80% of strength capacity (usually requiring 96 hours) before setting the home.

Figure 17. Correct shim placement




**Dimensions of masonry perimeter walls.** If using a masonry perimeter enclosure, calculate pier heights so that the enclosure can be built using standard unit dimensions (without cutting).

## USING A WATER LEVEL

A water level is a standard device for leveling the home. The level consists of the following components:

- One container (five gallon bucket or one gallon jug).
- 150 feet of 1/2 inch diameter plastic tubing.
- Fittings for container to tubing.
- Valve for terminal end of tubing.
- Liquid for system: colored water in warm climates, windshield washing fluid in cold climates.

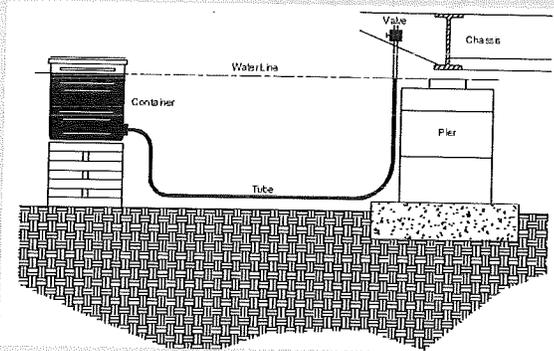

### How to use a water level

- Position level.** Position the level such that it can reach all piers.
  - Place container.** Place the container so that the fluid in the container is at the same level as the desired level of the top of the supports under the home, allowing for any bracing below the level of the I-beams.
  - Uncoil tubing.** Uncoil the tubing and fill with fluid, taking care not to introduce bubbles into the hose. Never allow anything to crimp or crush the tubing so as to impede the free flow of fluid.
  - Bleed air.** Hold the valve below the level of the water container; open the valve to bleed out any air and close the valve.
  - Establish height.** Locate the tubing adjacent to a pier that is set to the desired final height. Position the valve above the pier and open the valve. Move the water container up or down to where the water level is at the desired final height of the pier. Maintain the water container in that position and close the valve.
  - Level piers.** Move the tubing to the next pier. Hold the valve above the pier and open it. Set the pier height to the level of the water in the tubing and close the valve. Repeat this step until all piers are at the same level.
- Complete the opposite side.** Jack the other side of the section up and install piers following the instructions above. At the completion of this step, the section should be level from front to rear and from side to side.
  - Install perimeter and marriage line piers.** Install perimeter piers and for multi-section homes, marriage line piers. Position marriage line piers to provide equal bearing for both mating sections.
  - Remove running gear.** Remove and store, recycle or properly dispose of the hitch, axles, and wheels. These items are the property of the homeowner unless other contractual arrangements have been made.



**Level the home.** The home is adequately leveled if there is no more than 1/4 inch difference between adjacent pier supports (frame or perimeter) and the exterior doors and windows of the home do not bind and can be properly operated.

**Water level operation.** To operate the water level properly, both ends of the system must be open to the atmosphere and there must be approximately the same amount of fluid in the tubing

at all times (within a few inches).

## Set the Home

300.043

Is this a single-section home?

- ▶ YES, go to **Connect Utilities**, (p. 87).
- ▶ NO, go to **Complete Multi-Section Set**, (p. 44).

MODEL MANUFACTURER'S INSTALLATION MANUAL

CHAMPION 

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS APPROVED  
02  
2/15/2011

# Complete Multi-Section Set

This chapter covers the preparation and installation of additional home sections, including the structural connections between units, raising and fastening hinged roofs, and fastening the home to a load-bearing perimeter wall foundation.

## Follow the Steps below:

- ▼ **STEP 1. INSTALL MARRIAGE LINE ANCHORS** (p. 44)
- ▼ **STEP 2. REMOVE PROTECTIVE SHIPPING MATERIALS** (p. 44)
- ▼ **STEP 3. COMPLETE HINGED ROOF** (p.44)
- ▼ **STEP 4. REPAIR OR INSTALL MARRIAGE LINE GASKET** (p.44)
- ▼ **STEP 5. POSITION ADDITIONAL HOME SECTIONS** (p.46)
- ▼ **STEP 6. CONNECT FLOORS** (p. 48)
- ▼ **STEP 7. CONNECT ROOF** (p.49)
- ▼ **STEP 8. CONNECT WALLS** (p.51)
- ▼ **STEP 9. ATTACH TAG UNITS** (p.53)
- ▼ **STEP 10. REMOVE TEMPORARY ITEMS** (p. 54)
- ▼ **STEP 11. FASTEN HOME TO FOUNDATION** (p. 54)
- ▼ **STEP 12. BACKFILL AND GRADE** (p. 54)
- ▼ **STEP 13. BUILD STAIRS** (p. 54)

### STEP 1. INSTALL MARRIAGE LINE ANCHORS

Ground anchors along the marriage line are not required.

### STEP 2. REMOVE PROTECTIVE SHIPPING MATERIALS

Remove all shipping protection and associated fasteners from both home sections to be joined, including plastic used to close up the open sides during transportation. Do not remove the temporary supports holding up the ceilings at major openings.

### STEP 3. COMPLETE HINGED ROOF

If the home has a hinged roof that has been folded down for shipping, raise the roof using a crane or roof jacks following the procedure below:

1. **Position lift points.** Position the roof lift points (jacks or crane lift points) following the jack manufacturer or crane operator instructions. Space roof lift points equally along the length of the roof with no more than five feet from the end of the roof to the first or last lift points. Use three lift points for a roof up to 48 feet long (excluding overhangs), four lift points for up to 60 feet, and five lift points for up to 72 feet.
2. **Remove fasteners.** Remove any temporary fasteners connecting the hinged portion of the roof to the vertical king posts.
3. **Lift roof.** Raise the roof to its intended height. A temporary slight



#### Position roof jacks.

Position jacks vertically to prevent the jack foot from kicking out or sliding.

#### Caution during roof

**raising.** Do not enter the roof cavity during the raising procedure.

#### Checklists for alternate

**construction.** If the serial number (see the data plate or the chassis front cross member) has the letters "AC" before or after it, then the Alternate Construction on-site check list supplied with the home must be completed and returned to

January 31, 2011


CHAMPION

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS APPROVED  
R A D 02


2/15/2011

overextension may be required during lifting. However, take care not to overextend the roof and damage the hinge. Raise the roof evenly in small increments, keeping it level throughout the entire process to prevent racking. Do not allow roofing paper and shingles to get caught in the hinge crease.

4. **Secure king posts.** Position 2x4 plate on fixed king post to 2x4 plate on hinged king post and fasten plates together with .131 x 3" nails 8" o.c. the entire length of home. (Figure 18 and Figure 19).

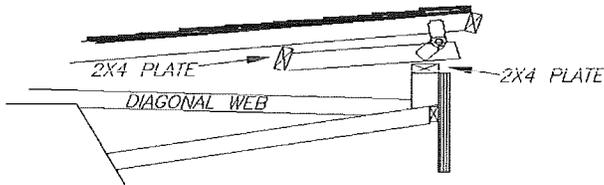

HINGE ROOF IN SHIPPING POSITION

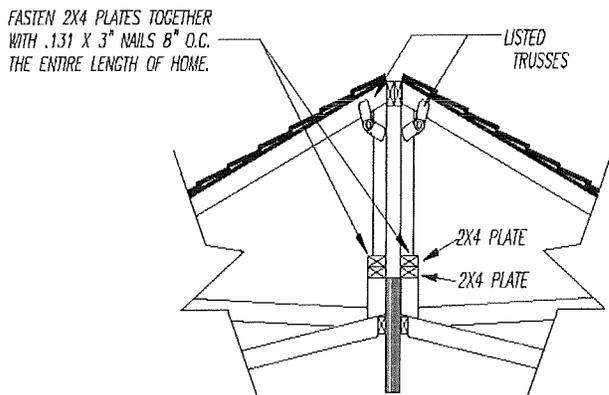

HINGE ROOF IN UPRIGHT POSITION

the home manufacturer in a timely manner. If the AC checklist relates to the roof, then failure to do so may require future disassembly of the roof and further inspections.

300.045

**Figure 18.** Hinged roof truss In shipping position (drawing is typical, actual truss configuration may vary)

**Figure 19.** Hinged king post to fixed king post fastening (drawing is typical, actual truss configuration may vary)

### A/C Letter for Hinged Roof

1) If hinged roofs are in shipping position during shipping, then lifted & installed on the site, and there are no roof penetrations, an A/C letter is not required.

2) If hinged roofs are in shipping position during shipping, then lifted & installed on the site and there are roof penetrations (furnace, water heater stack, etc.), an A/C letter is required.

3) If the hinged roofs are lifted & installed completely in the plant before shipping to the site, there is no A/C letter required.

5. **Redistribute Insulation.** Before closing up the attic space check that the insulation has not shifted. Re-level the insulation if needed.
6. **Install vents.** Extend plumbing vents, exhaust fans, appliance vents, and fireplace stacks through the hinged portion of the roof in strict accordance with this manual (**Prepare Appliances and Equipment**, p. 96) and/or supplemental instructions provided by the home manufacturer.

## STEP 4. REPAIR OR INSTALL MARRIAGE LINE GASKET

A continuous, non-porous gasket creating a permanent air barrier must be installed on at least one side of the marriage line; along the floor, end walls and ceiling (and marriage lines for any tag units). The manufacturer has provided a marriage line gasket either installed on the home or shipped loose. If installed, inspect the gasket and repair any gaps or tears.

If not installed at the factory, install a continuous gasket between the home sections along the floor, end walls, and ceiling (**Figure 20**).

For homes with through-the-rim crossover ducts (see **Crossover Connections**, p. 59) inspect and if necessary, repair gaskets around the rim joist duct openings using 3/4-inch thick fiberglass duct board or other material acceptable to the manufacturer. Ensure that duct openings are unobstructed.




**Inspecting vents.** Fuel fired heating appliance and fireplace vents that pass through a hinged roof must be completed and inspected at the site prior to energizing the appliance or occupying the home. Failure to comply with this precaution may result in serious injury or death. Venting systems must be installed in conformance with the appliance manufacturer's instructions and any instructions supplied with the home.



**Checking through-the-rim-ducts.** Ensure that through-the-rim-duct connections are secure and tight after the home sections are together.

**Figure 20.** *In-floor duct showing crossover through rim joist*

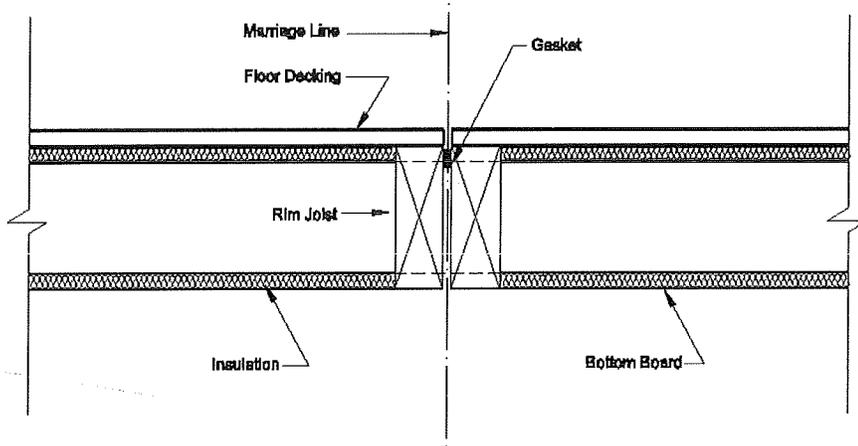

## STEP 5. POSITION ADDITIONAL HOME SECTION

Follow this procedure to install additional home sections:

1. **Remove obstructions.** Remove protruding nails and staples or anything else that will keep the home sections from fitting together snugly. If present, cut the temporary ceiling and floor plates at the edges of marriage line openings taking care not to damage ceiling or floor coverings or displace temporary marriage line support posts (these supports and the plates will be removed after the home sections have been structurally connected).
2. **Complete crossovers.** Before moving the two sections together, complete any crossover connections that require access from the open marriage line, including the attic duct connection (if present) and marriage wall interior electrical connections (see **Connect Crossovers**, p.59).
3. **Position section.** Position the section as closely as possible (ideally within six inches) and line up with the previously set section. If using a mechanical positioning system or crane, follow the system manufacturer's instructions or the crane operator's directions.
4. **Construct piers.** With the outside walls of the home aligned, construct the piers for the home section according to the instructions in **Set the Home** (p. 37) before continuing to the steps below.
5. **Level section.** Lower the section onto the outside piers first, inside piers last. Before releasing the mechanical positioning system, check interior doorways and other openings for misalignments that may cause problems during trim-out. The floors should be flush, level, and tight and the roof section should have little, if any, gap at the top of the marriage line. Use at least two come-alongs to pull the sections snugly together and use the water level or other leveling device to set all piers and shims.
6. **Shim gaps.** Shim any gaps up to one inch between structural elements with dimensional lumber. If any gaps exceed one inch, re-position the home to eliminate such gaps.



**Mechanical positioning system.** For a pier-set home, a mechanical positioning system (such as a roller system) will make the process easier and safer and be less likely to damage the home.



**Sealing gaps.** Prior to completion of the exterior close-up, gaps that do not exceed one inch are permitted between structural elements provided that the gaps are closed before completion of close-up, the home sections are in contact with each other, and the marriage gasket provides a proper seal.

## STEP 6. CONNECT FLOORS

Make floor structural connections according to one of the methods described below.


### Method 1: Install toed fasteners through bottom board or floor decking

Install fasteners at approximately a 45 degree angle (+/- 5 degrees) from horizontal as shown in **Figure 21** using the fastener type, size, and spacing indicated on **Table 10**. (metal straps on underside of home not required in Wind Zone I) Adjust fastener lengths for any gaps between the modules to obtain the same penetration and fill all the gaps with SPF lumber or plywood before installing the fasteners.

**TABLE 10. FLOOR CONNECTION FASTENING SPECIFICATIONS**


Fastener		Spacing		
Type	Size	Wind Zone I	Wind Zone II	Wind Zone III
Lag screw with washer	5/16" x 4-1/2"*	36 in.	-	-
Wood screw	#8 x 4"*	32 in.	-	-

\* Increase fastener lengths by 3 inches for double rim joists.

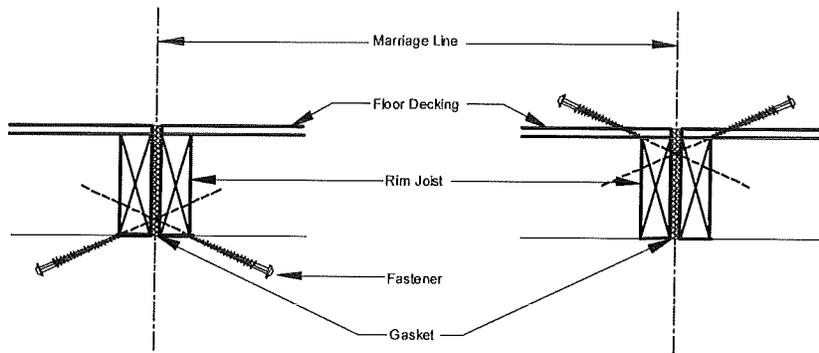

**Figure 21.** Floor connection through bottom board or floor decking (Fasteners must penetrate the rim joist by a minimum of 1 1/2 inches)

Stagger fasteners on either side of marriage line and offset them by half the spacing distance (**Figure 22**).

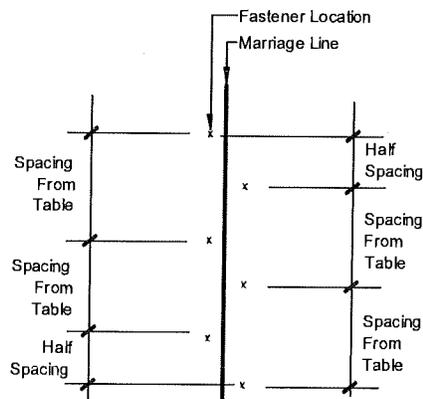

**Figure 22.** Staggered offset fastening along marriage line

Install additional fasteners as indicated below, making sure to repair any openings in the bottom board with tape specially made for that purpose (may be provided).

- Install two additional fasteners at each end of the home at approximately a 45 degree angle (+/- 5 degrees) from horizontal.
- If the home has a through-the-rim crossover duct, install one additional fastener at each side of the duct opening.



**Patch bottom board.** Use adhesive spray, mastic, and/or divergent staples in combination with bottom board tape for a more

January 31, 2011

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
APPROVED  
02

2/15/2011


secure and durable connection.

**Method 2: install horizontal fasteners through rim joist**

Insert 5/16" x 3" lag screws spaced per **Table 11** horizontally through rim joists and staggered top to bottom as in **Figure 23**. After installation of fasteners, repair tears or holes in the bottom board using tape specially made for that purpose.

**TABLE 11. HORIZONTAL RIM JOIST FASTENER SPACING**

Wind Zone I	Wind Zone II	Wind Zone III
18 in.		

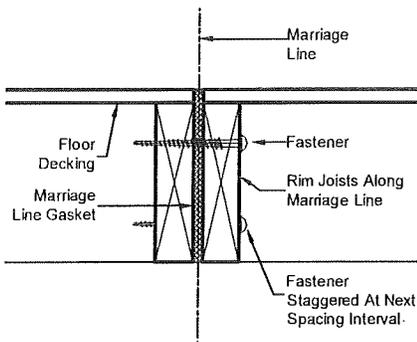

**Figure 23.** Horizontal fasteners through rim joists

**STEP 7. CONNECT ROOF**

If the marriage line along the roof is not snug, position jacks every 20 feet or less along the outside I-beam and uniformly lift the section until the roof area is tight.

Check to make sure the ceiling joint is flush before installing the connections. If not, use a jack and tee to raise whichever ceiling is low, starting at the front and working to the rear of the home. Fasten the roof along the marriage line using one of the methods below for either double or triple-section homes.

**DOUBLE-SECTION HOMES**

Make roof structural connections in double-section homes as described below.


**Method 1: Install toed fasteners through roof sheathing**

Install the fasteners through the roof deck into the ridge rail at an approximately 45 degree angle (+/- 5 degrees) from horizontal (**Figure 22**) according to the fastener spacing and specifications in **Table 12**. Stagger fasteners on each side of marriage line and offset them by half the spacing distance (**Figure 22**). Spacing indicated is on-center, both sides of ridge. Make sure fasteners penetrate the ridge rail by a minimum of 1-1/2 inches both sides of ridge. Adjust fastener lengths for any gaps between the modules to obtain the same penetration and fill all the gaps with SPF lumber or plywood before installing the fasteners. Metal straps not required in Zone I.



**Closing the roof gap.** Level and fasten the marriage line joint at the floor before jacking to tighten a roof gap. DO NOT use roof fasteners to close any gaps. Separation of the ridge beams and trusses may occur.



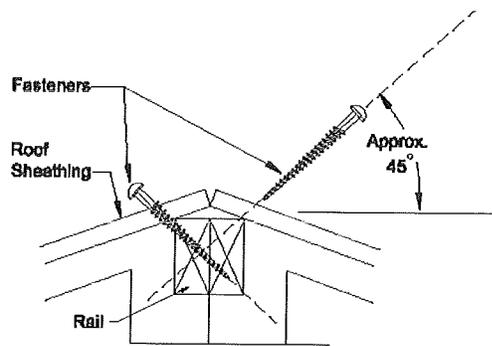

**Figure 24.** Toed fasteners through roof sheathing

**TABLE 12. ROOF CONNECTIONS SPECIFICATIONS**

Fastener		Spacing	
Type	Size	Wind Zone I	
Lag screw with washer	5/16" x 6"	28 in.	
Wood screw	#10 x 5"	24 in.	



**Installing lags.** If lags are used to connect roofs, use appropriately sized washers, countersink the fastener heads and fill the countersink holes with putty or caulk to prevent shingles from sinking into the holes over time.

## STEP 8. CONNECT WALLS

Once the home is secured along the marriage line floor and roof, secure end walls, interior doorways, and marriage line partitions according to the appropriate method described below.

### END WALLS

#### Method 1: Install toed fasteners through sheathing

Toe fasteners through sheathing from the exterior at an approximately 45 degree angle (+/- 5 degrees) (Figure 24) according to the fastener specifications and spacing requirements in Table 13. (stagger fasteners)

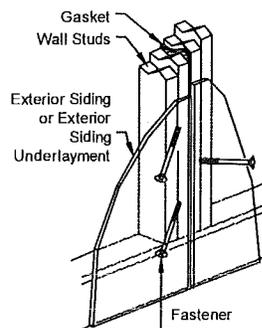


Figure 24. End wall connection toed through sheathing

TABLE 13. END WALL FASTENER SPECIFICATIONS

Fastener type	Size	Spacing
Lag screw with washer	5/16" x 5"	12in. o.c.
Wood screw	#8 x 3"	8in. o.c.
Nail	16d	8in. o.c.

## MARRIAGE WALL COLUMNS, OPENINGS AND INTERIOR PARTITIONS

Make connections inside the home along the marriage walls (Figure 25 and Figure 26) by installing fasteners according to the specifications and spacing requirements in Table 14. Toe screw 2 x 4 or 2 x 6 studs or through-screw 2 x 3 studs.

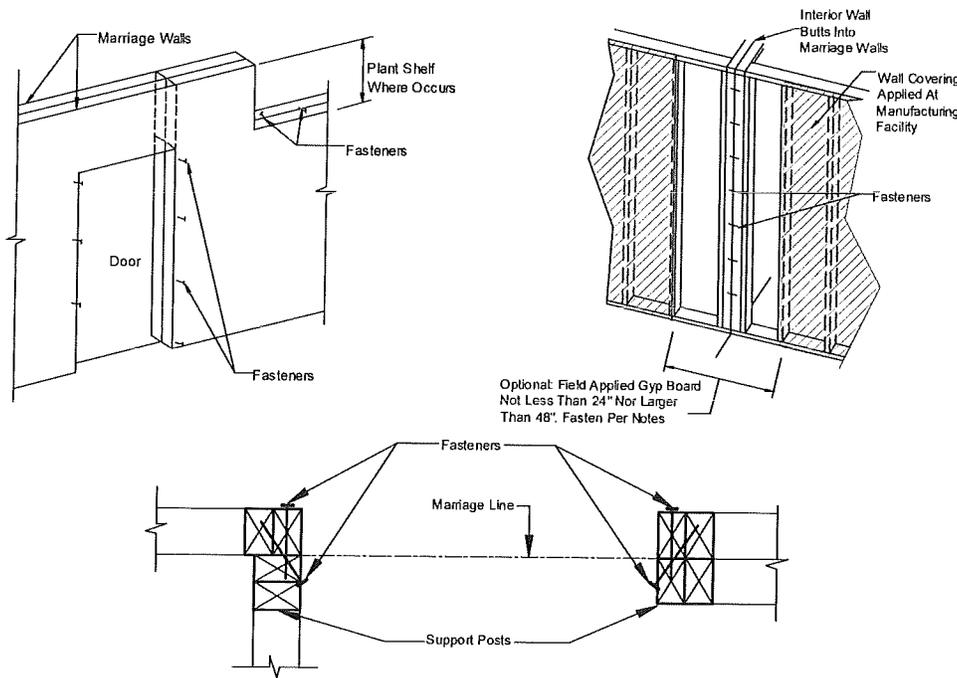


Figure 25. Marriage wall connections

Figure 26. Marriage line column connections

TABLE 14. MARRIAGE WALL CONNECTION SPECIFICATIONS

Fastener type	Size	Spacing
Wood screw	#8 x 4"	15 in. o.c.

Do additional sections (non tag) remain to be positioned?

- ▶ YES, go to **STEP 1. INSTALL MARRIAGE LINE GROUND ANCHORS**, (p. 44)
- ▶ NO, continue below.

Is there a tag unit?

- ▶ YES, go to **STEP 8. ATTACH TAG UNITS** (p. 51)
- ▶ NO, continue below.


Is there a hinged roof?

- ▶ YES, go to **STEP 9. COMPLETE HINGED ROOF**, (p. 53)
- ▶ NO, go to **STEP 8. ATTACH TAG UNITS**, (p. 51)

## STEP 9. ATTACH TAG UNITS

After the main unit has been set on its foundation, install all tag units according to the following procedure:

1. **Position and block the tag.** Position the tag unit as close to the main unit as possible at its intended location. Use a hitch jack to obtain approximate leveling and install pier supports according to **Set the Home, STEP 2. POSITION HOME SECTION** (p. 37).
2. **Level the unit.** Using a water level (p. 42), verify that the piers are level. The elevation of all points along the lower flange of the I-beam should be no more than 3/8 inches from the desired height and should not deviate more than 3/4 inches overall.
3. **Connect floors.** Connect the floors together as described in **STEP 5. CONNECT FLOORS** (p. 47).
4. **Connect walls.** Secure the tag unit walls to the main unit sidewall using #8 x 4" screws at 12 inches o.c. (see **Figure 27**). Once the wall connections are complete, finish the siding installation.

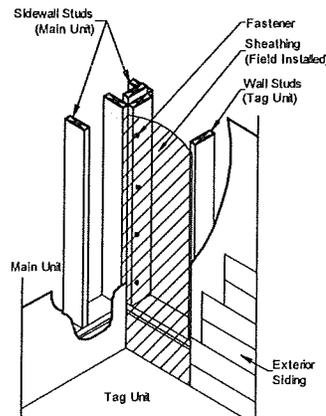




5. **Connect roofs.** Connect the tag unit roof to the main unit roof using #10 x 5" screws or 3/8" x 6" lag screws, toe screwed at each main unit vertical structural member (stud or truss) location. See **Figure 28** for flush roof connections and **Figure 29** for roof connections with an offset greater than two inches. Roof connections with an offset less than two inches do not require screws.



### Piers under tag units.

Some tag units have special piercing needs due to the roof and/or floor construction. These will be detailed in supplemental piercing plans supplied with the home. Note that tag unit end walls are typically load bearing rather than side walls.

**Figure 27.** Tag unit wall connection

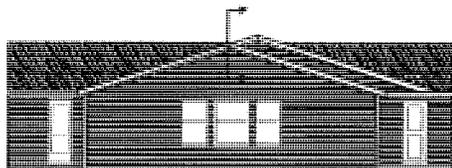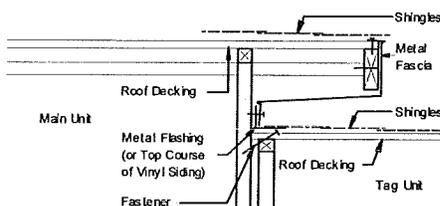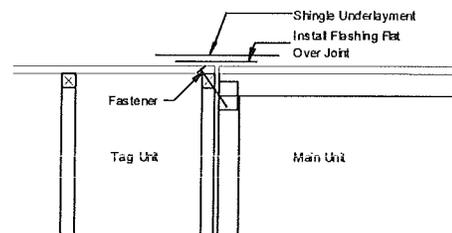

**Figure 28.** Tag unit flush roof connection (common)

**Figure 29.** Tag unit offset roof connection (not common)

## STEP 10. REMOVE TEMPORARY ITEMS

Once the home is properly supported and the marriage line connections are completed, remove the temporary ridge beam supports and wall/ceiling plates used to brace the ridge beam during shipment. Take care not to damage the ceiling.

Remove and store or properly dispose of or recycle the hitch, axles, and wheels. These items are the property of the homeowner unless other contractual arrangements have been made.

Is the home supported on a load-bearing perimeter wall?

- ▶ YES, go to **STEP 11. FASTEN HOME TO FOUNDATION**, (p. 54)
- ▶ NO, go to **Complete Roof and Exterior Walls** (p. 55).

## STEP 11. FASTEN HOME TO FOUNDATION

Fasten the home to the foundation (typically to the sill plate) according to the fastening schedule provided by LAHJ or approved foundation drawings.

Is the home supported on a basement foundation?

- ▶ YES, go to **STEP 12. BACKFILL AND GRADE**, (p. 54)
- ▶ NO, go to **Complete Roof and Exterior Walls** (p. 55).

## STEP 12. BACKFILL AND GRADE

Backfill against the foundation wall to the height of the waterproofing, taking care to not damage the drainage system.

Grade the site as described in **Prepare the Site, STEP 3. CLEAR AND GRADE THE SITE** (p.15).

## STEP 13. BUILD STAIRS

Construct the basement stairs in compliance with the local building code. Take care that adequate headroom is maintained under beams and that there is sufficient landing space at the bottom of the stairs.

- ▶ go to **Complete Roof and Exterior Walls** (p. 55).



**When to backfill.** Backfill against basement walls only after the home is connected to the foundation or the basement walls may deflect inward or collapse.

**Cutting the chassis.** Do not cut, notch, bend, or alter in any manner beams, cross-members, and other parts of the steel chassis.

# Complete Roof and Exterior Walls

This chapter covers closing up and weatherproofing the home by completing the roofing and siding.


## Follow the Steps below:

- ▼ STEP 1. COMPLETE ROOF (p. 55)
- ▼ STEP 2. COMPLETE TAG UNIT ROOF (p. 57)
- ▼ STEP 3. COMPLETE SIDE WALLS (p. 57)


### STEP 1. COMPLETE ROOF

#### RIDGE CLOSEUP


For multi-section homes, the first step in completing the exterior is sealing the roof along the ridge line (Figure 30). For homes with asphalt shingles, follow the procedure below.

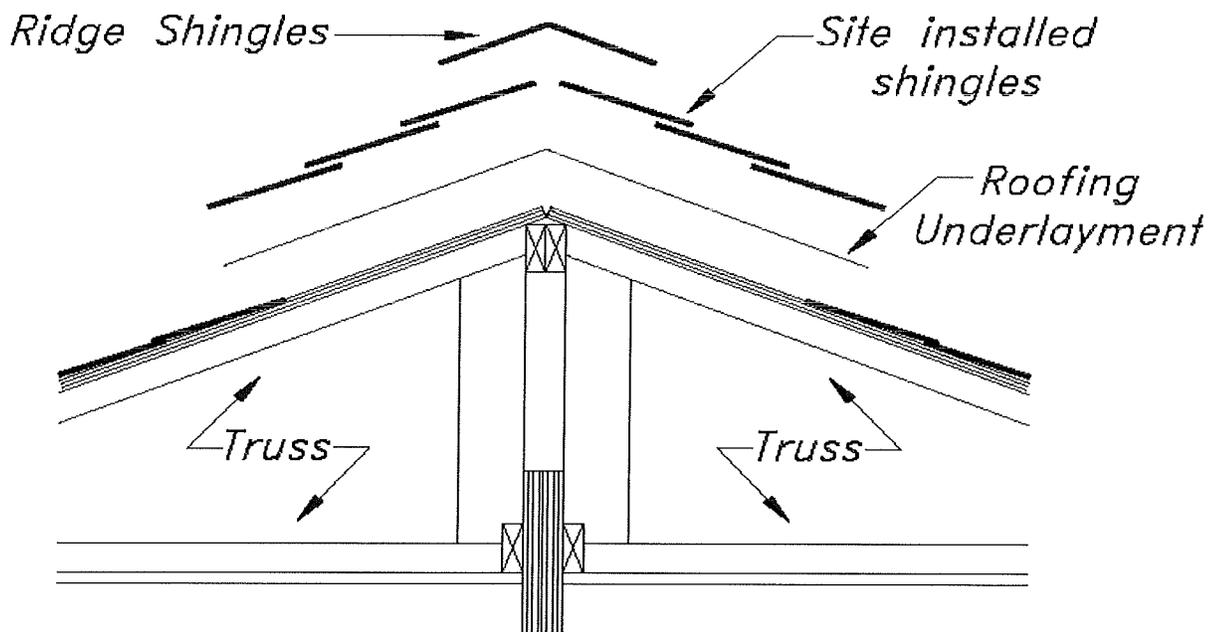

1. **Install underlayment** (when sheathing at the ridge is installed on site). Make sure the roof sheathing is already installed (see **Complete Multi-Section Set, STEP 6. CONNECT ROOF**, p. 48). Install 15# felt or equivalent continuously along the length of the ridge, covering all exposed sheathing and overlapping sheathing joints by at least five inches on each side. Fasten using 1" x 1" x 16 ga galvanized staples.
2. **Install shingles.** If shingles have been left off at the ridge line for site installation, install them now using 1" x 1" x 16 ga galvanized staples or 12ga 1-1/4" long, 3/8" diameter head roof nails. For Wind Zone I, fasten at 5/8 inch above each tab cutout slot and one at each end of the shingle one inch in from the edge (four fasteners for a three-tab shingle) (**Figure 31**). Do not fasten through the shingle tar line.

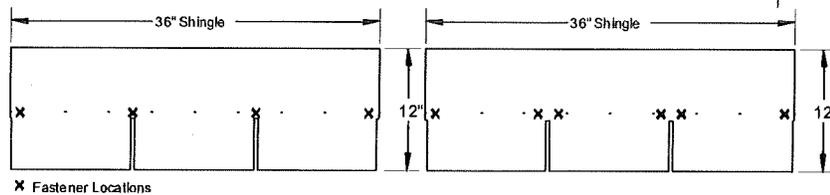

- 3.
4. **Install shingle cap.** Starting at the opposite end of the home from the prevailing wind, install ridge cap shingles provided by the manufacturer or use 12" x 12" shingles (36" shingles cut into three equal pieces) (**Figure 32**). Install using 1" x 1" x 16 ga galvanized staples or 12 ga 1-1/4" long, 3/8" diameter head roofing nails spaced 5-5/8 inches from bottom edge and 1/2 inch to 1-1/2 inches in from both edges. Cover the exposed fasteners with tar or cement.

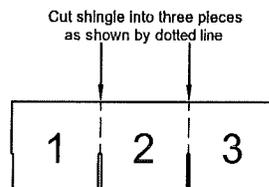


### HINGE ROOF CLOSE-UP

For homes with hinged roofs, complete roofing underlayment and shingles along the hinge line (**Figure 33**) as follows:

1. **Install underlayment.** Attach the underlayment to the roof deck with a minimum of six-inch wide strip of cement. If necessary, trim the underlayment to allow the lowest shingle above the hinge of the roof to seal to the topmost shingle on the lower portion of the roof.

300.057

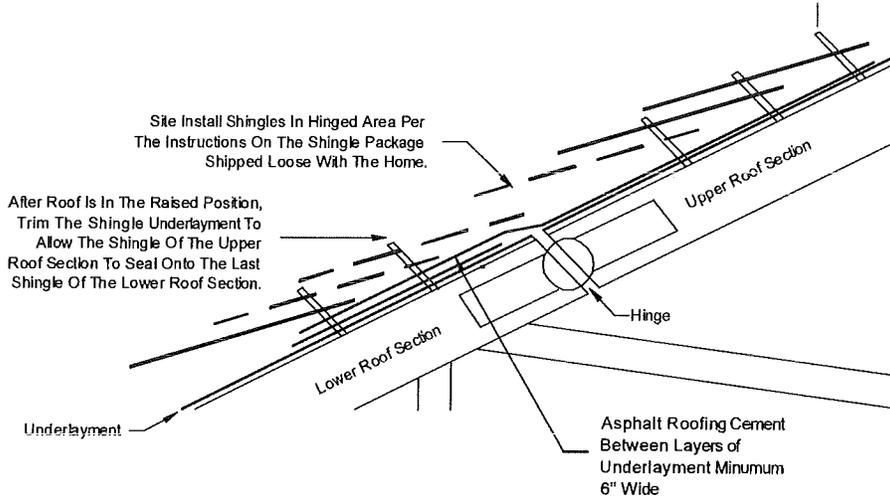


2. **Install shingles.** Install missing shingles according to the shingle manufacturer's instructions.

## STEP 2. COMPLETE TAG UNIT ROOF

If the home has a tag unit, complete roofing for this unit now. The process for completing the roof is different for flush and offset roofs. Follow the instructions in the appropriate section below.

### FLUSH ROOFS

For flush roofs, complete roofing along the marriage line and at the valley line as follows (see **Figure 34**):

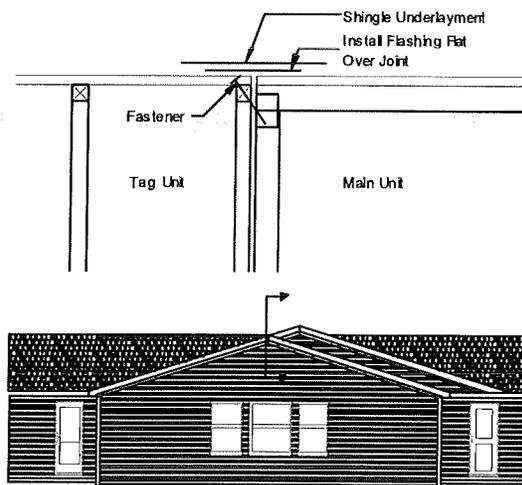

### Marriage line

**Method 1:** Install metal flashing (minimum 30 ga x minimum 6" wide) over the joint between the main roof dormer and tag unit roof. Secure the flashing to the roof decks on both dormer and tag unit roofs with roofing nails or 16 ga staples with a one inch crown and long enough to fully penetrate the roof decks. Space fasteners maximum two inches o.c. near the edge of the flashing. Overlap seams in the metal by at least two inches. After flashing is complete, install shingles per shingle manufacturer instructions and ridge cap/vent according to **STEP 1. COMPLETE ROOF** (p. 55).

**Method 2:** Install two layers of roofing underlayment or equivalent over the joint between the main roof dormer and tag unit roof lapping the factory installed underlayment a minimum of six inches on each side and fully cemented at the laps. Install shingles per shingle manufacturer instructions and ridge cap/vent according to **STEP 1. COMPLETE ROOF** (p. 55).

### Valley line

Along the bottom of the valley, shingles and one or more layers of roll roofing may need to be installed. If fastened to the roof at the factory, unroll the roofing, overlap the tag roof and trim the roofing to the roof edge. If shipped loose, install the roll roofing at the valley, lapping it under the factory installed roll roofing a minimum of 12 inches and fully cement the roofing at the lap. Complete shingles at the valley either by interweaving them or by trimming back approximately four inches from the valley line and fully cementing the exposed shingle edges.

## STEP 3. COMPLETE SIDE WALLS

Siding necessary to complete the exterior has been provided with the home. Follow the siding manufacturer's instructions (found on or with the packaging or as an addendum to this manual) and to complete the exterior siding as follows:

1. **Remove shipping protection.** Remove temporary shipping protection from walls.
2. **Complete crossovers.** Complete any crossover connections in the walls, including: electrical, stereo speaker, doorbell, telephone, and intercom wires.
3. **Install siding.** Fasten siding only at stud locations, avoiding electrical wires that are present in the walls.
4. **Install close-up of strips.** If siding has been installed on the end walls at the factory, fasten close-up strips securely along both edges and seal the edges with a waterproof sealant.
5. **Install trim.** Install any matching trim required to complete the installation.
6. **Seal penetrations.** With a waterproof sealant, seal any penetrations in the siding that may have been caused by temporary shipping protection.

▶ go to **Connect Crossovers** (p. 59).

## Connect Crossovers

This chapter covers crossover connections between units of multi-section homes, including ducts and electrical, water, waste, gas, telephone, and cable TV connections.

### Follow the Steps below:

- ▼ STEP 1. CONNECT DUCTS (p. 59)
- ▼ STEP 2. CONNECT ELECTRICAL CROSSOVERS (p. 62)
- ▼ STEP 3. INSTALL ELECTRICAL BONDING (p. 64)
- ▼ STEP 4. CONNECT WATER LINES (p. 65)
- ▼ STEP 5. CONNECT DRAIN, WASTE, AND VENT LINES (p. 66)
- ▼ STEP 6. CONNECT GAS LINES (p. 68)
- ▼ STEP 7. CONNECT TELEPHONE AND CABLE TV WIRING (p.68)

### STEP 1. CONNECT DUCTS



**Qualified personnel.** Use only qualified personnel to make crossover connections. Consult the LAHJ for licensing or any additional crossover connection requirements.

**Access for service.** Whenever possible maintain access to connection areas for future maintenance.

**Make tight connections.** Permanent, durable, and tight crossover duct connections are critical to the proper performance of the home. Leaky ducts can result in severe moisture problems in the home, discomfort from rooms not receiving the proper amount of conditioned air, and high utility bills from wasted heating and/or cooling energy.



**Cover exposed metal.**  
Completely cover all exposed metal connectors with insulation. Apply sealants and tapes only to surfaces that are dry and free of dust, dirt, and grease.

## IN THE FLOOR CROSSOVER DUCT

### Through the rim joist

With a through-the-rim joist design, the duct in each floor section terminates at an opening in the marriage line rim joist. Connect other through-the-rim joist ducts using the following method based on the design of the home.


There are 6" x 18" fiber glass crossover trunks at the marriage wall locate

Through the rim joist at two locations. Remove the 2x\_ material over each opening which has been added for transit and to protect from weather/rodents. The trunk crossover has been completed. The gaskets have been shipped loose with the home & are to be field installed to each marriage wall rim joist opening. (nail or staple to rim joist 6" o.c. min.) Use typical multi-wide mating procedures shown in this manual to complete the floor connection. Test the crossover ducts/gaskets for leaks.

### In-floor duct board crossover

Join ducts as follows (Figure 35):

300.061

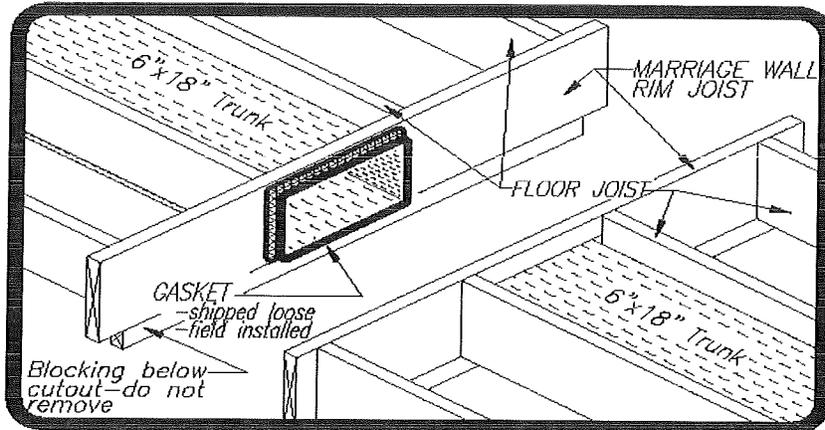

**Figure 35.** In-floor duct with crossover.

### Rim Joist Cutout Locations & Foundation Blocking Requirements

- when marriage wall is above the joist cutout, no marriage wall foundation blocking is required
- when marriage wall opening is greater than 60", and joist cutout falls in the opening, each end of the marriage wall will have foundation blocking. No additional blocking is required below joist cutout.
- when marriage wall opening is less than 60", and joist cutout falls in the opening, no marriage wall foundation blocking is required below joist cutout
- when loop system is used with the Lindsay Unified Floor System or the Clear Span 2000 Floor System, no additional blocking is required at the rim joist cutout.

## STEP 2. CONNECT ELECTRICAL CROSSOVERS

Multi-section homes may have one or more electrical crossovers located in the wall(s) and/or floor(s) along the marriage line(s).


### JOINING WIRES

Two types of connections may be present at these locations—snap connectors and junction boxes. Identify matching circuits if multiple circuits exist at a single crossover location. These will be coded for identification. Connect snap connectors according to the connector manufacturer's installation instructions, including fastener requirements.

Connect wires in junction boxes as follows (Figure 36):

**Pull wires.** Pull circuit wires into the junction box, sliding them through a romex connector and secure snugly. (Figure 36) Do not over-tighten.

1. **Strip wires.** Remove the outer jacket that holds the circuit wires together providing a minimum of four inches of free wire in the box.
2. **Connect wires.** Connect wires together matching like colors, using appropriately sized wire nuts. Use the ground wire to ground the junction box and/or cover plate(s), if metal. Junction boxes may contain single or multiple 15 or 20-amp circuits, or a single 240-volt appliance circuit.
3. **Replace cover.** Reposition the junction box cover and secure using machine (not sheet metal) screws.

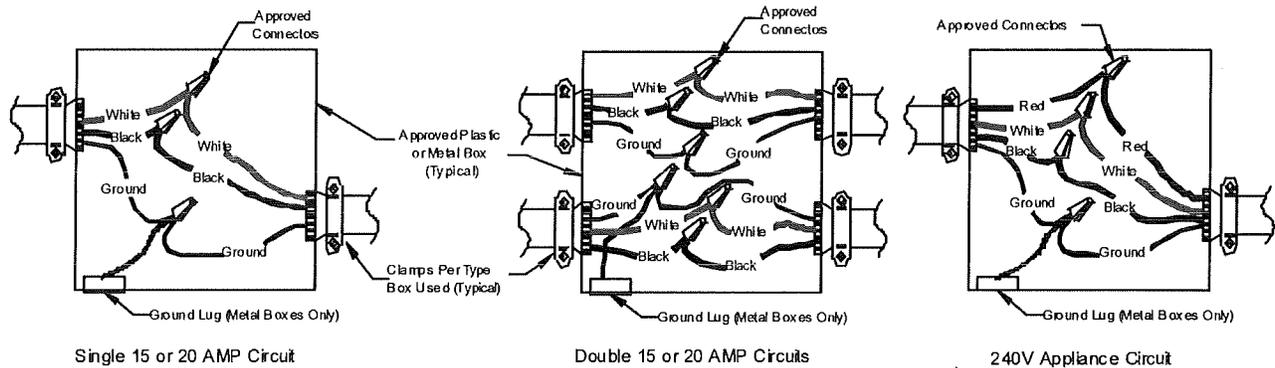

**Use qualified electricians.** All electrical work must be performed by a qualified electrician and comply with the 2005 NEC.

**Disconnect power.** Turn off power to the home before making connections.

**Proper use of GFCI circuits.** Ensure Ground Fault Circuit Interrupted (GFCI) circuits are connected to the proper GFCI protected circuits from the power supply.

Figure 36. Types of junction box wiring connections

## FLOOR CROSSOVER

When making electrical connection(s) in the floor, use one of the wiring options described below:

### Method 1: Access panel

1. **Access wires.** Find the crossover location(s) and remove the access panel(s) if attached. If access panel openings are not provided, cut through bottom board to expose the wiring (Figure 37).
2. **Route wires.** Pass the wires through predrilled holes or notches in the rim joist or if there is a single bumped-out access panel as in Figure 38, then under the rim joists. If holes or notches have not been provided and there is no bumped-out access panel, drill maximum one-inch diameter hole(s) half-way up the rim joists on each home section, making sure the holes align and feed the wire through the hole.
3. **Connect wires.** Connect wires via a junction box or snap-connector(s) as described above.
4. **Secure wires.** Secure wires with staples to adjacent joists or studs within eight



**Using snap connectors.** Do not use oversized nails or drive nail heads into snap connectors. Some connectors are designed for one-time use only – a new connector must be used if they become separated.

**Protect cables.** Cover all cables with conduit or other suitable weather-resistant and protective material.


February 1, 2011

CHAMPION


FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
APPROVED  
02  
2/15/2011

inches of junction box or snap-connector(s).

5. **Install smash plates.** For notched perimeter joists, install steel wire protectors (smash plates).
6. **Seal bottom board.** Replace insulation and re-install access panels and/or seal the bottom board with tape specially made for that purpose (may be provided). The access panel(s) may be temporarily installed near the crossover location or shipped loose with the home.

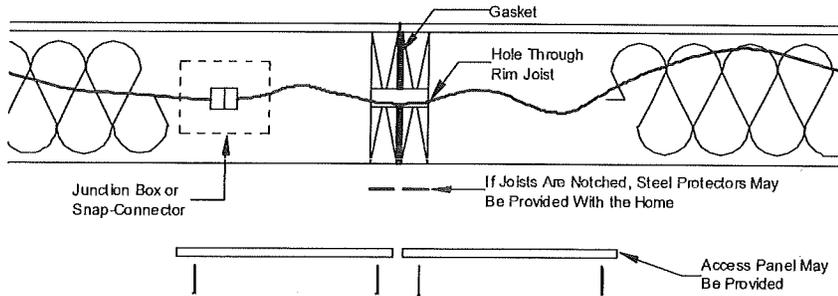

**Figure 37.** Electrical crossover floor wires with flush access panels

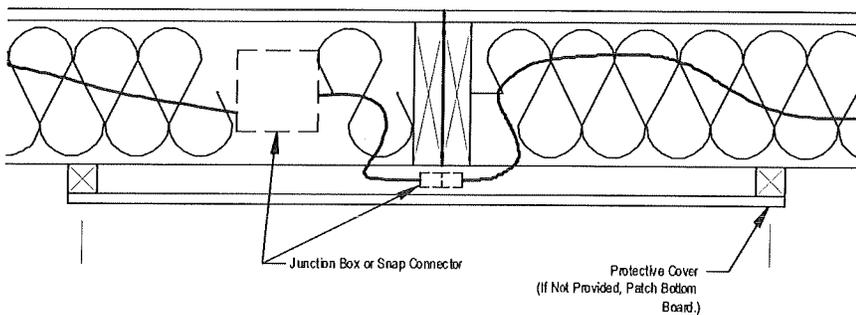


**Figure 38.** Floor electrical crossover wires with bumped-out access panel

### Method 2: Junction box with conduit

1. **Access boxes.** If junction boxes are not exposed, access them inside the floor by cutting the bottom board or by removing the access panel(s). Remove the junction box covers.
2. **Connect wires.** If wire is coiled inside one junction box, insert it into provided flexible conduit and pass it under the rim joists to the opposing box and make the connection as described above. If no coiled wire is provided, install provided ship-loose conduit with wire making connections in both boxes (**Figure 39**).
3. **Cover boxes.** Replace and secure covers on junction boxes.
4. **Seal floor.** Replace any displaced insulation and replace access panel or seal the bottom board with tape specially made for that purpose (may be provided).

**Variation to Method 2:** A junction box may be installed only on one side with the other side containing conduit behind an access panel. Bring the conduit to other side and make one connection in the junction box.

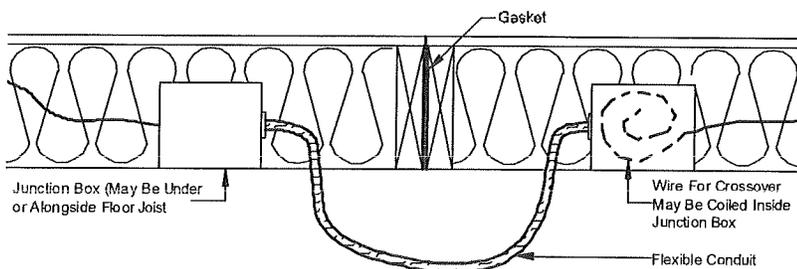



**Figure 39.** Under the rim joist electrical crossover connection with conduit

# Connect Crossovers

## WALL CROSSOVERS

Connect electrical, phone, cable television, and stereo speaker wires in marriage walls and/or partition and end walls.

If access panels into the marriage walls are not provided, then the connection should have been made prior to bringing the home sections together. If access panels are provided in marriage, end or partition walls, remove the panels, join the wires as described above using the provided snap-connector, junction box, or at a receptacle, and re-attach the access panel (**Figure 40** for marriage walls and **Figure 41** for partitions and end walls).

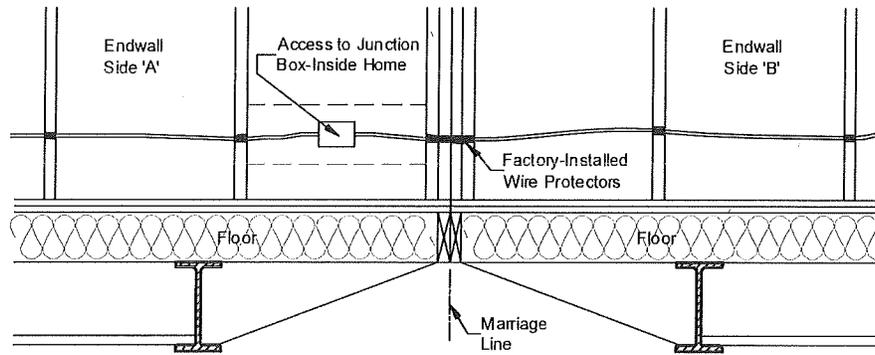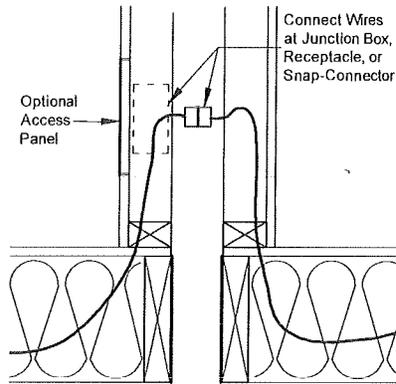

## STEP 3. INSTALL ELECTRICAL BONDING

To ensure all metal parts are effectively grounded, electrically bond all chasses together as follows (300.065)

Figure 42):

1. **Find lugs.** Determine if solderless ground lugs are provided on the front or rear frame outriggers or headers.
2. **Attach wire.** If lugs are provided, uncoil the bonding wire (#8 minimum bare copper wire) from one side of the home and connect it to the lug provided on the opposing side using the provided paint penetrating star washer, tighten the set screw firmly on the wire and repeat for any additional home sections.

300.064



### Avoid damaging crossover wires.

Carefully fold marriage wall crossover wires so they stay within a single bay and are not sandwiched between studs when the sections are pulled together.


**Figure 40.** Inside marriage wall crossover connection

**Figure 41.** Inside partition or end wall electrical crossover connection

MODEL MANUFACTURER'S INSTALLATION MANUAL

300.065

**Figure 42.** *Electrical bonding of multi-section homes*

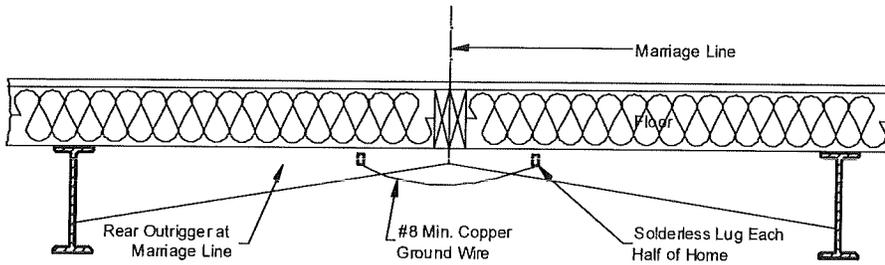


3. **Attach strap.** If ground lugs and copper wire are not provided, attach the provided four-inch bonding strap to each pair of adjacent chasses with two #8 x 3/4" self-tapping metal screws (one screw each side).

## STEP 4. CONNECT WATER LINES

Connect water lines inside the floor through access panels or below the bottom board as follows:

### WATER LINES ACCESSED THROUGH PANELS

1. **Remove panels.** Remove access panels from each home section.
2. **Remove caps.** Remove shipping caps from ends of water lines.
3. **Pull lines.** Pull water lines through holes in rim joist. If holes are not provided, drill round holes in the center of the rim joist, with a maximum diameter of one third the rim joist depth (**Figure 43**).
4. **Connect pipes.** Connect threaded water lines using provided connector fittings (do not use lubricants or sealants). Connect non-threaded water lines using provided fittings and cement, inserting pipe to full depth of each fitting (a short connector pipe may be provided to bridge the gap between sections).
5. **Test.** Test connections for leaks.
6. **Seal floor.** Securely replace insulation and access panels.

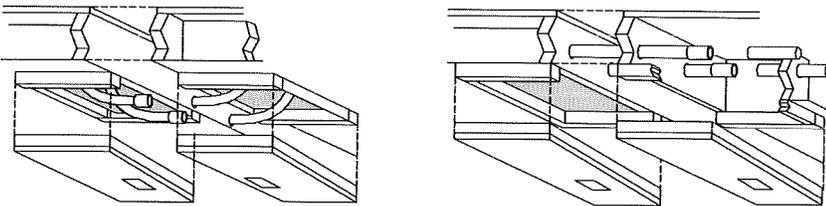

**Applying cement.** Follow cement manufacturers instructions with respect to application and drying time. Allow cement to fully cure before filling pipes with water.

**Figure 43.** *Water line crossover with access panels*




**Choosing cement type.** Use the proper cement for water lines as it may differ from the cement used for the DWV system.

### WATER LINES DROPPED BELOW BOTTOM BOARD

1. **Remove caps.** Remove protective shipping caps from ends of pipes and make sure pipe ends are clean and smooth.
2. **Connect pipes.** Connect threaded water lines using flexible pipe or a rigid connector line (if provided) and connector fittings (do not use lubricants or sealants). Connect non-threaded water lines, pipe, and elbows with cement provided, inserting pipe to full depth of each fitting (**300.066** **Figure 44**).
3. **Figure 44).**
4. **Test.** Test connections for leaks.
5. **Protect pipes.** Wrap water lines with insulation and bottom board shipped loose with home or otherwise protect to prevent freezing. Tape bottom board using tape specially made for that purpose (may be provided) and staple with 7/16" x 1/2" staples at four inches o.c. around bottom board using a divergent (stitch) stapler or equivalent. If heat tape is used it must be listed for manufactured home use and be installed in compliance with manufacturer instructions.

# Connect Crossovers

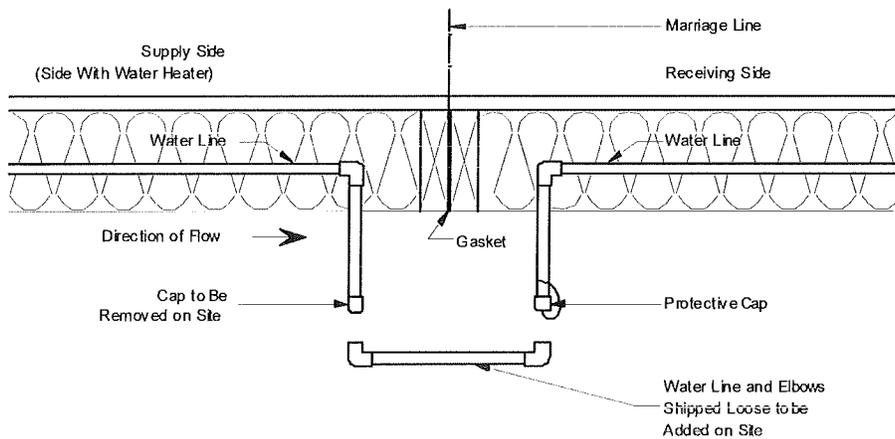

300.066

**Figure 44.** Water line crossover through bottom board

## STEP 5. CONNECT DRAIN, WASTE, AND VENT LINES


Complete portions of the drain, waste, and vent (DWV) system that are below the floor as follows:

1. **Remove caps.** Remove shipping covers from pipes extending through the bottom board; inspect pipes and fittings and clean them of dirt, obstructions, and burrs.
2. **Assemble pipes.** Using the drain schematic drawing provided with the home, begin assembling the DWV system starting at the location farthest from the sewer/septic connection and working towards the outlet, fastening the pipe with cement or adjustable screw-clamp connectors, if provided (**Figure 45**). As the system is assembled, support the piping with temporary blocking. Unless otherwise noted on the schematic diagram, provide a minimum 1/4 inch per foot slope towards the sewer/septic using a plumber's level. Where a slope of 1/4 inch per foot cannot be maintained, use a minimum slope of 1/8 inch per foot and install of a full-size clean-out at the uppermost point of the run (**Figure 46**).



**Providing required clearances.** Provide the drain outlet with a minimum clearance of three inches in any direction from all parts of the structure or any appurtenances and with not less than 18 inches unrestricted clearance directly in front of the drain outlet. Provide any cleanouts with a minimum clearance of 12 inches directly in front of its opening.

**Figure 45.** Drain crossover connection

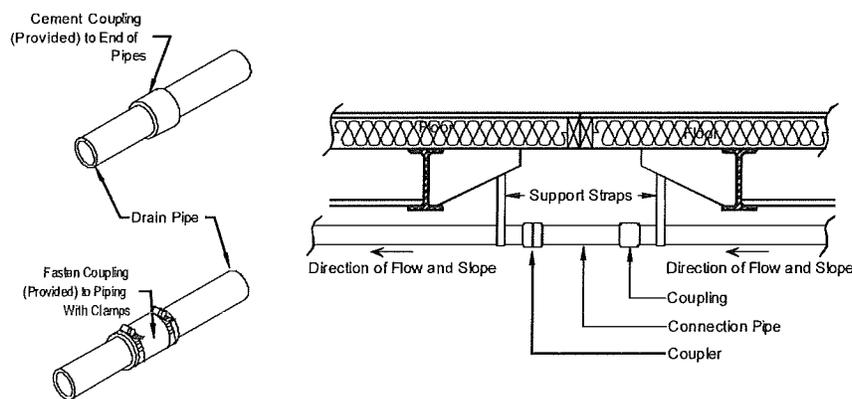


**Figure 46.** DWV system

February 1, 2011

CHAMPION 

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
APPROVED  
02  
2/15/2011

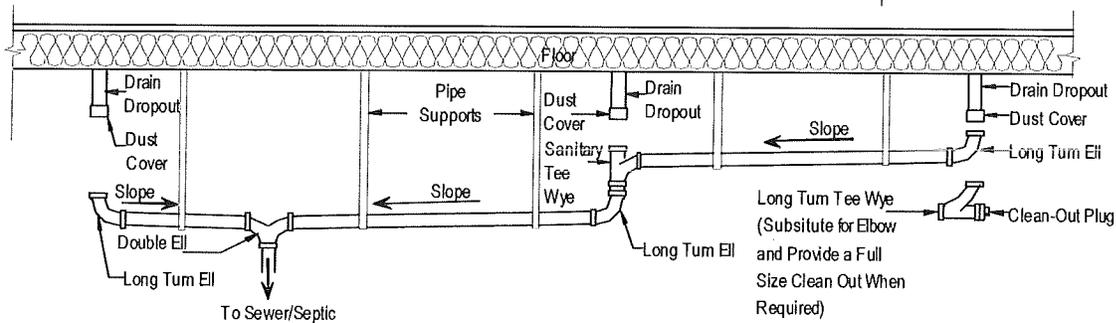

3. **Test.** Conduct a two-part leakage test on the completed drainage system as follows:
  - Part 1. With all fixtures connected, and all tub and shower drains plugged, fill the system with water to the rim of the toilet bowl through a higher fixture. Release all trapped air, replace tub and shower plugs, backfill fixtures, and allow the system to stand at least 15 minutes. Check for leaks. Drain the system. If leaks are found, repair and retest.
  - Part 2. Plug all fixtures, sinks, showers, and tubs and fill with water. Release the water in all fixtures simultaneously to obtain the maximum possible drain piping flow. As water is draining, check for leaks. If any are found, repair and retest.
4. **Connect to outlet.** Connect the main drain line to the site sewer/septic hook-up, using an approved elastomer coupling (Figure 47).



**Choosing glues.** Use only solvents and glues compatible with the pipe (ABS or PVC). Follow manufacturer's instructions.


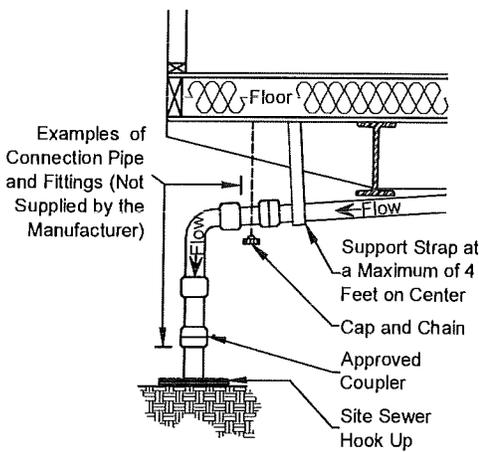


Figure 47. DWV connection to sewer/septic

5. **Install supports.** Install permanent drain line supports at a distance of four feet o.c. or less (see Figure 45, Figure 47, and Figure 48).

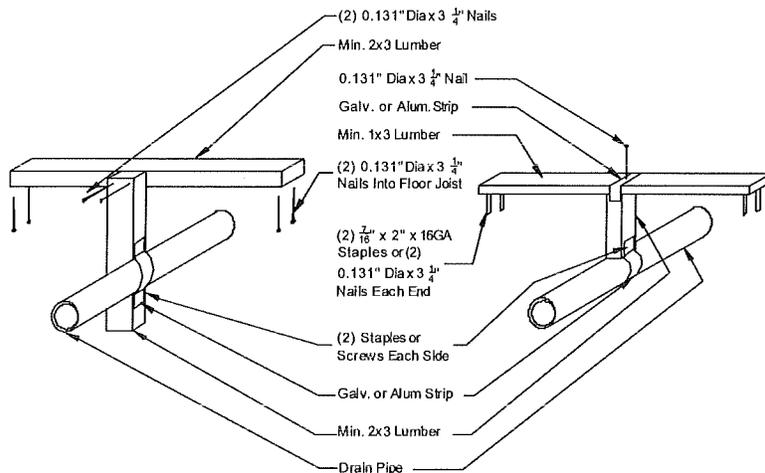

- 6. Insulate.** Replace all insulation and make sure all potentially exposed portions of the DWV system are well insulated to protect against freezing.


## STEP 6. CONNECT GAS LINES

The gas crossover connection may use quick disconnect fittings or threaded connectors. Find the connection location below the floor at the marriage line and gather the connectors (they may be shipped loose if not present under the home).

For quick disconnect fittings (**Figure 49**), remove any dust caps and then with one hand, pull back on the quick disconnect device, snap it over the quick disconnect adaptor and release it to complete the connection.

For threaded connectors (**Figure 50**), remove the black cap and nipple (or any other plugs, such as a black iron plug) from both the supply and receiving sides and screw the connector onto the supply and return pipes as necessary.

Check for leaks before connecting to gas service (see **Connect Utilities, STEP 3. CONNECT GAS SERVICE**, p. 93).

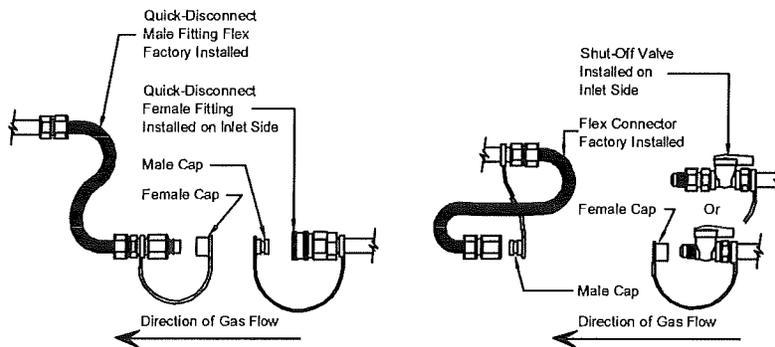

## STEP 7. CONNECT TELEPHONE AND CABLE TV WIRING

Install telephone and cable television wiring in accordance with the requirements of the LAHJ, the NEC, and NFPA No.70-2005. When making crossover connections or installing telephone or cable television wires, do not run them in the same raceway as, or in close proximity to, high voltage electrical conductors or cables.

Wires should only be installed by trained professionals.

**Figure 48.** DWV pipe support options



### Protect pipes from

**freezing.** If the home is to be left unheated in cold weather, pour antifreeze solution into all drain traps, including sinks, tubs, and toilets. Be sure that the antifreeze is safe for the fixtures and P-traps.

### Installing quick

**disconnect fittings.** Do not use tools, lubricants, or sealants with quick disconnect fittings.

### Gas test precautions.

Do not connect to gas service until tests described in **Connect Utilities** have been successfully completed.

**Figure 49.** Gas crossover with quick disconnect fittings

**Figure 50.** Gas crossover with threaded connectors



### Installing wiring.

When installing telephone and cable television wires, do not damage electrical wires, plumbing lines, or ducts. Serious personal injury or death could result from damage to electrical wires.

▶ go to **Complete the Interior** (p. 69)

# Complete the Interior

This chapter covers the completion of the home's interior finishes including finishing walls, ceilings, flooring, trim, and miscellaneous items.

## Follow the Steps below:

- ▼ **STEP 1. ALIGN MARRIAGE WALLS** (p. 69)
- ▼ **STEP 2. FINISH GYPSUM BOARD** (p. 69)
- ▼ **STEP 3. COMPLETE WALL AND CEILING FINISHES** (p. 70)
- ▼ **STEP 4. COMPLETE CARPET** (p. 70)
- ▼ **STEP 5. COMPLETE TRIM** (p. 70)
- ▼ **STEP 6. INSTALL SHIP LOOSE ITEMS** (p. 70)

## STEP 1. ALIGN MARRIAGE WALLS

Align and secure walls at marriage line openings as follows:

1. **Align walls.** Align walls and clamp in place.
2. **Fasten walls.** Secure clamped walls together with metal straps or long screws so they do not move when the clamps are removed. Insert wood wedges in gaps between walls, and glue and screw to create a tight connection.
3. **Fill gaps.** Fill any remaining gaps with wood or sheathing material.

Does the home require patching and finishing gypsum board walls or ceilings?

- ▶ **YES, go to STEP 2. FINISH GYPSUM BOARD, (p. 69)**
- ▶ **NO, go to STEP 3. COMPLETE WALL AND CEILING PANELS, (p. 70).**

## STEP 2. FINISH GYPSUM BOARD

Finish all unfinished gypsum board walls and ceilings as follows:

1. **Install panels.** Install ship loose gypsum panels using a 1/4 inch diameter bead of adhesive on all framing members and minimum 1-1/2 inch long drywall screws, nails, or staples at six inches o.c. along panel edges and 12 inches o.c. in the field into framing members.
2. **Mud seams.** Mud and tape all seams and corners, filling all fastener depressions. Follow mud manufacturer's directions.
3. **Paint.** When the final coat of mud is dry, prime and paint all unfinished gypsum board to match existing paint color and finish texture.

Does the home have pre-finished interior wall panels at the marriage line?

- ▶ **YES, go to STEP 3. COMPLETE WALL AND CEILING PANELS, (p. 70)**
- ▶ **NO, go to STEP 4. COMPLETE CARPET, (p. 70)**



**Fastening gypsum.** When attaching gypsum board, depress, but do not break the paper face with the fastener. Breaking the paper will weaken the connection.

**Using alternative materials.** Obtain the home manufacturer's approval before using interior finish materials other than those provided with the home.

### STEP 3. COMPLETE WALL AND CEILING FINISHES

Install interior ship loose wall and/or ceiling panels using a 1/4 inch diameter bead of polyvinyl acetate (PVA) adhesive on all framing members and fasten with minimum 1-1/2 inch long staples or nails at six inches o.c. along panel edges and 12 inches o.c. in the field into framing members.

### STEP 4. COMPLETE CARPET

Install and seam ship loose or rolled carpet as follows:

1. **Prepare floor.** Clean the floor of all dirt and debris and smooth the floor deck at the marriage line seams as necessary to ensure a level and smooth surface.
2. **Lay pad.** Lay down the carpet pad, if provided.
3. **Stretch carpet.** Ensuring all carpet "grain" runs in the same direction, fit and secure the carpet using a power carpet stretcher. Stretch the carpet up to the seam and tack it down temporarily until the carpet is seamed.
4. **Butter carpet.** "Butter" with carpet adhesive the edges of the carpet along the seam.
5. **Seam carpet.** Place heat bond tape under the seam with the glue side next to the carpet and apply heat from a seaming iron to the top of the seam, pressing the carpet into the glue.
6. **Keep scraps.** Retain reasonable size carpet scraps to protect carpet and flooring during move-in.

### STEP 5. COMPLETE TRIM

Using fine gauge wire staples or pin nails, install ship loose molding and wainscot paneling to finish trimming out ceilings, marriage line walls, front and rear end walls, and passageway doors where necessary.

### STEP 6. INSTALL SHIP LOOSE ITEMS

Remove all strapping, blocking, and packaging from appliances, windows, and doors. Install any drapes, mini-blinds, mirrors, door stops, closet shelves, and hardware per the product manufacturer's installation instructions.

Proceed based on the foundation type:

- ▶ Pier and ground anchor, go to **Install Stabilizing Systems**, (p. 71)
- ▶ Load bearing perimeter wall, go to **Connect Utilities** (p. 87).



**Installing carpet.** Only experienced carpet installers should install carpet. Failure to follow the carpet manufacturer's directions may void the carpet warranty.



#### **Stagger seams.**

Stagger all seams. For example, locate the carpet pad seam three inches to left of marriage line and the carpet seam three inches to right of marriage line.

## Install Stabilizing Systems

This chapter covers the design and installation of the stabilizing system which secures the home against lateral and upward forces caused by wind. The system covered here uses earth (or ground) anchors and steel straps connected to the home's longitudinal steel beams and/or exterior walls. Stabilizer plates may also be used to prevent the anchor head from moving laterally in the ground. An anchor, strap, and stabilizer plate (if used) together are referred to as a tie-down.

All tie-downs must be listed.

Anchors can also be mounted in concrete footings when there is enough concrete mass (weight) to resist the lateral and upward forces. This type of system is not covered in this manual.

Approved anchoring systems other than what is shown in this manual may be used when approved by local authority having jurisdiction.

Details shown in this section by William J. Kalker, Jr., P.E. may be used by corporate owner Champion Home Builders Inc.

Alternate Stabilizing System on addendum sheets 71A, 71B. & 71C may be used for installation of & placement of anchors shown in this section. Anchor system material specifications & strap installation

When an installer does not provide support and anchorage in accordance with the approved manufacturer's installation instructions, or encounters site conditions (such as areas that are subject to flood damage or high seismic risk) or other conditions that prevent the use of the instructions provided in this manual, the installer must obtain special site-specific instructions or use a design approved by a registered engineer or registered architect.


### Follow the Steps below:

- ▼ **PIER CONSTRUCTION** (p. 72)
- ▼ **TIEDOWN INSTALLATION AND PLACEMENT** (p. 74)
- ▼ **TIEDOWN SPACINGS** (p. 78)
- ▼ **MATE LINE ANCHORAGE** (p. 80)
- ▼ **LONG. ANCHORAGE** (p. 81)
- ▼ **INSTALL STRAPS** (p. 82)
- ▼ **TIGHTEN AND ADJUST STRAPS** (p. 86 )



**Need for a stabilizing system.** The manufactured home must be secured against the wind by the use of an anchor assembly or an alternative foundation system. Where site or other conditions prohibit the use of the manufacturer's instructions, a registered engineer or registered architect must design the stabilizing system.

**Flood and seismic forces.** The stabilizing system requirements in this chapter do not consider flood or seismic loads and are not intended for use in flood or seismic hazard areas. In those areas retain a registered engineer or registered architect to design the stabilizing system.

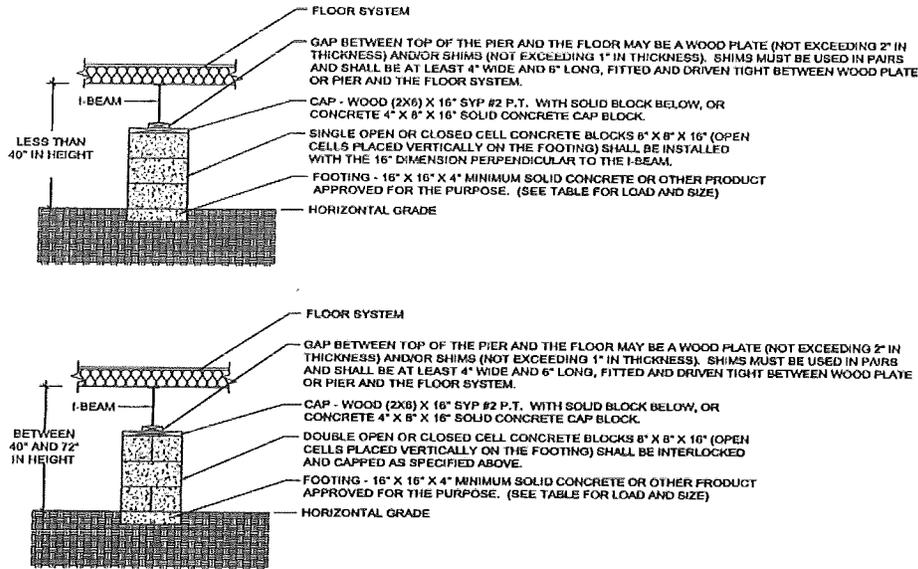

NOTE: FOOTINGS ARE TO BE PLACED ON FIRM, UNDISTURBED STABLE SOIL WITH ALL ORGANIC MATERIAL REMOVED FROM BELOW THE FOOTING. NORMAL SITE CONDITIONS REQUIRE THAT THE BOTTOM OF THE FOOTING MUST BE LOCATED A MINIMUM OF 12 INCHES BELOW THE NATURAL GRADE AND ALSO MUST BE LOCATED BELOW THE FROST DEPTH IN THE AREA THE BUILDING IS LOCATED. SHALLOWER FOOTING DEPTHS MAY BE INSTALLED IF THE CONDITIONS AT THE SITE PROVIDE STABLE SUPPORT CONDITIONS FOR THE FOOTING AT DEPTHS LESS THAN 12 INCHES. THE CONTRACTOR OR LOCAL DESIGNER ASSUMES RESPONSIBILITY FOR SIZING THE FOOTING AND/OR INSURING THAT ALL FOOTINGS ARE ADEQUATELY SUPPORTED.

NOTE: PIER CONSTRUCTIONS SPECIFIED ABOVE ARE TO BE 'DRY STACKED' (I.E., MORTAR NOT REQUIRED). ALL CONCRETE BLOCKS MUST COMPLY WITH ASTM C-90 AND ASTM C-140 WITH A MINIMUM COMPRESSIVE STRENGTH (f<sub>m</sub>) OF 2000 PSI. A MINIMUM CLEARANCE OF 12 INCHES MUST BE MAINTAINED BETWEEN THE LOWEST COMPONENT OF THE STEEL CHASSIS FRAME AND THE GROUND.



## PIER CONSTRUCTION FOR PIERS SUPPORTING THE STEEL FRAME

HIGHLAND MANUFACTURING  
REV 10/13/08

MODEL MANUFACTURER'S INSTALLATION MANUAL



February 1, 2011



FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS APPROVED  
02  
2/15/2011

# Install Stabilizing Systems

300.073

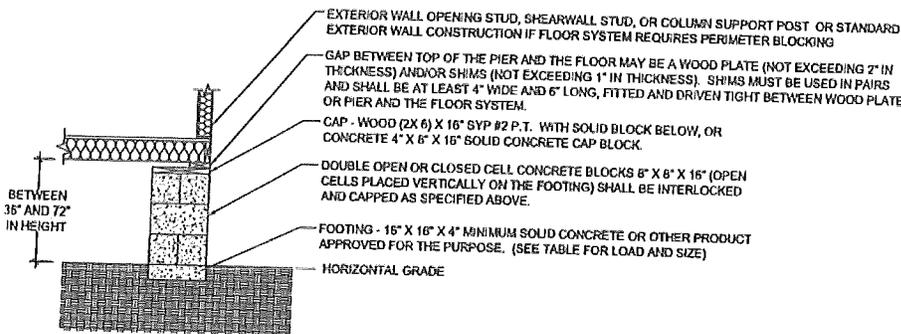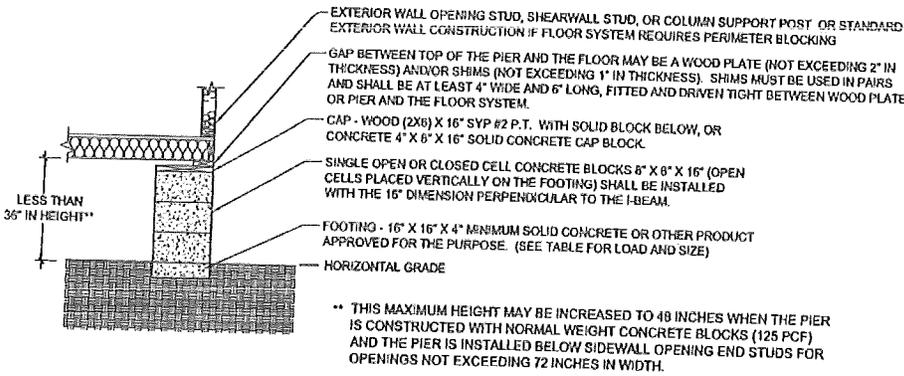

NOTE: FOOTINGS ARE TO BE PLACED ON FIRM, UNDISTURBED STABLE SOIL WITH ALL ORGANIC MATERIAL REMOVED FROM BELOW THE FOOTING. NORMAL SITE CONDITIONS REQUIRE THAT THE BOTTOM OF THE FOOTING MUST BE LOCATED A MINIMUM OF 12 INCHES BELOW THE NATURAL GRADE AND ALSO MUST BE LOCATED BELOW THE FROST DEPTH IN THE AREA THE BUILDING IS LOCATED. SHALLOWER FOOTING DEPTHS MAY BE INSTALLED IF THE CONDITIONS AT THE SITE PROVIDE STABLE SUPPORT CONDITIONS FOR THE FOOTING AT DEPTHS LESS THAN 12 INCHES. THE CONTRACTOR OR LOCAL DESIGNER ASSUMES RESPONSIBILITY FOR SIZING THE FOOTING AND/OR INSURING THAT ALL FOOTINGS ARE ADEQUATELY SUPPORTED.

NOTE: PIER CONSTRUCTIONS SPECIFIED ABOVE ARE TO BE 'DRY STACKED' (I.E., MORTAR NOT REQUIRED). ALL CONCRETE BLOCKS MUST COMPLY WITH ASTM C-90 AND ASTM C-140 WITH A MINIMUM COMPRESSIVE STRENGTH ( $f_m'$ ) OF 2000 PSI. A MINIMUM CLEARANCE OF 12 INCHES MUST BE MAINTAINED BETWEEN THE LOWEST COMPONENT OF THE STEEL CHASSIS FRAME AND THE GROUND.



## PIER CONSTRUCTION FOR PIERS NOT SUPPORTING THE STEEL FRAME

HIGHLAND MANUFACTURING  
REV 10/13/08


MODEL MANUFACTURER'S INSTALLATION MANUAL

CHAMPION

FEDERAL MANUFACTURING  
HOUSING CONSTRUCTION  
& SAFETY STANDARDS  
APPROVED  
02  
2/15/2011

## TYPICAL SINGLEWIDE TIEDOWN INSTALLATION

WIND ZONE 1  
(15 PSF)

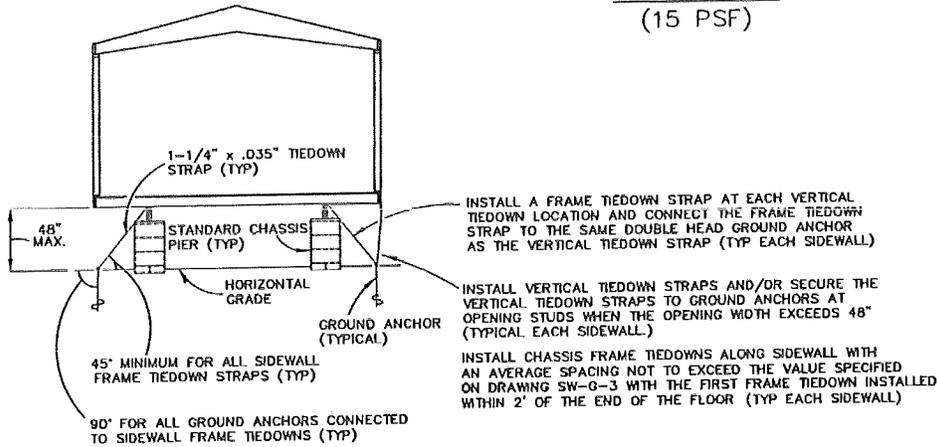

NOTE: SEE DWG SW-G-1 FOR LONGITUDINAL TIEDOWN ANCHOR SPECIFICATIONS

### GENERAL NOTES:

1. ALL TIEDOWN STRAPS AND CONNECTING HARDWARE MUST BE CERTIFIED BY A PROFESSIONAL ENGINEER OR A RECOGNIZED TESTING LABORATORY TO ADEQUATELY SUPPORT A 3150# ALLOWABLE LOAD MINIMUM (ULTIMATE LOAD 4725# MINIMUM) AND/OR TO COMPLY WITH ASTM D3953-91.
2. ALL GROUND ANCHORS SPECIFIED ON THIS DRAWING MUST BE CERTIFIED BY A PROFESSIONAL ENGINEER OR A RECOGNIZED TESTING LABORATORY TO ADEQUATELY SUPPORT A 3150# ALLOWABLE WITHDRAWAL LOAD MIN. (ULTIMATE LOAD 4725# MIN.) WHEN LOADED BOTH PARALLEL WITH THE ANCHOR SHAFT AND AT A 45° ANGLE FROM THE ANCHOR SHAFT.
3. THE GROUND ANCHORS MUST BE INSTALLED TO THEIR FULL DEPTH IN ACCORDANCE WITH THE MANUFACTURERS INSTRUCTIONS (IG. APPROVED FOR INSTALLATION IN THE SOIL TYPE WHICH EXISTS AT THE SITE, ETC.) AND MUST EXTEND BELOW THE FROST LINE AND BE AT LEAST 12" ABOVE THE WATER TABLE.
4. ALL GROUND ANCHORS CONNECTED TO THE SIDEWALL FRAME TIEDOWNS MUST BE PROVIDED WITH STABILIZER PLATES TO MINIMIZE HORIZONTAL MOVEMENT.

P.E. SEAL	THIRD PARTY	REVISIONS			HIGHLAND MFR		
		LTR:	BY:	DATE:	ANCHORAGE SYSTEM FIELD INSTALLED		
					DRAWN BY: WK	DAPIA NO.:	SW-FI-1
					DATE: 10/8/08	SC: N.T.S.	


February 1, 2011

300.75

## TYPICAL SINGLEWIDE TIEDOWN PLACEMENT

STANDARD VERTICAL TIEDOWNS ARE REQUIRED ON EACH SIDE OF OPENINGS GREATER THAN 48" IN WIDTH (TYPICAL EACH SIDEWALL)

WIND ZONE 1  
(15 PSF)

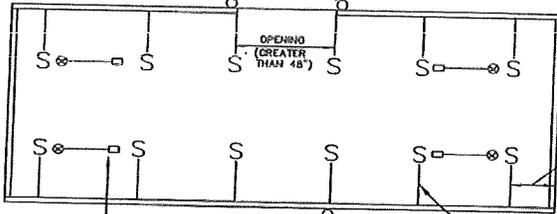

INSTALL 1ST CHASSIS FRAME TIEDOWN WITHIN 24" FROM THE END OF FLOOR (TYP EACH SIDEWALL AT EACH ENDWALL)

LONGITUDINAL ANCHORS INSTALLED AT EACH ENDWALL - INSTALL ONE LONGITUDINAL GROUND ANCHOR ON EACH STEEL BEAM AT EACH ENDWALL AS SHOWN ABOVE


INSTALL CHASSIS FRAME TIEDOWNS ALONG SIDEWALL WITH AN AVERAGE SPACING NOT TO EXCEED THE VALUE SPECIFIED ON DRAWING SW-G-3. (TYP EACH SIDEWALL)

EXCEPT AT OPENING WIDTHS LARGER THAN 48", STANDARD VERTICAL TIEDOWNS ARE OPTIONAL (NOT REQUIRED) IN WIND ZONE 1.

WHEN A VERTICAL TIEDOWN IS INSTALLED, INSTALL A CHASSIS FRAME TIEDOWN AT EACH VERTICAL TIEDOWN LOCATION AND CONNECT THE FRAME TIEDOWN STRAP TO THE SAME DOUBLE HEAD GROUND ANCHOR AS THE VERTICAL TIEDOWN STRAP (TYP EACH SIDEWALL)

KEY:


- = STANDARD VERTICAL TIEDOWN GROUND ANCHOR
- ⊗ = LONGITUDINAL TIEDOWN GROUND ANCHOR
- S = FRAME TIEDOWN STRAP CONNECTION TO STEEL BEAM
- = LONG. TIEDOWN STRAP CONNECTION TO STEEL BEAM

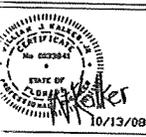P.E. SEAL 	THIRD PARTY	REVISIONS			HIGHLAND MFR	
		LTR:	BY:	DATE:		
					ANCHORAGE SYSTEM FIELD INSTALLED	
					DRAWN BY: TC	DAPIA NO.:
					DATE: 10/8/08	SC: N.T.S.
					SW-G-1	

MODEL MANUFACTURER'S INSTALLATION MANUAL

## TYPICAL DOUBLEWIDE TIEDOWN INSTALLATION

WIND ZONE 1  
(15 PSF)

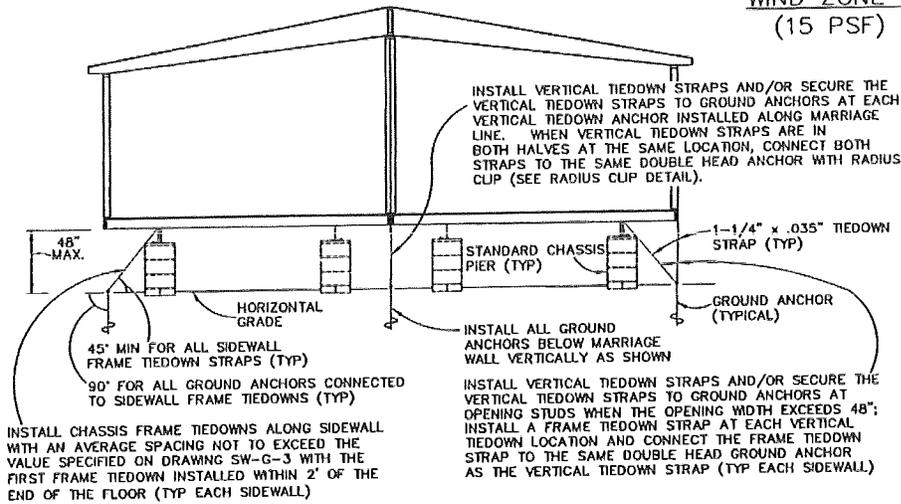

NOTE: SEE DWG SW-G-2 FOR LONGITUDINAL TIEDOWN ANCHOR SPECIFICATIONS

### GENERAL NOTES:

1. ALL TIEDOWN STRAPS AND CONNECTING HARDWARE MUST BE CERTIFIED BY A PROFESSIONAL ENGINEER OR A RECOGNIZED TESTING LABORATORY TO ADEQUATELY SUPPORT A 3150# ALLOWABLE LOAD MINIMUM (ULTIMATE LOAD 4725# MINIMUM) AND/OR TO COMPLY WITH ASTM D3953-91.
2. ALL GROUND ANCHORS SPECIFIED ON THIS DRAWING MUST BE CERTIFIED BY A PROFESSIONAL ENGINEER OR A RECOGNIZED TESTING LABORATORY TO ADEQUATELY SUPPORT A 3150# ALLOWABLE WITHDRAWAL LOAD MIN. (ULTIMATE LOAD 4725# MIN.) WHEN LOADED BOTH PARALLEL WITH THE ANCHOR SHAFT AND AT A 45° ANGLE FROM THE ANCHOR SHAFT.
3. THE GROUND ANCHORS MUST BE INSTALLED TO THEIR FULL DEPTH IN ACCORDANCE WITH THE MANUFACTURERS INSTRUCTIONS (IG. APPROVED FOR INSTALLATION IN THE SOIL TYPE WHICH EXISTS AT THE SITE, ETC.) AND MUST EXTEND BELOW THE FROST LINE AND BE AT LEAST 12" ABOVE THE WATER TABLE.
4. ALL GROUND ANCHORS CONNECTED TO THE SIDEWALL FRAME TIEDOWNS MUST BE PROVIDED WITH STABILIZER PLATES TO MINIMIZE HORIZONTAL MOVEMENT.

P.E. SEAL	THIRD PARTY	REVISIONS			HIGHLAND MFR		
		LTR:	BY:	DATE:	ANCHORAGE SYSTEM NEAR BEAM		
					DRAWN BY: TC	DAPIA NO.:	SW-FI-2
					DATE: 10/8/08	SC: N.T.S.	

MODEL MANUFACTURER'S INSTALLATION MANUAL

February 1, 2011



FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS APPROVED  
D2

2/15/2011


300.077

## TYPICAL DOUBLEWIDE TIEDOWN PLACEMENT

NOTE: FOR TRIPLEWIDE OR LARGER BUILDINGS, INSTALL THE MATE LINE ANCHORS SHOWN BELOW ON EACH MATE LINE IN THE LARGER BUILDING, INSTALL THE SIDEWALL ANCHORS SHOWN BELOW ON EACH OF THE EXTERIOR SIDEWALLS (ONLY) OF THE LARGER BUILDING AND INSTALL ONE LONGITUDINAL ANCHOR ON EACH STEEL BEAM AT EACH ENDWALL IN THE LARGER BUILDING AS SHOWN BELOW.

WIND ZONE 1  
(15 PSF)

STANDARD VERTICAL TIEDOWNS ARE REQUIRED ON EACH SIDE OF OPENINGS GREATER THAN 48" IN WIDTH (TYPICAL EACH SIDEWALL AND MARRIAGE WALL)

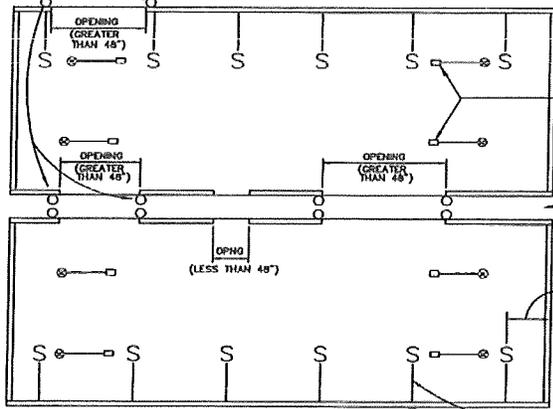

LONGITUDINAL ANCHORS INSTALLED AT EACH ENDWALL - INSTALL ONE LONGITUDINAL GROUND ANCHOR ON EACH STEEL BEAM AT EACH ENDWALL AS SHOWN (TYP EACH MODULE)

DOUBLEWIDE FLOOR SHOWN SEPARATED FOR CLARITY

INSTALL 1ST CHASSIS FRAME TIEDOWN WITHIN 24" FROM THE END OF FLOOR (TYP EACH SIDEWALL AT EACH ENDWALL)

INSTALL CHASSIS FRAME TIEDOWNS ALONG SIDEWALL WITH AN AVERAGE SPACING NOT TO EXCEED THE VALUE SPECIFIED ON DRAWING SW-G-3. (TYP EACH SIDEWALL)

EXCEPT AT OPENING WIDTHS LARGER THAN 48", STANDARD VERTICAL TIEDOWNS ARE OPTIONAL (NOT REQUIRED) IN WIND ZONE 1.

WHEN A VERTICAL TIEDOWN IS INSTALLED, INSTALL A CHASSIS FRAME TIEDOWN AT EACH VERTICAL TIEDOWN LOCATION AND CONNECT THE FRAME TIEDOWN STRAP TO THE SAME DOUBLE HEAD GROUND ANCHOR AS THE VERTICAL TIEDOWN STRAP (TYP EACH SIDEWALL)

**KEY:**

- = STANDARD VERTICAL TIEDOWN GROUND ANCHOR
- ⊗ = LONGITUDINAL TIEDOWN GROUND ANCHOR
- S = FRAME TIEDOWN STRAP CONNECTION TO STEEL BEAM
- = LONG. TIEDOWN STRAP CONNECTION TO STEEL BEAM

P.E. SEAL	THIRD PARTY	REVISIONS	<b>HIGHLAND MFR</b>
		LTR: BY: DATE:	ANCHORAGE SYSTEM FIELD INSTALLED
		DRAWN BY: TC	DAPIA NO.:
		DATE: 10/8/08	SC: N.T.S.
		SW-G-2	

MODEL MANUFACTURER'S INSTALLATION MANUAL



300.079

## WIND ZONE 1

MAXIMUM MARRIAGE WALL VERTICAL TIEDOWN TRIBUTARY DISTANCES					
FLOOR WIDTH	WIND ZONE	ANCHOR TYPE/ FASTENING	MAX. TRIB. DISTANCE VERTICAL TIEDOWN	MAX. TRIB. DIST. * WHEN COLS. IN BOTH HALVES CONNECTED TO SAME GROUND ANCHOR	
142" FLOOR	1	3"x2"x8"x3/16" ANGLE WITH 4-5/16"x3-1/2" LAGS	53.6'	71.0'	
164" FLOOR	1	3"x2"x8"x3/16" ANGLE WITH 4-5/16"x3-1/2" LAGS	46.4'	61.5'	
174" FLOOR	1	3"x2"x8"x3/16" ANGLE WITH 4-5/16"x3-1/2" LAGS	43.7'	57.9'	

\* SUM OF TRIB. DISTANCES FOR BOTH COLUMNS CANNOT EXCEED THE VALUE SPECIFIED.

MAXIMUM TIEDOWN SPACINGS			
HOME SIZE	WIND ZONE	MAXIMUM SIDEWALL HEIGHT	MAX. SIDEWALL VERTICAL/FRAME TIEDOWN SPACING
142" FLOOR W/ 16" O.H. DOUBLEWIDE **	1	8'-0"	10'-0" O.C. NEAR BEAM
164" FLOOR W/ 10" O.H. DOUBLEWIDE **	1	8'-0"	10'-0" O.C. NEAR BEAM
174" FLOOR W/ 16" O.H. DOUBLEWIDE **	1	8'-0"	8'-6" O.C. NEAR BEAM
164" FLOOR W/ 6" O.H. SINGLEWIDE **	1	8'-0"	10'-0" O.C. NEAR BEAM
180" FLOOR W/ 7" O.H. SINGLEWIDE **	1	8'-0"	10'-0" O.C. NEAR BEAM

O.H. = MAX. SIDEWALL ROOF EAVE OVERHANG


\*\* ROOF PITCH < 20 DEGREES WITH 82-1/2" STEEL BEAM SPACING

ALL GROUND ANCHORS SPECIFIED ON THIS DRAWING MUST BE CERTIFIED BY A PROFESSIONAL ENGINEER OR A RECOGNIZED TESTING LABORATORY TO ADEQUATELY SUPPORT A 3150 LB. ALLOWABLE WITHDRAWAL LOAD (ULTIMATE LOAD = 4725 LB) MIN. WHEN LOADED AT A 45° ANGLE FROM THE ANCHOR SHAFT AND A 3150 LB ALLOWABLE WITHDRAWAL LOAD (ULTIMATE LOAD = 4725 LB) MIN. WHEN LOADED PARALLEL TO THE ANCHOR SHAFT.

MINIMUM GRADE LUMBER IS SPF UNLESS OTHERWISE NOTED.

<b>HIGHLAND MFR</b>	
DATE: 10/10/08	DRAWN BY: WK
CODES: MSSS	REVISIONS:
LABELS: HD	
SCALE: MS	
ANCHORAGE SYSTEM	
SHEET	SW-G-3
FACTORY	



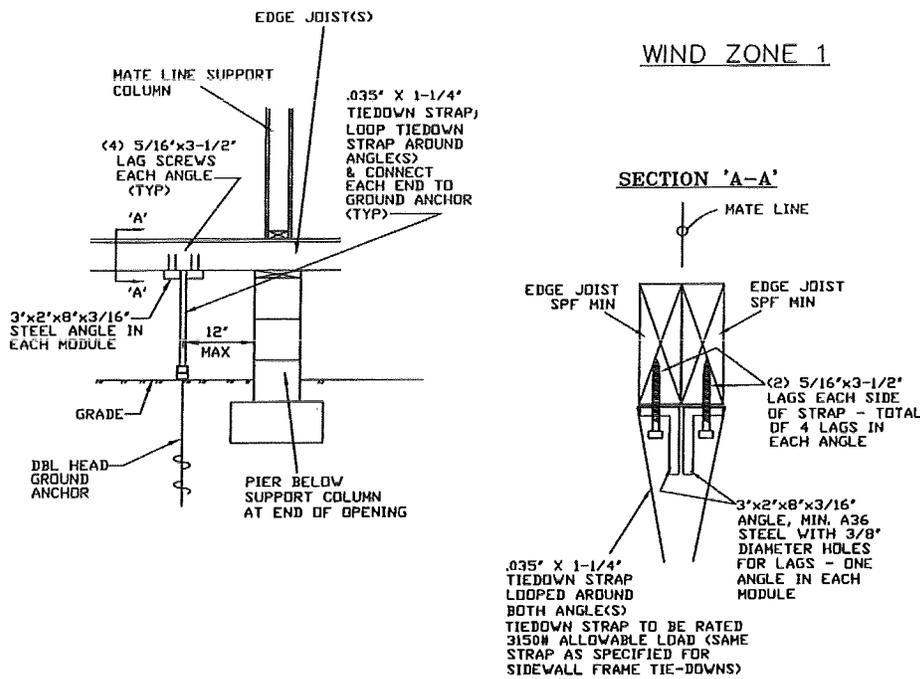

ALL GROUND ANCHORS SPECIFIED ON THIS DRAWING MUST BE CERTIFIED BY A PROFESSIONAL ENGINEER OR A RECOGNIZED TESTING LABORATORY TO ADEQUATELY SUPPORT A 3150 LB ALLOWABLE WITHDRAWAL LOAD (ULTIMATE LOAD = 4725 LB) MIN. WHEN LOADED AT A 45° ANGLE FROM THE ANCHOR SHAFT AND A 3150 LB ALLOWABLE WITHDRAWAL LOAD (ULTIMATE LOAD = 4725 LB) MIN. WHEN LOADED PARALLEL TO THE ANCHOR SHAFT.

### MATE LINE SUPPORT ANCHOR

INSTALL UPLIFT ANCHORS AT OPENING STUDS AT EACH END OF OPENINGS FOR OPENINGS EXCEEDING 4 FEET IN WIDTH

	THIRD PARTY	REVISIONS			<b>HIGHLAND MFR</b> MATE LINE ANCHORAGE SYSTEM FIELD INSTALLED	
		LTR:	BY:	DATE:		
					DRAWN BY: TC    DAPIA NO.: DATE: 10/8/08    SC: N.T.S.	SW-G-4

MODEL MANUFACTURER'S INSTALLATION MANUAL

February 1, 2011






FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
 APPROVED  
 02  
 2/15/2011

# Install Stabilizing Systems

300.081

ONE (1) LONG TIEDOWN ANCHOR WITH GROUND ANCHOR INSTALLED BELOW STEEL BEAM - TYP (TIEDOWN STRAP TO BE ALIGNED WITH STEEL BEAM LENGTH WITH GROUND ANCHOR INSTALLED BELOW THE STEEL BEAM)

INSTALL LISTED BEAM CLAMP LONGITUDINAL ANCHOR ON EACH STEEL BEAM AT EACH END OF FLOOR

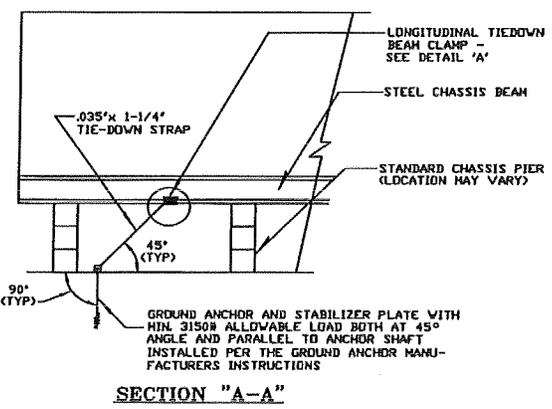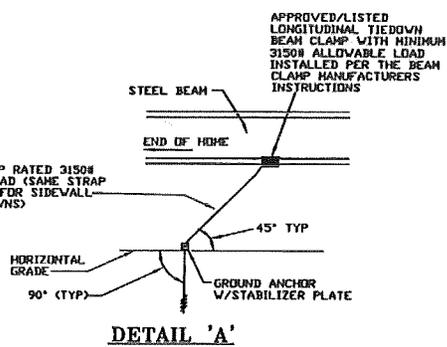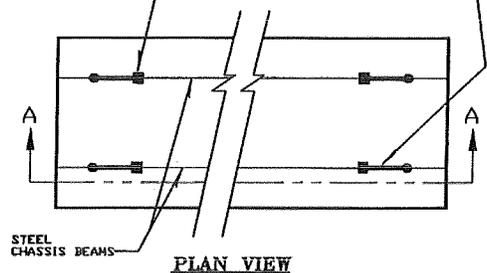

- General Notes:**
1. This detail applies to a maximum 180' floor width with a maximum 20 degree roof pitch and a maximum 8'-0" sidewall height
  2. Wind Zone I units must have one (1) longitudinal anchor on each steel beam at each end of the floor.

**WIND ZONE 1**

P.E. SEAL	THIRD PARTY	REVISIONS	<b>HIGHLAND MFR</b>	
		LTR: BY: DATE	LONG. ANCHORAGE SYSTEM FIELD INSTALLED	
		DRAWN BY: TO DAPHA HQ:	SW-G-5	
		DATE: 10/10/08	SC: N.T.S.	

MODEL MANUFACTURER'S INSTALLATION MANUAL



**TABLE 15. ANCHOR SYSTEM MATERIALS SPECIFICATIONS**

Component	Specification
<b>Anchors</b>	Anchors must be tested and listed to resist a minimum ultimate load of 4,725 lbs and a minimum allowable working load of 3,150 lbs or ultimate and corresponding working load limited by soil conditions and anchor length. The working load is the maximum load the designer can use. Ground anchors must be provided with protection against weather deterioration and corrosion at least equivalent to that provided by a coating of zinc on steel of not less than 0.30 oz per sq ft of surface coated.
<b>Straps</b>	Straps must be minimum 1-1/4" x 0.035" zinc-coated (0.30 oz per sq ft) steel strapping conforming to ASTM D3953-97, Type 1, Grade 1, Finish B with a minimum allowable working load capacity of 3,150 lbs and a minimum ultimate load of 4,725 lbs. Slit or cut edges of zinc-coated strapping do not need to be zinc coated.
<b>Stabilizer plates</b>	The size and type of stabilizer plate, if required by the ground anchor manufacturer, will be specified in the anchor manufacturer's instructions. Stabilizer plates must be provided with protection against weather deterioration and corrosion at least equivalent to that provided by a coating of zinc on steel of not less than 0.30 oz per sq ft of surface coated. Alternatively, ABS stabilizer plates may be used when listed and certified for such use.

1.

## INSTALL STRAPS

Follow the instructions below to connect straps from the home to sidewall frame, end wall frame and vertical anchors.

Always protect straps at sharp corners including around I-beams with radius clips or other methods (**Figure 54**). Radius clips may be fabricated from 26ga (min) by 1 1/4-inch wide galvanized steel strap formed to fit around corners.



**Grading area around anchors.** Anchor heads should not rest in sunken spots. Grade the ground so that water does not collect around anchor heads, but runs away from the anchor and out from under the home. Do not bury anchor heads.

**Figure 51.** *In-line anchor configuration*


**Figure 52.** *Stabilizer plate configuration*

**Figure 53.** *Determining anchor and stabilizer plate location*



**Soil depression.** Do not locate anchor heads in soil depressions where water may pool.

Figure 54. Radius clips

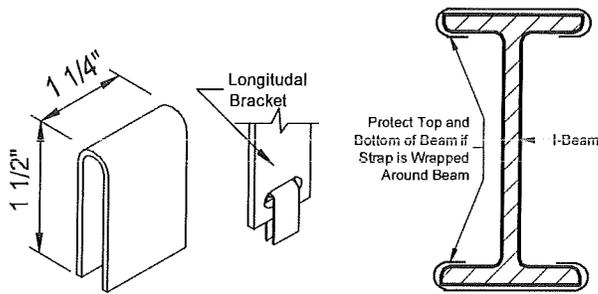

### SPLICING STRAPS

Splicing may be required when a pre-cut strap is of insufficient length. Splices in tie-down straps are not permitted in a 'Y' configuration. Overlap straps by 12 inches, applying one splice clip from above and the other from below; use a crimping tool to tightly seal the splice clips (Figure 55). Do not run any portion of the splice through an anchor head bolt.


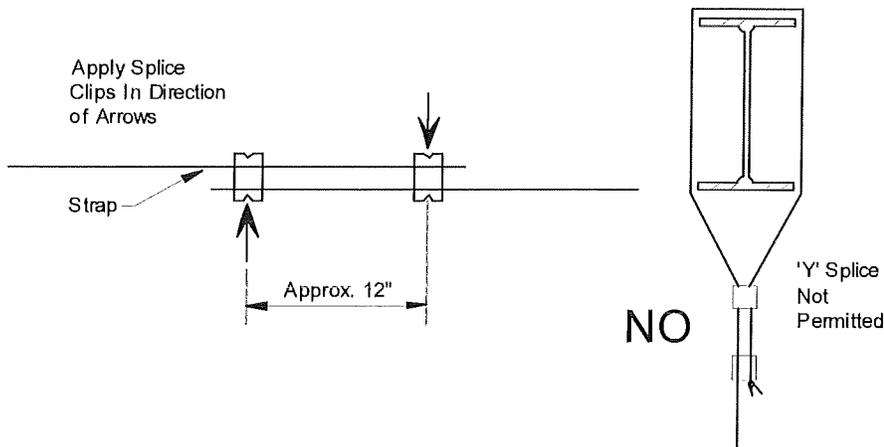


Figure 55. Tie-down strap splice

### SIDEWALL FRAME ANCHORS

Install straps to sidewall frame anchors as follows:

1. **Connect strap to home.** Connect one end of the strap to the home connection point using approved buckles or clips (swivel or hook clip preferred).

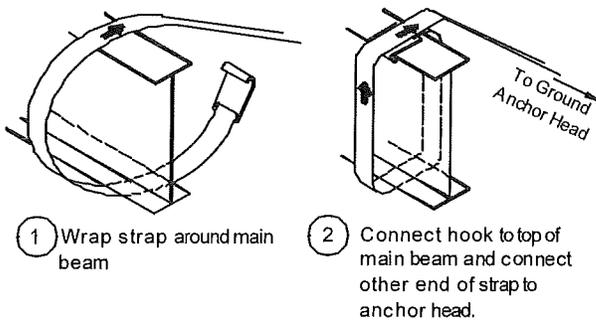


2. **Connect strap to anchor.** Connect the other end of the strap to the split bolt in the anchor. Leave enough strap length to be able to make at least three, but no more than five complete turns around the bolt before it becomes tight (approximately 2 1/2 inches per turn or 7 1/2 to 13 inches total). Fewer than three turns and the strap may not hold onto the bolt when force is applied. Conversely, more than five turns may not fit within the U-channel of the

Figure 56. Strap to beam connection



**Strap to beam connection.** Regardless of the strap supplier's recommendations, the strap must be connected to the top of the main beam to prevent damage to the structure.

anchor head. Follow the procedure outlined in **Figure 57**.

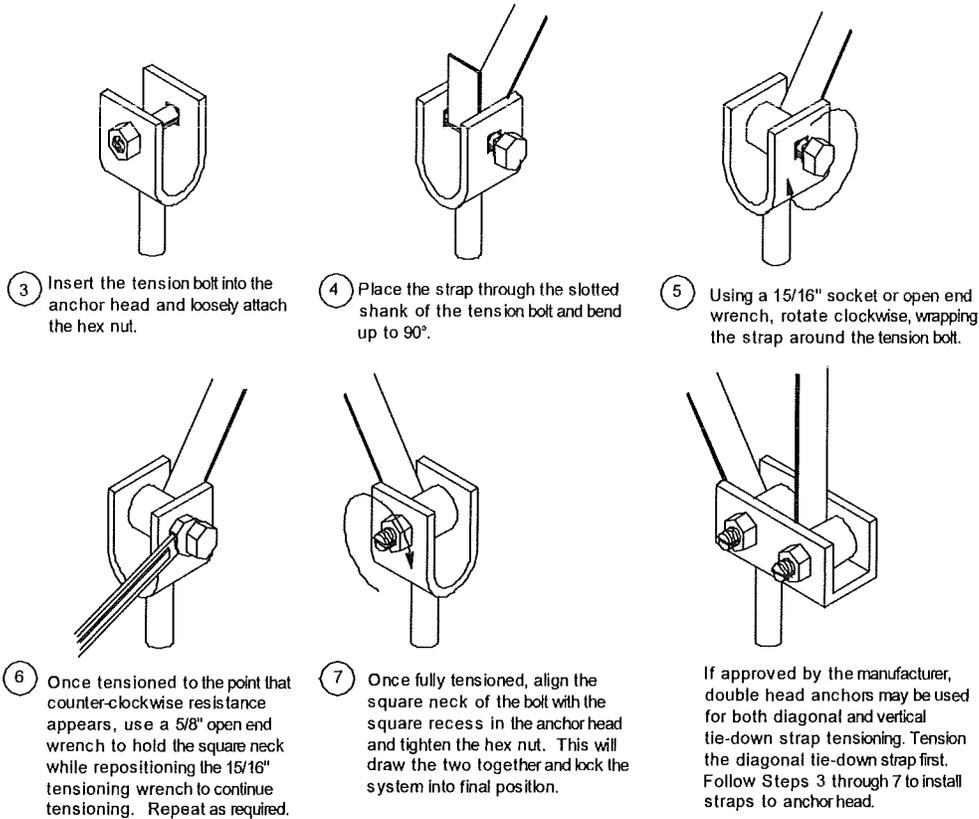

3. **Pretension anchor.** For anchors with stabilizer plates, pretension the anchor by pulling it up to the stabilizer plate using the strap and take-up bolt to move the anchor head. Continue pulling the strap until the plate moves a small amount (about 1/2 inch). This is called packing the plate and it will yield the strongest resistance (the bottom of the anchor head should be maximum 1/4 inch above the top of the stabilizer plate).


### END WALL FRAME ANCHORS

Attach straps to the bracket welded by the manufacturer to the frame (**Figure 58**). If no brackets have been installed, use approved beam clamps designed specifically for this purpose, available from anchor suppliers. Connect straps to anchors following same procedure as for sidewall frame anchors.

**Figure 57.** Procedure for connecting the strap to frame and anchor




**Anchor head location.** As the anchor is pulled up to meet the stabilizer plate, the head of the anchor will rise. In its final position, the bottom of the anchor head should be no more than 1/4 inch above the top of the stabilizer plate.

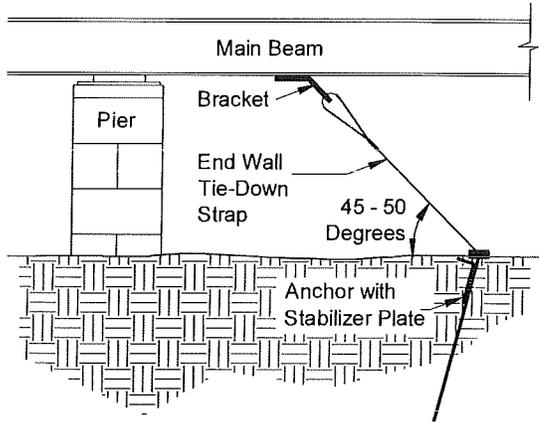

**Figure 58.** End wall frame anchor attachment method


### VERTICAL ANCHORS

If vertical straps have been attached to the home by the manufacturer, connect the other end of the straps to the anchor heads. If not, install the strap from one head of a double-headed anchor, up through the brackets (if provided) (Figure 59) or around the I-beam (Figure 60) and down to the other anchor bolt in a continuous loop.

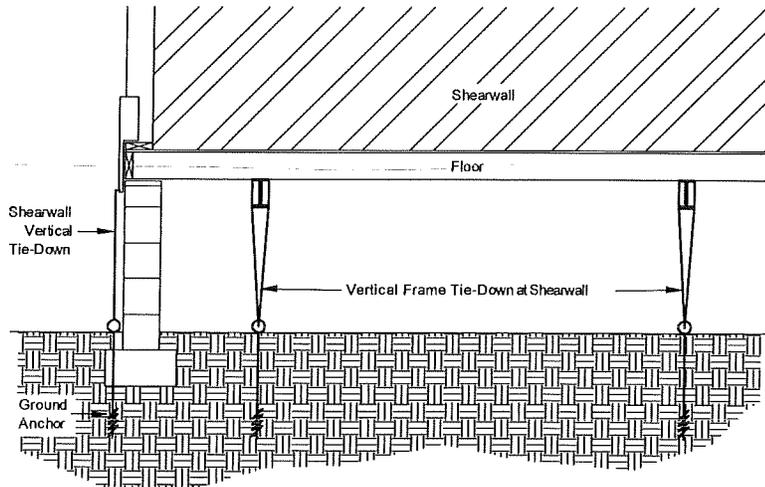

**Figure 59.** Vertical tie-downs

For marriage line vertical tie-downs where brackets have not been factory installed, install provided steel angles in straps as shown in Figure 60.

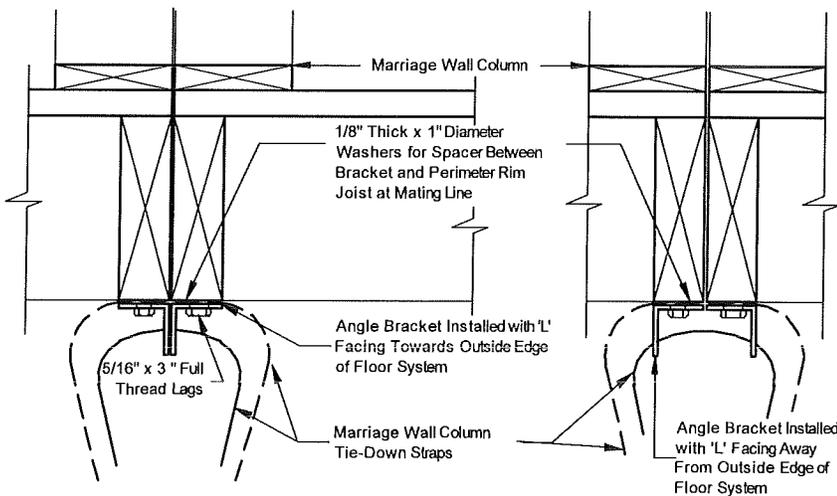

**Figure 60.** Marriage line tie-down connections using steel angles. Strap may run between steel angle and rim joist (shown as dashed line)

## TIGHTEN AND ADJUST STRAPS

After all anchors have been installed and pre-tensioned, recheck all anchor straps to assure that they are tight and that the anchor shafts have remained in contact with the stabilizer plates. Do not over-tension straps.

▶ go to **Connect Utilities** (p. 87)

## Connect Utilities

Relocation of homes: The installation process shall be reversed to make the home ready for transportation.

This chapter contains procedures and requirements for the connection and testing of utility hook-ups. Responsibility for making utility connections varies by location. Consult the LAHJ and the utility before connecting the home to any utilities.

### Follow the Steps below:

- ▼ STEP 1. CONNECT ELECTRICAL SERVICE (p. 87)
- ▼ STEP 2. CONNECT WATER SERVICE (p. 90)
- ▼ STEP 3. CONNECT GAS SERVICE (p. 93)
- ▼ STEP 4. CONNECT OIL SERVICE (p. 94)

### STEP 1. CONNECT ELECTRICAL SERVICE

The home is designed for connection to an electrical wiring system rated at 120/240 volt AC. All electrical field work must be done by a licensed electrician or other person approved by the LAHJ.

#### FEEDER WIRE AND EQUIPMENT SIZES

The current rating (in amperes) of the home can be found on the tag located on the outside next to the feeder or service entrance, and on the electrical distribution panel. Using this information, determine the required feeder wire size from **Table 16**. These sizes are based on an ambient temperature of 86 degrees Fahrenheit and do not take voltage drop into consideration.

Acceptable conductor types are: RHH, RHW, RHW-2, THHN, THHW, THW, THW2, THWN, THWN-2, XHHW, XHHW-2, SE, USE, and USE-2.

**TABLE 16. ELECTRICAL FEEDER WIRE AND EQUIPMENT SIZES FOR COPPER CONDUCTORS**

Main Breaker Size in Panel Box (AMPS)	Max. Neutral Feeder Load (AMPS)	Junction box size	Minimum Size Raceway Conduit Diameter (in)	Conductors (Cu)			
				Red & Black (Power)	White (Neutral)	Green (Grounding)	Bare Ground
50	35	NA	1	#4 AWG	#6 AWG	#10 AWG	#8
100	70	10x10x4	1-1/4	#4 AWG	#4 AWG	#6 AWG	#8
200	140	10x16x4	2	2/0 AWG	1/0 AWG	#6 AWG	#4
225	158	10x16x4	2	3/0 AWG	2/0 AWG	#4 AWG	#4
400	260	10x24x4	3	400 kcmil	300 kcmil	#3 AWG	1/0



**Special precautions when installing electrical service.** Installation of the electric power to the home can cause exposure to live electrical circuits. Exposure to live electrical circuits or improper grounding of the conductor in the panel board may result in severe shock or possible electrocution. A qualified installer must make the connections for the electric power.



## FEEDER CONNECTIONS

Feeder connections are made from above or from below the home as follows:

### From above – mast weatherhead feeder

The routing, connection, and support of the service drop must meet local codes. Homes equipped this way contain all necessary conduits to the electrical distribution panel. However, the feeder conductors (not provided with the home) are installed on site. If the masthead is located above the roof overhang, allow a minimum clearance of eight feet above all roof points that the conductors pass over. There are two exceptions to this rule: (1) The vertical clearance may be reduced to three feet if the roof has a minimum slope of 4 in 12; and (2) The vertical clearance may be reduced to 18 inches if no more than four feet of service-drop conductors pass above the roof overhang, and if they terminate at a through-the-roof raceway or approved support. A minimum clearance must also be provided from the final grade to the service-drop conductors. This measurement may vary from 10 feet to 18 feet, depending on the types of traffic anticipated below the service drop (refer to the NEC). Unless impractical, locate service heads above the point of attachment of the service-drop conductors and make them rain-tight. If individual conductors do not extend downward, form drip loops.

### From below – underside junction box feeder

A section of conduit is factory installed through the floor cavity. Connect to that conduit with approved fittings and conduit (not provided with the home) to the point where the service entrance cable enters the crawl space. Install properly-sized service entrance conductors from the main power supply to the panel board. Depending on the location of the main panelboard inside the home, or the point at which the service entrance conductors enter the crawl space, a separate service disconnect may be required. Refer to **Table 16** for the conductor and junction box requirements. The installer must provide the supply connection including the feeder conductors, junction box, and conduit connectors. Protect conductors emerging from the ground from a minimum of 18 inches below grade to eight feet above grade, or to the point of entrance to the home. The distance measured from the top surface of a buried cable, conduit, or raceway to the finished grade must meet the minimum burial requirements outlined in the NEC. Use a moisture-proof bushing at the end of the conduit from which the buried cable emerges.

## GROUNDING

The home must be properly grounded to protect the occupants. The only safe and approved method of grounding the home is through an electrically-isolated grounding bar in the manufactured home distribution panel board. This grounds all non-current-carrying metal parts to the electrical system in the home at a single point.

Each neutral conductor must be connected to the system grounding conductor on the the supply side of the main disconnect in accordance with Articles 250.24, 250.26, and 250.28 of the National Electrical Code, NFPA No. 70-2005.

Where the meter base has a disconnect (typically when the meter is more than 6 feet from the service electric panel, although this may vary by LAHJ) the ground and neutral should be bonded at that disconnect and then grounded to the driven earth ground. Four wires will leave the service electric panel to the disconnect. Three wires will enter the disconnect from the meter base (refer to **Figure 61**).

Where there is no disconnect on the meter base or between the meter base and service electric panel (typically when the meter is within 6 feet from the service electric panel, although this may vary by LAHJ), the main circuit breaker in the service electric panel becomes the first disconnect. In this case, the neutral and ground are bonded in the service electric panel and connected to the driven earth ground from the service electric panel. Three wires lead between the meter base and the service electric panel (refer to **Figure 62**).




**Power supply.** A large enough power supply must be available at the site. An inadequate power supply may result in improper operation of and possible damage to motors and appliances. It may also increase electricity costs.




**Grounding the electrical system.** Do not provide electrical power until the grounding electrode is installed and connected. When the meter base is not on the house never use the neutral conductor of the feeder cable as a ground wire.

300.089

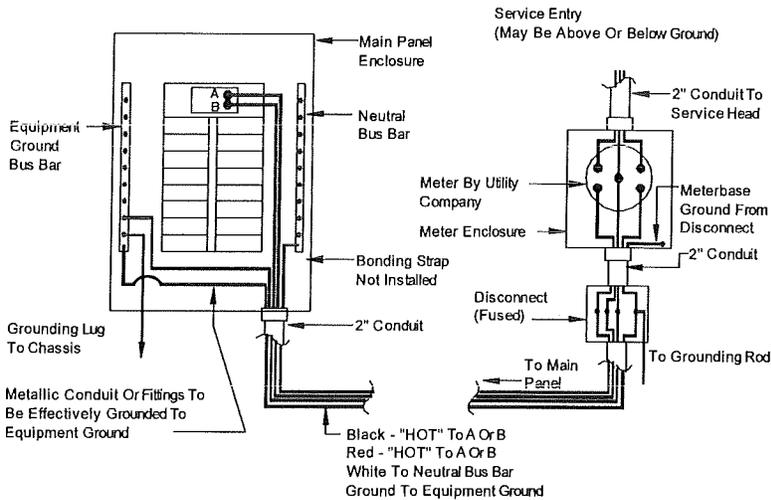

**Figure 61.** Electrical feeder connection when meter has a disconnect installed (typically more than 6 feet from service electric panel).

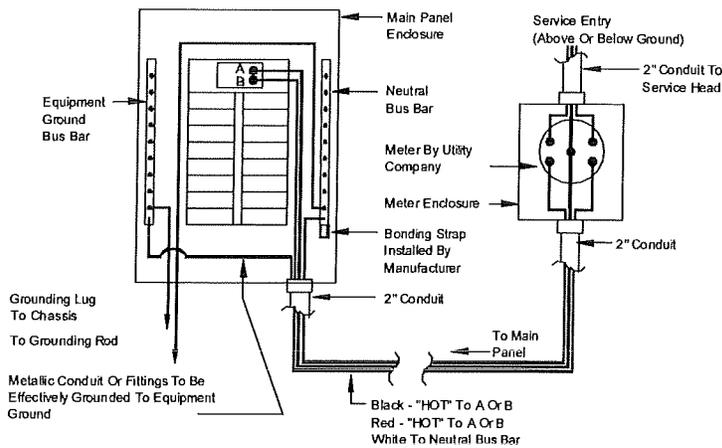

**Figure 62.** Meter base wiring when there is no separate disconnect installed (typically within 6 feet of service electric panel).

In all cases, a grounding electrode conductor and a ground wire must be installed according to the following specifications:


1. Grounding wire to be per **Table 16** provided by the manufacturer. If manufacturer provides a minimum 1/2 inch EMT or conduit raceway, the #6 minimum bare copper wire is provided by the retailer for installation.
2. The clamp connecting the grounding wire to the electrode shall be suitable for direct burial and located flush or below ground level.
3. Use a listed 5/8 inch diameter by eight foot long iron electrode or nonferrous rod of at least 1/2 inch diameter by eight feet long for grounding (larger sizes may be required by the LAHJ due to soil impedance).
4. Drive the electrode to a depth of not less than eight feet so that at least eight feet of the electrode is in contact with the soil.
5. When rock is encountered, the electrode may be driven at an angle not to exceed 45 degrees from vertical or buried in a trench that is at least 2-1/2 feet deep.

### FIELD INSTALLED METER BASE

When a meter base is installed in the field, **Figure 63** and the following requirements must be adhered to:

**CHAMPION**

- Install the meter base according to the manufacturer's instructions.
- Use straps to support any conduit. Do not use the meter base equipment for support.
- Use exterior equipment and enclosures listed as weatherproof and entrance conductors listed for wet locations.
- The grounding bar may be installed separate from the neutral bar for purposes of testing the electrical system.
- The grounding bar may be isolated during the electrical check and re-attached, after the tests are completed.
- Check with the local electrical utility to verify meter base requirements and locations and distances for the main panel and meter box.
- The field installed meter base enclosure must be installed in accordance with its listing. Fasten securely to exterior wall studs and provide for a weather-tight seal.
- Check the local code for any requirements regarding the location of the meter base.

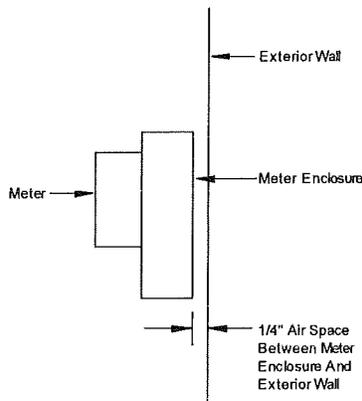

**Figure 63. Meter base clearances.**

## STEP 2. CONNECT WATER SERVICE

### CONNECTION

To connect the home's water system to the water source, identify the water inlet located under the home (usually below the water heater compartment or utility room) and follow the procedure described below (refer to **Figure 64**):

1. **Flush pipe.** Flush field-installed water piping free of all debris prior to connection to the home's water inlet.
2. **Clean threads.** Ensure that pipe threads are clean.
3. **Install pressure-reducing valve.** If the local water supply exceeds 80 psi install a pressure-reducing valve.
4. **Connect valve.** Install a main shut-off valve between the water supply and the inlet on the home. Locate the riser for the shutoff valve underneath or adjacent to the home. Select a full flow gate or ball shutoff valve, or equivalent valve. To prevent the possibility of fresh water contamination install an anti-siphon valve on all field installed exterior faucets.



**Selecting heat tape.** Use only pipe-heating cable (tape) listed for manufactured homes, and install it in accordance with the cable (tape) manufacturer installation instructions.

**Maximum water pressure.** The water system for the home was designed for a maximum inlet pressure of 80 psi.


February 1, 2011

**CHAMPION**

FEDERAL MANUFACTURED  
HOUSING CONSTRUCTION  
& SAFETY STANDARDS  
APPROVED  
02  
2/15/2011

300.091

**Figure 64.** Water system connection

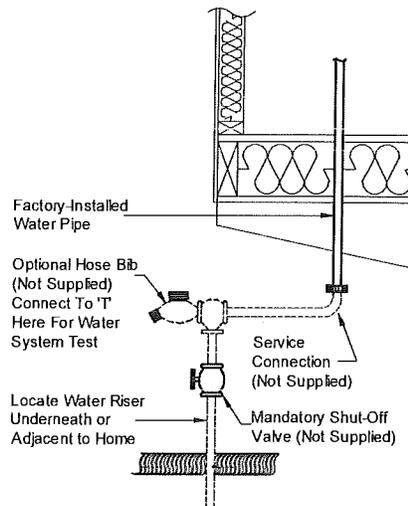


5. **Install water heater discharge drain.** Inspect the drain opening on the water heater to ensure that it is clear of any obstruction. If the home is to be installed on a basement or enclosed crawlspace, install drain pipe connecting the discharge from the water heater temperature and pressure relief valve to the outside or to a sump.
6. **Install water heater drip pan drain.** Assure that the drain for the water heater drip pan does not terminate under the home. Using the materials provided and the accompanying instructions run a drain line from the water heater drip pan through the wall or floor to the exterior of the crawl space. Terminate the line between six and 24 inches above grade. (**Figure 65**). Make the termination point rodent proof.



**Using check**

**valves.** Install a check valve on the water inlet to prevent water system drainage in the event of a loss of water pressure from the source. Such pressure loss could cause the water heater to drain, exposing the heating elements of electric water heaters causing them to fail.

**Figure 65.** Water heater drip pan and drain

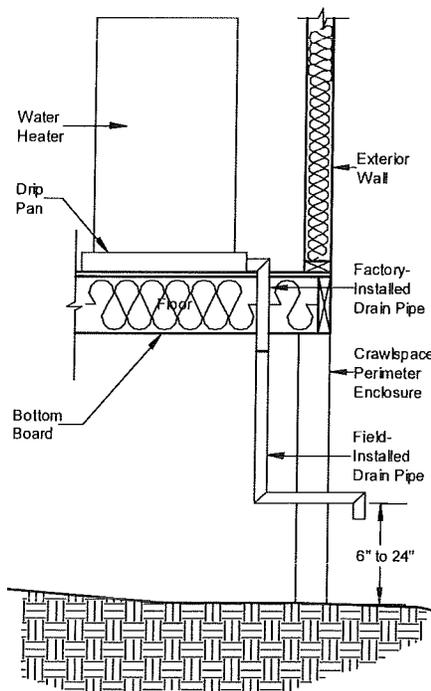

1. **Insulate.** In areas subject to freezing temperatures, protect with insulation or heat tape pipes, valves and pressure reducers that are exposed to the outdoors; and pipes in water heater compartments with non-insulated doors. Connect heat tape to the electrical outlet under the home near the water supply inlet.

## TESTING

After testing the electrical system and connecting the water lines check the water system for leaks using one of the procedures described below. Before testing, close all water faucets, spigots, and toilet-tank float valves.

### Hydrostatic (preferred):

1. **Bypass water heater.** Bypass the hot water heater by disconnecting the hot outlet and cold inlet water lines from the water heater and joining them together. This will protect the hot water tank from damage and protect those involved in the test from possible injury.
2. **Fill water heater.** Confirm that the water heater tank is full of water.
3. **Pressurize system.** Connect a hydrostatic pump, valve, and gauge to the location shown in **Figure 64**. Pressurize the system with water at 100 psi, and then isolate it from the pressure source. Bleed all air from the highest and farthest points in the system.
4. **Hold pressure.** Monitor the pressure for at least 15 minutes.
5. **Fix leaks.** If the pressure drops below 100 psi, locate and correct any leaks by cutting out and discarding bad pipe sections or joints and installing new pipe or joints with couplings.
6. **Repeat.** Repeat the test until all leaks have been eliminated.

### Pneumatic:

1. **Bypass water heater.** Bypass the hot water heater by disconnecting the hot outlet and cold inlet water lines from the water heater and joining them together. This will protect the hot water tank from damage and protect those involved in the test from possible injury.
2. **Pressurize system.** Connect an air pump and pressure gauge to the water inlet, pressurize the system to 100 psi and isolate the pressure source from the system.
3. **Hold pressure.** Monitor the pressure for least 15 minutes. If the pressure drops below 100 psi, locate any leaks by applying soapy water to the connections and looking for bubbles.
4. **Fix leaks.** Correct any leaks by cutting out and discarding bad pipe sections or joints and installing new pipe or joints with couplings.
5. **Retest.** Repeat the procedure until all leaks have been eliminated.
6. **Restore connections.** Reconnect the water heater and the water supply.

## FREEZE PROTECTION FOR UNOCCUPIED HOMES

If the home is to be left unheated in cold weather, protect water lines from freezing as follows:

1. **Disconnect supply.** Turn off the water supply and disconnect the water supply inlet.
2. **Drain water heater.** Turn off the water heater; if necessary, attach a hose to the valve to direct water away from under the home, open the drain valve and drain the tank completely.
3. **Drain faucets.** Open all faucets throughout the home (including the laundry area if plumbed, and any exterior faucets) and let them drain completely.
4. **Drain toilets.** Flush toilets and drain water tanks completely.
5. **Close faucets.** Close all water faucets with the exception of one.
6. **Connect compressor.** Connect a maximum of 30 psi air supply to the water inlet connection using a low pressure compressor.
7. **Open faucets.** With the air supply on the system, open one faucet at a time



**Selecting heat tape.** Use only pipe-heating cable (tape) listed for manufactured homes, and install it in accordance with the cable (tape) manufacturer installation instructions.

**Testing water lines.** Only use pneumatic (air) testing when hydrostatic testing is not practical. Air under pressure is explosive. Exercise extreme caution and notify all site personnel of the test. Wear protective eyewear and take precautions to prevent impact damage to the system while the test is in progress. Do not pneumatically test CPVC systems. Pneumatically test Flow Guard Gold systems only at low pressure levels (20 psi or less).

### Pressurizing water lines.

When pressurizing the water system, connect the pump to a location above a closed shut-off valve so as not to introduce pressure into the municipal water supply.

throughout the home.


8. **Disconnect compressor.** After the entire system has been drained of all water, disconnect the air supply and close the water inlet valve.
9. **Pour anti-freeze.** Pour an antifreeze solution into all drain traps, including sinks, tubs, and toilets. Be sure that the antifreeze is safe for the fixtures and P-traps.

## STEP 3. CONNECT GAS SERVICE

### CONNECTION

If the home uses natural or liquid petroleum gas (LPG, also known as propane) for water or space heating, cooking or other appliances, follow the procedure described below:

1. **Inspect vents.** Assure that all exhaust vents on gas-fired equipment are securely connected and that roof jacks and stacks have not come loose during transit and they are properly installed.
2. **Review appliance instructions.** Review each appliance manufacturer's instructions before the home is connected to the gas supply. Most gas appliances are typically configured to operate on natural gas. If the gas supply will be LPG, consult the appliance manufacturer's instructions to determine what changes need to be made. For homes located above 3,000 feet, appliances may require a different orifice.
3. **Remove cap.** Remove the protective cap from home inlet pipe and install a full flow shut-off valve at the supply inlet (**Figure 66**).
4. **Install regulator.** The gas piping system is designed for a pressure that is at least seven inches of water column (4 oz. per sq in or 0.25 psi) but not more than 14 inches of water column (8 oz. per sq in or 0.5 psi). If gas from any supply source exceeds, or could exceed this pressure, install a regulator if required by the LAHJ.
5. **Connect supply.** Using matching threaded fittings, connect the gas supply to the inlet side of the shut-off valve.
6. **Close valves.** Close all valves at appliances prior to opening the main supply valve.

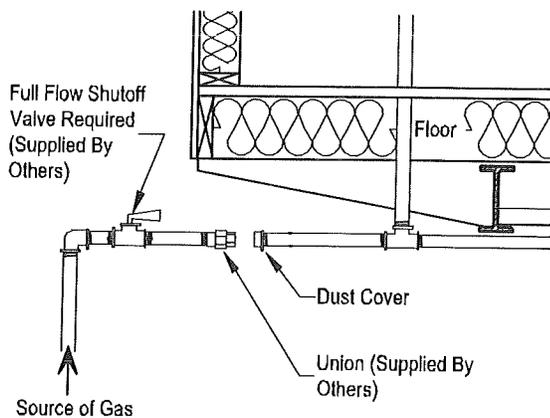

**Figure 66.** Gas service connection



**Installing gas lines.** Only qualified professionals may connect and test gas service.

**Fill gas water heaters.**  
Before lighting the pilot on a gas powered water heater, fill the tank with water. Failure to do so could damage the water heater.

## Connect Utilities

- appliance shut-off valves.
2. **Attach gauge.** Attach to the home's gas inlet a mercury manometer or slope gauge calibrated in increments of not more than 1/10 lb.
  3. **Pressurize system.** Using an air compressor, pressurize the system with compressed air to three psi and isolate the pressure source from the system.
  4. **Monitor pressure.** Monitor the pressure for at least 10 minutes.
  5. **Check for leaks.** If pressure drops below three psi, check for leaks by applying a non-corrosive, ammonia-free gas leak detection fluid to the joints at all valves, appliance connections, and crossover connections (do not use dish washing detergents, soap, or other household chemicals). If bubbles form, tighten the connection and recheck.
  6. **Repair leaks.** If leaks persist, replace defective pipes or fittings with sound material and retest.
  7. **Release pressure.** Release pressure and open all appliance shut-off valves.
  8. **Rinse connections.** Thoroughly rinse all tested connections with water to remove leak detection fluid.

### Entire system test (with appliances)

1. **Close appliances.** Close all gas equipment controls and pilot light valves according to the individual gas equipment manufacturer's instructions.
2. **Open valves.** Assure that gas shut-off valves for all gas equipment are in the open position.
3. **Attach gauge.** Attach to the home's gas inlet a pressure gauge calibrated in ounces.
4. **Pressurize system.** Pressurize the system with compressed air to six to eight ounces (3/8 to 1/2 psi, or 10 to 14 inches of water column).
5. **Check for leaks.** Check for leaks as described above in step 4 of the Piping only test. Replace defective pipes or fittings with sound material and re-test.
6. **Rinse connections.** Thoroughly rinse all tested connections with water to remove leak detection fluid.

### GAS APPLIANCE START-UP

Open the shut-off valve for each appliance and adjust the burners according to the appliance manufacturer's instructions. Verify that the furnace and water heater thermostats are operating properly and set them to the desired temperatures.

## STEP 4. CONNECT OIL SERVICE

Homes that are equipped with oil burning furnaces must have oil supply piping installed and tested on site by a qualified professional in accordance with NFPA 31, Standard for the Installation of Oil Burning Equipment, 2001 or the requirements of the LAHJ, whichever is more stringent. The home manufacturer does not supply oil piping or tanks.

### OIL CONNECTION

Consult the furnace manufacturer's instructions for proper pipe-sizing and installation procedures. Where piping is run through the bottom of the home, ensure all holes in the bottom board are sealed tight with foam, mastic, and/or tape specially made for that purpose and made rodent proof.

When equipping the home with an oil storage tank, comply with the following:

- Install the pipe with a gradual slope toward the fill end or drain plug (if so equipped) to facilitate pumping or draining of water and sludge.
- Provide a readily accessible approved manual shut-off valve at the outlet, installed to close against the supply.
- Equip the tank with an approved oil filter or strainer located downstream from the tank shut-off valve. Use a filter or strainer containing a sump with a drain to trap water.
- Equip under ground tanks with a filler neck extending one foot above grade



**Testing oil tanks.** All oil storage tank and piping installations and tests must meet all applicable local regulations and should be made only by experienced qualified personnel.

300.

February 1, 2

CHAMPION

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
APPROVED  
R A D 02

2/15/2011

- and a minimum 1-1/4 inch diameter vent pipe extending at least two feet above grade.
- Locate the tank to be accessible for service and inspection, and safe from fire and other hazards.
- If the tank is located inside a compartment of the home, provide ventilation at the bottom of the compartment to permit diffusion of vapors. If the tank is fixed to the home, provide for filling and draining from the outside.
- Insulate interior tanks from the structural members of the home. Provide tanks so installed with an outside fill and vent pipe and an approved liquid level gauge.
- Install tanks that feed vaporizing type oil furnaces so that oil flows by gravity. To achieve efficient gravity flow, make sure that the bottom of the tank is at least 18 inches above the furnace oil control level.
- Tanks for gun type oil furnaces (these furnaces include a fuel pump) may be installed above or below ground.

### OIL SYSTEM TESTING

Before operating the system, fill the tank to capacity with the fuel to be burned and visually check all joints in the system for leakage. Replace (do not repair) parts that leak.

▶ go to **Prepare Appliances and Equipment** (p. 96)

## Prepare Appliances and Equipment

This chapter provides instructions for installing and/or preparing appliances and other equipment. While the items below can be completed in any order, the last item, **CONDUCT ELECTRICAL TEST**, must be done last.

### Follow the Steps below:

- ▼ **INSTALL AIR CONDITIONER OR HEAT PUMP** (p. 96)
- ▼ **PREPARE HEATING SYSTEM** (p.97)
- ▼ **Install Remote Heating and Cooling EQUIPMENT** (p. 97)
- ▼ **PREPARE VENTILATION SYSTEM** (p. 98)
- ▼ **PREPARE FUEL-BURNING WATER HEATER** (p. 99)
- ▼ **PREPARE CLOTHES DRYER** (p. 99)
- ▼ **PREPARE SMOKE ALARMS** (p. 100)
- ▼ **PREPARE FIREPLACES** (p. 100)
- ▼ **PREPARE KITCHEN AND BATH APPLIANCES / FIXTURES** (p. 102)
- ▼ **INSTALL EXTERIOR LIGHTING** (p. 103)
- ▼ **INSTALL CEILING FANS AND LIGHTING** (p. 103)
- ▼ **TEST ELECTRICAL SYSTEM** (p. 104)

### INSTALL AIR CONDITIONER OR HEAT PUMP (if applicable)

#### CENTRAL UNITS

Install split system or unitary central air conditioners and/or heat pumps as follows:

1. **Check suitability.** Check the home's Comfort Cooling Certificate (may be included with the data plate) to confirm that the home is suitable for installation of central air. If so, note the air distribution system's rated duct capacity (BTU/hr), any equipment sizing guidance provided by the manufacturer and information provided to calculate the home's heat gain.
2. **Select equipment.** Select equipment with a rated heating capacity (BTU/hr) not exceeding the maximum indicated on the home's data plate and a rated cooling capacity sized in accordance with Chapter 28 of the 1997 ASHRAE Handbook of Fundamentals or ACCA Manual J, Residential Cooling Load, 8th edition. Information needed to calculate the home's heat gain can be found on the home's comfort cooling certificate. Choose equipment with a minimum circuit amperage (found on the equipment rating plate) no greater than the branch circuit rating of the exterior air conditioning receptacle (indicated on the adjacent tag), if present.
3. **Install A-coil.** When installing a cooling A-coil in a down-flow furnace that incorporates a fresh air intake duct, position the duct in the furnace cavity according to the furnace manufacturer's instructions (**Figure 67**). For electric down-flow furnaces, trim the ventilation duct as needed to allow installation of the A-coil and secure the duct to the wall of the compartment or to the top of the A-coil. Do not restrict the flex duct opening; allow the duct insulation to



**Use listed appliances.** All applicable appliances must be listed or certified by a nationally recognized testing agency for the application for which the unit is intended and installed in accordance with the terms of its listing or certification.

**Properly sizing equipment.** Oversized cooling equipment can lower energy efficiency, reduce comfort, shorten equipment life, and may cause moisture problems in the home (including potentially damaging the home's structure). Sizing guidance is provided by the


February 1, 2011

**CHAMPION** 

FEDERAL MANUFACTURED  
HOUSING CONSTRUCTION  
& SAFETY STANDARDS  
APPROVED  
02

2/15/2011

contact the A-coil, or allow the duct to become kinked, restricted, or configured to form a trap.

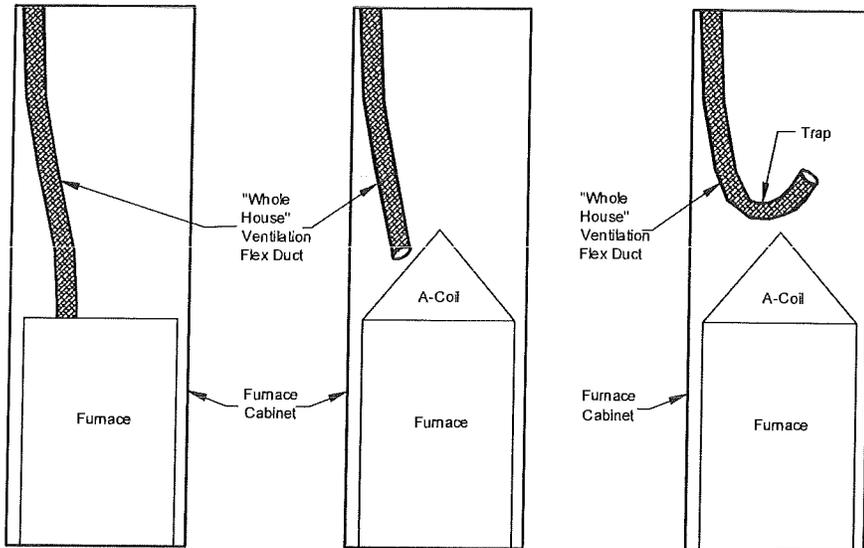

Manufactured Housing Research Alliance Cooling Equipment Sizing Guidelines available at [www.mhrahome.org](http://www.mhrahome.org).

**Figure 67.** Whole house ventilation flex duct in an electric down-flow furnace. From left to right: as prepared in the factory; proper installation with A-coil; improper installation with A-coil



**Selecting A-coils.** Use only A-coil units compatible and listed for use with the furnace in the home and installed in accordance with the furnace manufacturer's instructions.

**Installing flue stacks with a hinged roof.** If flue stack components are installed above the finish roof line (as is often the case with hinged roofs), an Alternative Construction letter is normally required along with a follow-up inspection. Contact the factory for guidance.

**Venting appliances to the outside.** Vent to the exterior of the home all combustion appliances except ranges and ovens.

**Selecting ducts.** Exterior ductwork for remote units must be provided by the installer or HVAC contractor. Ducts must be approved for exterior installation and should be wrapped with insulation of at least R-4 under a vapor barrier with a perm rating of not greater than one. (For ENERGY STAR homes, the R-value must be at least that specified on the manufacturer's ENERGY STAR Site Installation Checklist—generally a minimum of R-6 or R-8.)

## PREPARE HEATING SYSTEM

If the home does not contain a factory installed heating appliance, install a remote heating appliance according to **INSTALL REMOTE HEATING AND COOLING EQUIPMENT**, p. 97. Prepare fuel-burning heating systems included with the home as follows:

1. **Inspect for damage.** Inspect the furnace and report any damage to the home manufacturer.
2. **High altitude.** If the home is located more than 2,000 feet above sea level or as indicated in the furnace manufacturer's instructions, derate gas furnaces 4% for each 1,000 feet above sea level. This work must be done by a qualified (and in some jurisdictions, licensed) technician.
3. **Convert for LPG gas.** If LPG gas (propane) will be used, convert the appliance from natural gas to LPG gas use. Conversion must be made by a qualified and (if required by the LAHJ) licensed technician.
4. **Install intake air pipe.** Consult the appliance manufacturer's instructions for maximum allowable pipe run length, requirements for air dampers, locations relative to expected snow levels (check with the LAHJ for expected snow levels), acceptable materials, pipe supports, and pipe termination requirements.
5. **Install flue.** For combustion appliances, install the flue roof cap and stack assembly as described in **PREPARE FIREPLACES, Chimneys** (p. 100).

## INSTALL REMOTE HEATING AND COOLING EQUIPMENT


Install remote units in compliance with all heating and cooling equipment requirements in this chapter above and the following:

1. **Locate connections to the home.** Find the manufacturer-installed connectors, labels, or tags under the home indicating the required connection points for supply and return air. If connectors are not provided nor location indicated, select a supply duct location such that there are approximately equal numbers of supply registers forward and rear of the connection point. Locate the return duct in the center of the home.
2. **Install ducts.** Install the appropriate supply and return ducts (not provided) between the remote unit and the home (**Figure 69**), making connections

# Prepare Appliances and Equipment


according to the instructions for crossover ducts in **Crossover Connections** (p. 59).

3. **Install dampers.** If installing a remote cooling unit in a home with a factory installed furnace, install dampers between the furnace and the home's air duct system, and between the remote unit and the home's air duct system to prevent warm air in heating mode from escaping to the remote cooling unit and vice versa.

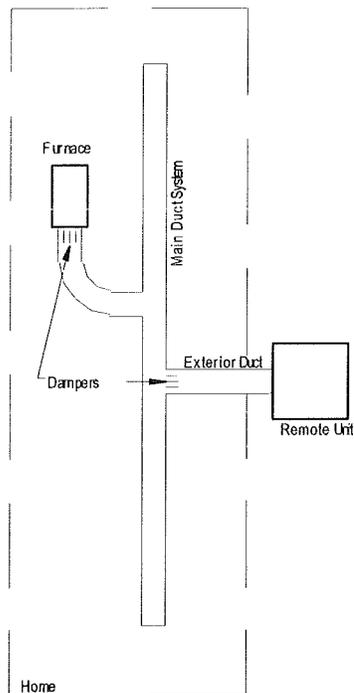

**Figure 68.** Remote unit damper locations

4. **Connect wiring.** Install a thermostat containing a fan switch. Connect utilities in accordance with all manufacturer's instructions and local codes.
5. **Seal penetrations.** Repair or replace all floor insulation disturbed during the duct installation and seal holes in the bottom board using foam, mastic, or tape specially made for that purpose.

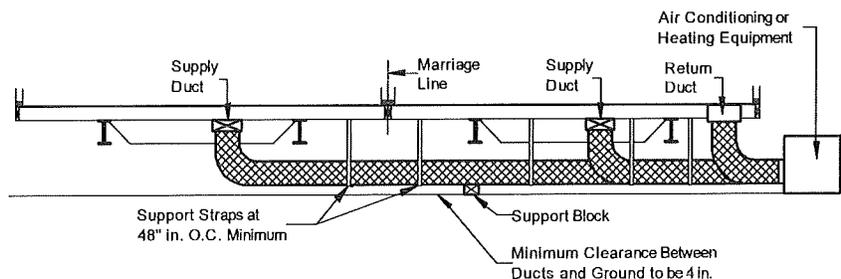

**Figure 69.** Ducts connecting exterior heating and/or cooling equipment to the home

## PREPARE VENTILATION SYSTEM

Prepare the whole-house ventilation system according to the ventilation system manufacturer's instructions. Confirm that any fresh air intake ducts extend to the exterior and do not draw air from the crawlspace under the home. Do not allow any fresh air ventilation intake ducts to become kinked or restricted, forming a trap (**Figure 69**).

## PREPARE FUEL-BURNING WATER HEATER

The water heater discharge and drip pan drains should have been installed in **Connect**



### Choosing pipe lengths.

The appliance manufacturer may designate the length of the pipe run based on the pipe diameter and the number of

February 1, 2011

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
02  
APPROVED

2/15/2011

CHAMPION

## Utilities (p. 87).


In homes with direct-vent water heaters (that utilize gas, oil, or other combustion fuel), and where the water heater is not independently vented to the exterior through a grilled opening, provide combustion air from under the floor using pipe and cement acceptable to the appliance manufacturer or through the roof via a double-walled flue pipe. If provided through the floor, run the air piping to the exterior of the home, with supports spaced every 3-1/2 feet o.c. or less. Terminate the pipe facing downward a minimum of 12 inches above the ground surface and provide a screen on the pipe vent cap.

## PREPARE CLOTHES DRYER

### DRYER VENTS

If the home includes a clothes dryer, the components for ventilating the dryer are included with the home (but not necessarily installed) and a vent opening has been roughed in either in the wall or floor. (If a dryer is not installed, seal all dryer vent openings).

Run the dryer vent to the outside through the exterior wall or through the floor to a point beyond the perimeter of the home, using materials approved by the clothes dryer manufacturer (see Figure 70).

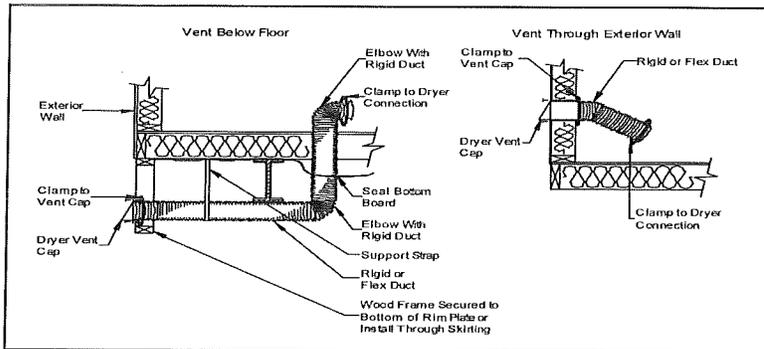

Manufacturer's exhaust hood or equivalent shall be above snow level.

Install the vent as follows:

1. **Remove temporary caps.** Remove any temporary seals and duct caps from the vent rough openings.
2. **Install ductwork.** Install ductwork using clamps (do not use screws or other fasteners that penetrate into the duct) and support the duct with metal straps connected to the floor joists or chassis at two feet o.c. or less. Ensure duct connections are internally overlapped to prevent inhibiting the flow of air and thereby causing lint accumulation.
3. **Install cap and damper.** Install an approved dryer vent cap with damper on the exterior termination of the duct. If the vent terminates at skirting, secure the cap to framing or skirting with sheet metal screws and seal edges with caulk or sealant. If the vent terminates through a wall, apply a bead of sealant to the back of the cap around the opening and secure with sheet metal screws to metal, hardboard or fiber cement siding or with wood screws to a mount block for vinyl siding.
4. **Seal opening.** Seal openings inside and outside of the home including at the floor, interior walls, siding and skirting (with caulk), and at the bottom board using foam, mastic and/or tape specially made for that purpose.

### GAS DRYERS

If the home was not fitted for a gas dryer, installing one requires substantial alteration to the home. Gas supply piping and adequate venting must be provided as specified by the dryer manufacturer and installed by a trained professional. Do not cut major structural elements to accommodate a gas dryer.

## PREPARE SMOKE ALARMS

turns in the pipe run.

### Venting exhaust systems.

Exhaust vents must extend to the home's exterior through skirting.

Termination of the dryer exhaust underneath the home can cause condensation and moisture damage to the home. Lint and dust accumulation can ignite, causing a fire. The exhaust system must not contain reverse slope.

Figure 70. Clothes dryer ventilation ductwork through floor (left) or exterior wall (right)

300.099



**Avoid damaging structural elements.** Do not cut or otherwise damage structural elements such as floor joists or wall studs for the installation of the dryer exhaust system.

**Gas.** Ventilation components that may be included with the home for an electric dryer may not be acceptable for gas dryers. Consult the gas dryer manufacturer instructions.



### Installing ducts.

Keep ductwork straight and smooth as possible without excess slack. Slope it slightly downward towards the exterior to facilitate

# Prepare Appliances and Equipment

The home has several factory installed smoke alarms that are wired to a 120-volt circuit. If the home was designed for placement on a basement, an additional alarm is provided for installation at a pre-wired location under the home. Connect the basement smoke alarm and test all alarms as follows:

1. **Check circuit.** Ensure that electrical power to the home is activated and that the smoke alarm circuit is on.
2. **Remove batteries.** Make sure backup batteries (if any) are removed from all smoke alarms.
3. **Test alarms.** Press the test button on each alarm sequentially. All alarms should sound simultaneously when the test button on any one smoke alarm is pressed. Replace (with the same brand as those installed elsewhere in the home) any alarms that do not sound and retest.
4. **Replace batteries.** After successful test, replace the backup batteries, discarding the protective tabs.

## PREPARE FIREPLACES

Install chimneys, chimney flashing and roofing, fireplace combustion air inlets, and hearths according to the manufacturer's instructions and the procedures described below.

### CHIMNEYS

Fireplace and wood stoves may require on-site installation of additional sections of approved chimney pipe, a spark arrestor, and a rain cap assembly. Follow the manufacturer's instructions and the procedures described below:


1. **Remove coverings.** Remove protective materials covering the roof flashing and any foreign material from the installed part of the chimney.
2. **Install chimney pipe.** Assemble and seal the chimney per the fireplace or wood stove manufacturer's installation instructions and if there is a conflict between the instructions and the figure, follow the instructions. To assure sufficient draft for proper operation, extend the chimney at least three feet above the highest point where it penetrates the roof and at least two feet higher than any surface within 10 feet of the chimney (**Figure 72**). Use additional section(s) of chimney pipe (not provided) if required by local code or if the site has obstructions within 10 feet of the chimney.

moisture drainage.

300.100

300.101

**Figure 71.** Chimney and combustion air intake duct installation

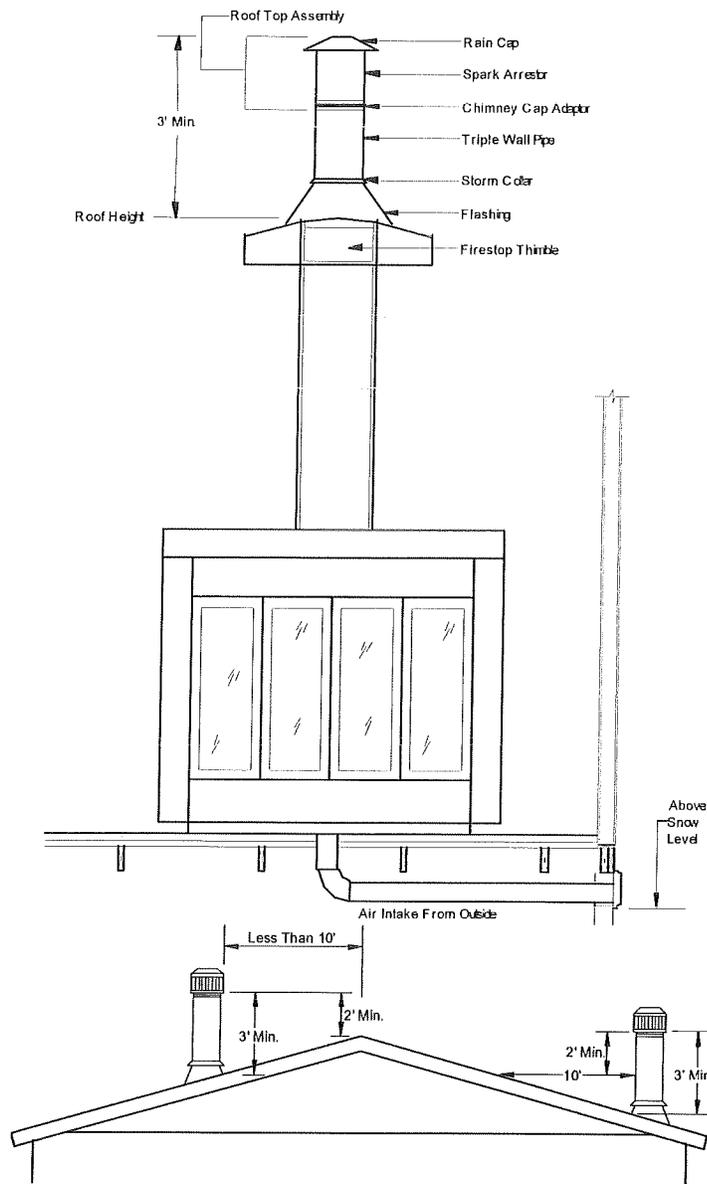



**Selecting the appropriate flue.** Wood fireplaces use larger diameter flues than gas fireplaces. Make sure flue matches the appliance type. Gas fireplaces cannot burn wood because the flue is too small and smoke will back up into the home. If wood fireplaces are converted to gas the flue will be too large resulting in excessive heat loss through the chimney.

**Figure 72.** Chimney clearance

3. **Install shingles.** Install shingles up to the edge of the flue cut-out in the roof deck. Secure shingles installed under the roof flashing with asphalt cement.
4. **Install flashing.** Place flashing over pipe section and shingles and set in asphalt cement. Secure flashing to roof deck at top two corners with roofing nails.
5. **Complete shingles.** Cut shingles in successive courses to fit around the pipe and embed them in asphalt cement where they overlap the flashing. Secure shingles with roofing nails through flashing and apply asphalt cement over nail heads. The completed installation should appear as shown in **Figure 73**, with the lower part of the flange overlapping the lower shingles and the side and upper shingles overlapping the flange.

MODEL MANUFACTURER'S INSTALLATION MANUAL



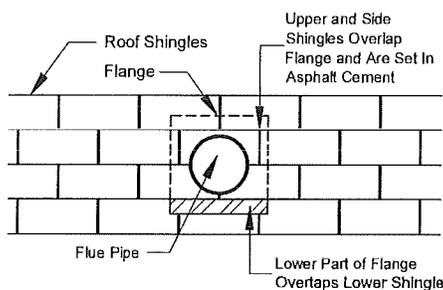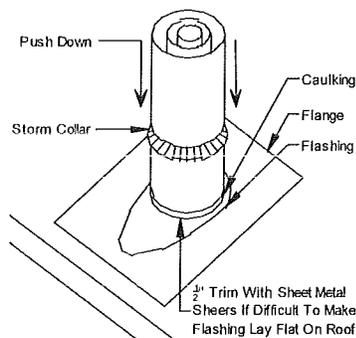

**Figure 73.** Roof flashing and shingle installation around chimney

### COMBUSTION AIR INLETS

Combustion air inlets provide combustion air through the floor or an exterior wall to a combustion appliance. If through an exterior wall, site installation is not required. If through the floor, extend the duct from its point just below the floor to the outside (additional duct material required for this may or may not be provided with the home). Locate the inlet damper above expected snow levels (contact the LAHJ for snow levels).

Follow the fireplace manufacturer's instructions (typically in the fireplace/stove or with the chimney parts).

### HEARTH

If shipped loose, install the fireplace hearth according to the fireplace manufacturer's instructions.

### PREPARE KITCHEN AND BATH APPLIANCES / FIXTURES

Install kitchen and bath appliances according to the manufacturer's instructions and the procedures described for each appliance below.

#### COOKING APPLIANCES

If the home is provided with a range, cook top and/or grill containing its own exhaust system that penetrates the floor, complete the exhaust system as follows:

1. Remove covers. Remove the cover on the factory-installed exhaust pipe protruding from beneath the floor near the appliance.
2. Install termination fitting. Secure the provided termination fitting at the outside edge of the floor.
3. Install duct. Use the provided flexible metallic duct to connect the elbow protruding from the floor and the termination fitting. Refer to the manufacturer's installation instructions for guidance on supporting the duct and making the connections.

#### SITE-INSTALLED GAS APPLIANCES

Install only appliances with a Btu capacity equivalent to or less than the capacity of the factory-installed piping and at the location of a factory-installed gas riser.

#### REFRIGERATOR

Prepare the refrigerator as follows:

- Remove straps, blocks, or other securement devices used for shipping and patch any resulting marks on floors or walls.
- If the refrigerator has an icemaker, check water lines for leaks upon installation and a few days later to make sure no leaks have developed.

#### SITE-INSTALLED APPLIANCES AND FIXTURES

If sinks, tubs, showers or other fixtures or appliances are to be site-installed, follow the manufacturer's installation instructions. Use only products listed for use in manufactured homes and follow all applicable local codes.



**Installing combustion air inlets.** Do not install the combustion air inlet such that material from the hearth can drop beneath the home.



**Installing exhaust ducts.** Route exhaust ducts so they do not terminate beneath the home.

February 1, 2011


**CHAMPION**

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS APPROVED  
 02  
 2/15/2011

## INSTALL EXTERIOR LIGHTING

Install exterior lighting according to **Figure 74** and the following:

1. **Remove cover.** Remove the screws and cover from electrical junction box.
2. **Install flash ring.** Place the non-combustible flash ring over the junction box.
3. **Connect wires.** Connect fixture wires to house wires in the box, black to black, white to white, and equipment ground to equipment ground, using listed wire connectors. Push wires into the box.
4. **Connect fixtures.** Connect the fixture to the junction box or strap using screws provided with the light fixture.
5. **Weatherproof.** Weatherproof/caulk around the base of the fixture, leaving a small gap in the caulking on the bottom to permit drainage of water that may accumulate.
6. **Complete installation.** Install bulb and globe on the fixture and verify proper operation.

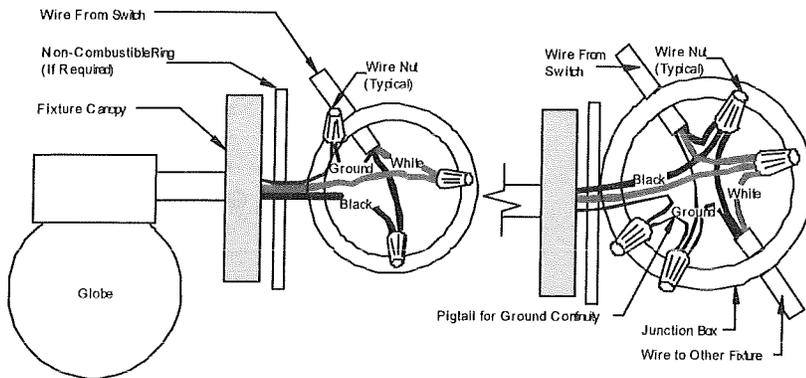

**Lighting installation.** A qualified electrician should install lighting. Before connecting lighting, disconnect power to the lighting circuit. Ground all exterior light fixtures.

**Using a non-combustible ring.** Install a non-combustible ring completely covering any combustible surfaces the fixtures may be mounted on (e.g. hardboard, clad wood and vinyl siding), or when ceiling material is exposed between the light fixture canopy and the junction box.

**Figure 74.** Exterior lighting connection




**Installing ceiling fans.** A qualified electrician should install lighting and fans. Before connecting the ceiling fan or light, disconnect power to the fan wires. Any unit installed outside of the home (such as in a porch ceiling) shall be listed for wet locations.

## INSTALL CEILING FANS/LIGHTS

Install ceiling fans no closer than 44 inches to a smoke alarm, measured from the center of the fan to the center of the alarm and with the trailing edges of the blades at least six feet-four inches above the finished floor. Comply with all unit manufacturer's instructions and the requirements below.

### CEILING FAN/LIGHT MOUNTED TO FACTORY-INSTALLED ELECTRICAL BOX IN CEILING

Before installing the unit, make sure that adequate structural bracing is present in the ceiling. If uncertain, check with the manufacturer. Follow the fan or light manufacturer's instructions to connect the unit and complete the wiring. If the instructions are not available, connect the wiring as shown in **Figure 75**.

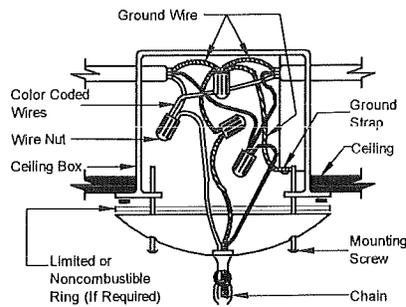

**Figure 75.** Wiring for a ceiling fan or chain-hung light fixture with a maximum weight of 35 lbs



**Choosing ceiling fan junction boxes.** Connect ceiling fans only to junction boxes listed and marked for ceiling fan application in accordance with Article 314.27(b) of 2005 NEC. Always ground metal junction boxes.

**Selecting fan weight.** Do not use any ceiling fans or light fixtures that exceed the weight rating of the box (35 lbs unless otherwise noted).

**Grounding electrical devices.** Ground fans/lights using a fixture-grounding device or a fixture-grounding wire as specified in the manufacturer's instructions.

## TEST ELECTRICAL SYSTEM

After completion of all electrical wiring and connections, including crossovers, appliances, lights, and ceiling fans, inspect and test the electrical system as follows:

1. **Fill water heater.** Fill water heater before turning on power to the home or switching on the circuit breaker.
2. **Test continuity.** Before turning on the electrical power to the home, conduct an electrical continuity test to ensure that exposed metallic parts of the home and the chassis are effectively bonded.
3. **Test operation.** After turning on the electrical power to the home, conduct operational tests of all devices (except water heaters, electric ranges, electric furnaces, dishwashers, clothes washers/dryers, and portable appliances) to demonstrate that they are connected and in working order.
4. **Test polarity.** After turning on the electrical power to the home, conduct electrical polarity checks to determine that connections of electrical equipment installed or completed during installation have been made properly. Visual verification is an acceptable electrical polarity check.

# Prepare Appliances and Equipment

300.105

▶ go to **Complete Exterior Work** (p. 106).

MODEL MANUFACTURER'S INSTALLATION MANUAL



February 1, 2011

RADCO FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS APPROVED 02 2/15/2011

# Complete Exterior Work

This chapter covers sealing the bottom board, installing the ground cover and skirting, preparing wind protection shutters, and completing site-built structures.

## Follow the Steps below:

- ▼ **STEP 1. REPAIR AND SEAL BOTTOM BOARD** (p. 106)
- ▼ **STEP 2. INSTALL GROUND MOISTURE RETARDER** (p. 106)
- ▼ **STEP 3. INSTALL SKIRTING** (p. 107)
- ▼ **STEP 4. COMPLETE SITE-BUILT STRUCTURES** (p. 108)

### STEP 1. REPAIR AND SEAL BOTTOM BOARD

Tears and openings in the bottom board can result from transportation or installation activities. Inspect for holes and gaps the entire bottom board, especially areas around service penetrations, crossover connections, pipe and duct hangers, foundation elements, and the perimeter of the floor. Using approved materials appropriate for the type of repair, repair the bottom board wherever torn or loosened as follows:

1. **Insulate.** Replace any missing insulation prior to closure and repair of the bottom board, paying particular attention to insulation gaps that may have been created at P-traps.
2. **Repair large openings.** Repair large openings with a durable patch made of bottom board fabric or other compatible material and fastened with vinyl bottom board tape held in place by fasteners installed with a divergent stapler. Seal the edges around patches with foam or mastic. For large openings, install a rigid backer board behind the bottom board to provide a fastening substrate for the patch.
3. **Repair small openings.** Repair small gaps and tears with a combination of vinyl bottom board tape, patches, mastic, or foam sealant.

### STEP 2. INSTALL GROUND MOISTURE RETARDER

If the space under the home is to be enclosed with skirting or other materials, a ground moisture retarder of a minimum six mil thick polyethylene sheeting or equivalent must be installed covering the ground under the home. Moisture retarders are not required in arid regions (less than 15 inches of rainfall annually) with dry soil conditions. If on-grade (surface) footings are used, install the ground moisture retarder prior to placing the footings, or install it around the footings after all other work under the home is complete.

Install the ground moisture retarder as follows:

1. **Apply sheeting.** Unroll the ground moisture overlapping joints in the sheeting a minimum of 12 inches and covering the entire area under the home except for areas under recessed entries, decks, and porches.
2. **Seal joints.** Seal joints in the retarder with mastic.
3. **Weigh down.** To keep the retarder in place, weigh it down with stones, concrete blocks, or other heavy, durable materials.
4. **Repair tears.** Repair any voids or tears in the retarder by patching with like material, maintaining a minimum 12-inch overlap and sealing joints with mastic.



**Sealing bottom boards.** A continuous and sealed bottom board is critical for home performance, energy efficiency, protection against moisture problems, prevention of pipe freezing, and protection against insects and rodents.

**Bottom board sealing methods.** Tapes shall never be used alone to repair a bottom board. Divergent staples or mastic must be used in tandem with tape to prevent future tear off.

**Fastening vinyl siding.** Do not install fasteners directly into vinyl siding. Allow for siding thermal expansion by pre-drilling minimum 1/2 inch diameter fastener holes or fastening skirting to a ledger under the home (see Best Practice tip).



#### Avoiding radon.

For enclosed perimeter wall crawlspace foundations in areas where radon is commonly found in the soil, continue the moisture

February 1, 2011

CHAMPION

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS APPROVED  
R A D O N  
02  
2/15/2011

## STEP 3. INSTALL SKIRTING

Skirting is any structural or non-structural perimeter crawlspace enclosure. Complete site-built structures (see **STEP 5. COMPLETE SITE-BUILT STRUCTURES**, p.108) that abut the home (such as porches, attached garages, and steps) prior to installing skirting.

**TABLE 17. ANCHOR SYSTEM MATERIALS SPECIFICATIONS**

Component	Specification
Skirting	Skirting must be of weather-resistant materials or provided with protection against weather deterioration at least equivalent to that provided by a coating of zinc on steel of not less than 0.30 oz per sq ft of surface coated. Skirting made from wood or wood products and used within six inches of the ground needs to be made of materials naturally resistant to decay and termite infestation or pressure treated.
Vents	Ventilation openings must be covered for their full height and width with a perforated (1/4 inch maximum opening in any dimension) corrosion and weather-resistant covering that is designed to prevent the entry of rodents. In areas subject to freezing, the coverings for the ventilation openings must have an operable damper, permitting them to be in the open or closed position depending on the weather.

To design and install skirting, comply with the skirting manufacturer's instructions (if provided) and the following:

- 1. Configure skirting.** Run the skirting along the perimeter of the home's heated, conditioned space. Do not enclose with skirting areas under recessed entries, porches, or decks (whether constructed as part of the home or added on site) unless skirting is of the fully vented type and installed so as to allow water to freely flow out from under the home.
- 2. Fasten skirting.** Recess the skirting under the siding or trim and attach it to the home in a manner that prevents water from being trapped between the siding or trim and the skirting. For wood, aluminum, or fiberglass skirting, install a skirt rail (lumber strip) under the floor inset at least 1-1/2 inches from the edge of the siding for attachment of the skirting. Allow for frost heave when installing skirting in areas subject to frost.
- 3. Provide ventilation.** Unless the skirting has integral ventilation openings that meet the following ventilation requirements, install equally sized ventilation openings on at least two opposite sides of the foundation. Size ventilation area to equal at least one square foot or each 150 square feet of under-floor area (or for each 1,500 square feet if a ground moisture retarder is installed according to **STEP 2. INSTALL GROUND MOISTURE RETARDER**, p. 106). Place vents as high above the ground as practical.
- 4. Install access.** Provide an access opening not less than 18 inches wide and 24 inches high and located so that any utility connections located under the home are accessible.
- 5. Extend vents, drains, and inlets.** Run appliance exhaust vents, combustion air inlets, and air conditioner condensation drains through the skirting to the outside and terminate each as instructed in the sections of this manual corresponding to each appliance.

retarder up the perimeter wall at least 12 inches, sealing the edges and between the seams with mastic.

**Attaching vinyl siding.** To install skirting on vinyl-sided homes, screw a treated 2 x 4 on edge to the underside of the floor joists two inches back from the edge of the home. Screw skirting tight to the 2 x 4.



**Avoid backfilling against skirting.** Do not backfill against non-structural skirting.

## STEP 4. COMPLETE SITE-BUILT STRUCTURES

Install site-built structures such as steps, landings, garages, awnings, carports, breezeways, porches, decks, railings, sheds, and utility rooms according to manufacturer's instructions (if any), in compliance with all local regulations including fire separation and electrical requirements, and according to the following:

- Do not obstruct any of the two required exit doors from the home.
- Construct site-built structures to be structurally independent unless provided for in the design of the home (instructions will be provided by the manufacturer).
- Do not damage the integrity of the home's structural or weatherproofing system. Seal any weatherproofing connections between the site-built structure and the home and flash any roof connections.
- Utilize only GFCI outlets for site-built structures.
- Install and test smoke alarms in any site-built structures according to local code.

▶ go to **Prepare Home for Occupancy** (p. 109).



**Designing site-built structures.** All site-built structures must support their own dead, live, and wind loads and must not transmit any loads to the home's structure. All carports should be freestanding.

# Prepare Home for Occupancy

Follow these steps for final inspection and completion of the home.

## Follow the Steps below:

- ▼ STEP 1. VERIFY ALTERNATIVE CONSTRUCTION (A/C) INSPECTION (p. 109)
- ▼ STEP 2. COMPLETE INSPECTION CHECKLIST (p. 109)
- ▼ STEP 3. COMPLETE ENERGY STAR CHECKLIST (p. 109)
- ▼ STEP 4. CLEAN THE HOME (p. 109)

### STEP 1. VERIFY ALTERNATIVE CONSTRUCTION (A/C) INSPECTION

This is normally the responsibility of the retailer and the manufacturer, however, the installation is not complete until the alternative construction inspection has been passed and documented.

### STEP 2. COMPLETE INSPECTION CHECKLIST

After all previous steps have been accomplished, inspect the home to verify that it has been completely and properly installed using the checklist starting on p. 110.

Correct any deficiencies found, if possible, or if not possible, inform the retailer or manufacturer immediately.

### STEP 3. COMPLETE ENERGY STAR CHECKLIST

For ENERGY STAR qualified homes (check with the retailer or manufacturer), this step is to be completed by the manufacturer's designated representative. Ask the retailer or the manufacturer who this is.

The manufacturer's representative must complete the Energy Star Site Installation Checklist, obtain signatures on the ENERGY STAR label, and return the completed ENERGY STAR Site Installation Checklist to the manufacturing plant.

### STEP 4. CLEAN THE HOME

Remove and properly dispose of all installation-generated dust, debris, and packaging materials from the home and the surrounding property. Ensure that the home is in "move-in" condition.

**Installation is Complete**

## Complete Installation Checklist

Use this checklist to confirm that the listed aspects of the installation are complete and correct.

### FOUNDATION

- Footings properly sized and constructed for the soil conditions
- Pier spacing per data plate and applicable table and roof load zone
- Piers properly constructed and vertical
- Perimeter blocking installed (if required)
- Piers at each side of large sidewall openings
- Center line piers installed at columns
- Shims in place and tight

### ANCHORS

- Approved anchors are used
- Anchors are installed at correct angles
- Anchor spacing and installation correct
- Longitudinal ties installed (if required)
- Anchor straps are tensioned

### UNDER THE HOME

- Moisture retarder installed
- The ground is properly graded to prevent water accumulation
- HVAC ducts are supported off the ground and connected tightly to collars at all ends
- Fireplace combustion air intake free and unrestricted
- No holes or tears in bottom board
- Skirting has been installed per manufacturer's instructions with proper venting and provision for frost heave
- Dryer vent, range/cook top exhaust, water heater temperature and pressure overflow pipe and AC condensate drain installed to perimeter of crawl space

### EXTERIOR

- Shingled roofs are free of visible damage and serious defects and there are no missing or loose shingles
- Shingle close-up and ridge cap have been completed per applicable details
- All hold down straps on shingled roofs have been removed and staple holes have been properly sealed
- Penetrations at roof stacks, vents and chimneys have been properly sealed
- Siding and trim is free of gaps, voids, missing fasteners, damage, and serious defects. All seams are sealed and hardboard edges are sealed
- Drip edge and fascia is properly installed and free of damage and serious defects
- Gutters and downspouts are installed properly such that water is diverted away from the home
- Trees and bushes have been trimmed to prevent brushing against the home in windy conditions or under snow loads
- The HUD label is exposed, intact and legible
- The exterior of the home and immediate surroundings is clean, clear of



**Limits of the checklist.** This checklist is not all-inclusive. Some homes have important features not listed here. Completing this checklist does not guarantee that all installation requirements have been met.

construction materials, dust, and debris

## INTERIOR

- Ceilings, walls, and floor coverings are free from damage and serious defects
- Carpeting is properly stretched and seamed
- All trim and molding is installed properly and free of damage and defects
- All cabinets, countertops, plumbing fixtures, appliances, furnishings, and window coverings are free of damage or serious defects
- All cabinet doors and drawers work properly
- All interior and exterior doors and windows open, close, and latch properly
- One window in each bedroom meets emergency egress requirements, has operating instruction labels on it, and operates properly
- All temporary shipping hardware has been removed
- Floors are level
- The data plate is intact and legible
- Smoke alarms have been tested
- The interior of the home is clean, clear of materials, dust, and debris

## WATER AND DRAIN SYSTEMS

- Crossover and service connection and splices have been properly made with correct materials
- Water and drain lines are insulated or otherwise protected from freezing
- Pipe supports are installed and properly spaced
- Proper slope has been maintained on all drain lines
- All necessary inspections and tests have been performed
- All sinks, basins, tubs, and toilets operate properly
- All hot and cold water lines are properly connected to fixtures, dispense water as labeled, and operate properly

## ELECTRICAL SYSTEMS

- The panel amperage matches the connection to the home
- The home has been properly grounded
- The main power supply has been properly connected and tested by a licensed electrician
- All electrical crossovers have been connected
- All receptacles, switches, and light fixtures operate properly
- Ground fault circuit interrupters operate properly
- All exterior lights have been properly installed

## GAS/FUEL OIL SYSTEMS

- The gas system pressure test has been conducted
- Connections between units are properly made with access as required
- The main fuel line has been properly connected and tested by a qualified technician

## APPLIANCE OPERATING AND VENTING

- All appliances are working properly
- Appliance venting is in accordance with the manufacturer's instructions
- Fresh air intakes are properly installed
- Whole house, kitchen, and bath exhaust fan operation are correct



 
# Complete Installation Checklist

300.112

- Fireplace chimney stack extension and roof cap have been installed in accordance with the manufacturer's instructions
- Air conditioner/heat pump is sized properly

## MISCELLANEOUS

- Installation/anchoring certificates or seals have been issued and installed (if required)
- Owner's and operation manuals are available for all appliances
- This installation manual is left with home





# CHAMPION



*and its brand*



1660 Rowe Avenue, P.O. Box 427  
Worthington, MN 56187  
(507) 376-9460  
[www.highlandmanufacturing.com](http://www.highlandmanufacturing.com)



CORPORATE OFFICE:

***Champion Home Builders, Inc.***  
755 West Big Beaver Road, Suite 1000  
Troy, MI 48084  
248-614-8200  
[www.championhomes.com](http://www.championhomes.com)

Copyright © October 2008 by Champion  
All Rights Reserved.

FEDERAL MANUFACTURED HOUSING CONSTRUCTION & SAFETY STANDARDS  
APPROVED  
R A D C C  
02

2/15/2011

