

MULTIPLE SECTION MANUFACTURED HOME INSTALLATION MANUAL

2002

NOTICE

TO INSTALLERS AND SITE PREPARATION CONTRACTORS

NONCOMPLIANCE WITH THESE INSTALLATION INSTRUCTIONS MAY MAKE YOU LIABLE TO THE HOME OWNER OR OCCUPANTS FOR DAMAGE OR INJURY RESULTING FROM YOUR OMISSIONS OR INCORRECT OR DEFECTIVE WORK. ACCORDINGLY, CARE SHOULD BE EXERCISED IN CONFORMING TO THE REQUIREMENTS HEREIN.

NOTICE

IMPROPERLY VENTED SKIRTING WILL CAUSE MOISTURE TO ACCUMULATE BENEATH THE HOME. WHEN SKIRTING THE BOTTOM OF THE HOME, VENTILATORS MUST BE INSTALLED. THE MINIMUM VENT AREA SHALL BE 1 SQUARE FOOT FOR EVERY 150 SQUARE FEET OF AREA UNDER THE HOME. EACH VENTILATOR MUST HAVE A MINIMUM OF 60 SQUARE INCHES OF NET FREE AREA. THE VENTILATORS MUST BE EQUALLY SPACED ALONG EACH SIDE OF THE HOME WITH ONE VENTILATOR BEING PLACED WITHIN 4 FEET OF EACH END OF THE HOME.

NOTICE

TO THE HOME OWNER

PLEASE BE ADVISED THAT THIS COMPANY DOES NOT PARTICIPATE IN RETAIL SALES. OUR UNITS ARE PURCHASED BY INDEPENDENT DEALERS, WHO IN TURN SELL THEM TO RETAIL CUSTOMERS. WE, OF COURSE, HAVE NO CONTROL OVER, AND ARE NOT AWARE OF THE TERMS AND CONDITIONS OF THESE SALES, NOR THE MANNER IN WHICH THESE HOMES AND HOME SITES ARE PREPARED FOR FINAL INSTALLATION OF THE UNITS. IN LIKE MANNER, WE HAVE NO CONTROL OR OBLIGATION IN MATTERS CONCERNING AFTER MARKET ITEMS, SUCH AS INSTALLATION, SKIRTING, APPLIANCES AND/OR FURNISHINGS NOT ON THE FACTORY INVOICE, PORCHES, DECKS, AWNINGS, CONCRETE WORK, UTILITY CONNECTIONS, ETC.

TABLE OF CONTENTS

Introduction..... vi

FOUNDATION SYSTEM

Site Preparation..... 2

The Site..... 2

Footings 3

Piers 4

Alternate Footings 5

Proper Alignment 6

Support Locations 6

Positioning and Blocking 7

Hinged Roof Deployment 7

Reminders Before Jacking 8

Jacking, Alignment, Blocking & Connection Procedures 8

Ground Anchoring 12

Pre-Anchoring Inspection 12

Consequences of Incorrect Blocking & Alignment 12

Porches and Decks 13

Masonry Faced Fire Places..... 13

Curtain Walls..... 13

Illustrations 14

INTERIOR AND EXTERIOR CLOSURE

General (Exterior)..... 28

Roof Closure 28

TABLE OF CONTENTS (Continued)

Truss Wall Support For Roof Slopes Greater Than 4/12.....29

Bottomboard Closure29

Exterior Siding Closure.....29

Interior Closure.....30

General (Interior.....30

Illustrations31

UTILITY SYSTEMS

General34

Water Distribution, Connection, and Testing.....34

Procedure for Testing the Water System.....35

Draining the Water Lines.....35

Waste Drainage System Connection and Testing36

Gas System Connection and Testing.....37

Oil Piping Connection and Testing38

Crossover Duct.....39

Illustrations41

ELECTRIC SYSTEM

Electric System.....46

Multi-Section Bonding47

Multi-Section Electrical Crossovers.....48

Test Procedure for Electrical System.....48

Test Procedure For Smoke Detectors..... 49

Illustrations50

TABLE OF CONTENTS (Continued)

GROUND ANCHORING SYSTEM

General 54
Design Criteria..... 54
Installation Instructions - Frame Anchoring Procedure 55
Longitudinal Frame Ties..... 56
Column Uplift Anchoring..... 56
Alternate Procedures..... 56
Illustrations 57

MISCELLANEOUS OPTIONS AND CONNECTIONS

Central Air Conditioning 66
Self-Contained Air Conditioning Unit..... 66
Split System Air Conditioning Unit..... 66
General AC Power Supply 66
Fireplaces..... 67
Furnace Roof Jack..... 68
Optional Dryer Venting Installation..... 68
Installation of Accessories..... 69
Light Fixture and Ceiling Fan Installation 69
Evaporative Cooler Make Ready..... 69
Relocation of Home..... 70
Illustrations 71

FINAL INSPECTION

Exterior Siding and Trim..... 76

TABLE OF CONTENTS (Continued)

Roofs	76
Clearances	76
Caulking and/or Sealers	76
Egress Windows	77
Exterior Doors and Storms	77
Winter Precautions	77
High Wind Precautions	77

INTRODUCTION

This home was designed and constructed to meet or exceed the requirements of the National Manufactured Home Construction and Safety Standards which were in effect on the date of manufacture. This standard sets forth minimal requirements for the design, construction, electrical system, plumbing systems, heating system and thermal protection for manufactured homes designed to be used as single family dwellings.

These instructions are intended to instruct and assist already qualified personnel in the proper installation of your manufactured home. It is not intended to enable someone unfamiliar with manufactured homes to perform the installation. The installer should guarantee his work in writing for a reasonable time and should agree to realign the home in approximately 60 days from the time of initial installation.

A properly maintained installation will, under normal conditions, prevent the home from settling and avoid the possibility of incurring expensive repair bills. If your home is not set and maintained in proper alignment as it was designed, or if it is not set on a completely firm and proper foundation system as described in this instruction, certain portions of your home will undergo undue and unnatural structural strain. Such structural strain could lead to problems later. Typically, these problems appear in the form of the buckling, loosening or separating of wall coverings, exterior siding, floors and their covering, ceilings, metal roof membranes and miscellaneous fixed original fixtures and cabinets of the home. Other problems relating to installation include the leaking of doors, windows, roofs, ceilings, and exterior walls due to the loss of the weather seals in these areas, as well as the loss of proper operation of windows and doors and their locking devices.

Applicable local or state laws may have greater or more stringent requirements than outlined in this manual, which must be complied with to obtain or regain the right to occupy the home. Therefore, we recommend that you consult with regulatory agencies in your area for codes which may require license and/or permits.

It is of the utmost importance that the electrical feeder connection to your home be installed in accordance with the instructions in this manual and in the diagram located at the electrical distribution panel with the home. **IT IS ABSOLUTELY ESSENTIAL THAT A 4-WIRE FEEDER BE USED. WITHOUT THE 4-WIRE FEEDER THE CIRCUIT BREAKERS WILL NOT FUNCTION AND A SHORT CIRCUIT AT ANY TIME COULD CAUSE ELECTROCUTION.** Please refer to the heading "Electrical System" in Section C of the Home Owners Manual.

Before installation of your manufactured home, consult the Structural Design Basis Certificate and the Heating and Cooling Design Basis Certificate to be certain that the home was constructed to meet the loading and climate requirements of your area. You may install this home in a zone requiring lesser loads or climate requirements. These certificates are part of the Compliance Certificate which is located on a wall in the master bedroom closet.

Because new products and methods are constantly being introduced, additional or revised instructions may be required. The applicable addendum may be found inside the back cover of this instruction.

FOUNDATION SYSTEM

FOUNDATION SYSTEM

Site Preparation

Your home has been designed with an integral floor system, which must be supported by individual supports or piers. These supports are as important to the correct and proper installation of your home as is the foundation for a multi-story commercial building. Any shortcoming in the support of your home will manifest itself in the form of settling, which was discussed in the introduction to these instructions.

The home manufacturer is not liable for damages or defects in installation or those caused by improper installation or in delivery by other than manufacturer's drivers; nor by acts of God or by damage or defects caused by use of home as a moving van for weights exceeding the original delivery weight, or those caused by improper foundation, pad, piers, or lack of proper alignment.

All manufactured home installations shall comply with the requirements of these instructions or the requirements of local zoning ordinances and conditional use permits established by local authorities pertaining to any health and/or safety codes, whichever is more stringent.

The Site

Your home site must be selected so as to provide a reasonably level surface in the area of home placement. The site must be properly graded and sloped to provide storm drainage run-off. In particular, the area beneath the home must be graded to prevent water accumulation. It is recommended that a 2-inch grade be provided from the longitudinal centerline of the home to

each edge. While it is not required, we suggest the entire area under the home be covered with 6-mil thick visqueen. The visqueen should be overlapped 6 inches at all joints in a manner to assure proper moisture run-off. To protect the visqueen from physical damage it is recommended that the area under the home then be covered with crushed stone or washed gravel (See Figure 1 & 4). In high moisture areas or areas with extremely high water tables, it may be necessary to install a positive soil drain system to alleviate the moisture condition under the home, and visqueen is recommended.

The portion of the lot or site intended for placement of the home must be undisturbed soil or compacted fill. If the site is on filled soil, it must be compacted to at least 95 percent of its maximum relative density. This is necessary to keep the soil from settling possibly damaging the foundation or allowing it to settle.


Climatic conditions must also be taken into consideration when installing the foundation. The bottom of the footing on which the pier is to be placed must be located below the local frost line. If you elect to locate your footings above the local frost line, your foundation will be susceptible to the heaving and resultant-settling action caused by frost. The symptoms of heaving are the same as for settling and can cause damage to your home. Consult with the building officials in your area to determine the maximum depth of the local frost line.

It is also very important that the house be properly skirted to conserve energy and provide added comfort. The skirting must be installed in a manner, which prevents it from collecting the

FOUNDATION SYSTEM (continued)

water from rainfall, melting snow and ice, which cascades down the sides of the home. The area beneath the home must be ventilated. The minimum vent area shall be 1 square foot of net free area (area of opening in grillwork) for every 150 square feet of area under the home. (Length of home multiplied by width of home divided by 150 equals net free area of vent required in square feet). To determine the correct number of crawlspace ventilators see the following example:

Step 1: Determine the length and width of the space under the home enclosed by the skirting of foundation wall.

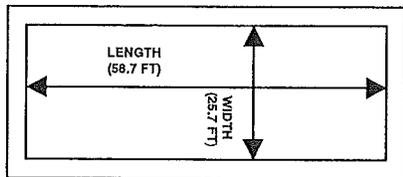

NOTE : For the example assume a length of 58.7 FT and a width of 25.7 FT.

Step 2: Multiply the length by the width and divide the total by 150. Ex: $58.7 \times 25.7 / 150 = 10.06$ SQ. FT. (Net area of ventilation required)

Step 3: Multiple the required area (SQ. FT.) by 144 to determine the required net free area in SQ. inches Ex: $10.06 \times 144 = 1448.6$ SQ. IN.

Step 4: Determine the net free area in SQ inches of the ventilators you wish to use. This information is stamped into or molded on to each ventilators (i.e. 35.5 SQ. IN., 45 SQ. IN., 82 SQ. IN. and etc).

Step 5: Divide the net free area of the ventilator (SQ. IN.) into the total area required (SQ. IN.) to determine the number of ventilators required for the

home's foundation. Ex: $1448.6 / 35.5 = 40.8 = 41$ ventilators required.

Typical Number Required for the Example

Vent Area	30	35	40	45	50	55
No. REQ.	49	41	37	33	29	27
Vent Area	60	65	70	75	80	85
No. REQ.	25	23	21	20	19	17

Install an equal number of ventilators along each side of the home. One ventilator should be within 4 feet of each end of the home with the remainder equally spaced along the length of the home and located across from one another. This will allow for cross-ventilation and dissipate damaging condensation. It is recommended that the minimum ventilator size be 60 SQ IN of net free area.

For those units having a wood or wood product siding material, care must be taken to ensure that the skirting material and its support structure do not cover any exposed portion of the siding. When covered, trapped moisture will not properly or expeditiously dry, causing the siding material to deteriorate. Installed skirting should allow for vertical movement caused by frost heave and settling.

Footings

For maximum safety and secure living your home must be supported on a solid foundation. The proper size and locations for the foundation footings are shown in Figures 2, 3, 5 and 6 and in charts 2 through 5a. Reference chart number 1 for spacing dimensions.

FOUNDATION SYSTEM (continued)

Poured-in-place or pre-cast concrete footings having a minimum 8-inch thickness are required. Where footings must exceed a minimum 8-inch depth to extend below the local frost depth, pre-cast footings are not recommended. The concrete must have a minimum 28-day compression strength of not less than 2,000 pounds per square inch. The footings must be flat on the top surface to allow for the proper bearing of the single or double stack concrete block piers. Footings, which have rounded top surfaces or are too small in size to allow the entire block pier to bear on them, are unacceptable. The maximum allowable slope on the top surface of the footings, in any direction, will be 1/8 of an inch per 12 inches of footing size. In all cases the footings must extend below the maximum local frost line. Consult with your local building officials to determine the maximum depth of the local frost line prior to installing your footings. The stability of your home is dependent on the quality of the footing/pier system and the properly installed ground anchors addressed later in this instruction. You may refer to Figure 7 for an example of the wide variance of average frost depths throughout the United States.

CAUTION

IF THE FOOTINGS ARE NOT PLACED BELOW THE MAXIMUM LOCAL FROST LINE AND UPWARD HEAVING OCCURS, THE HOME CAN BECOME MISALIGNED AND ACTUALLY DAMAGED BY UNSEEN FORCES. DAMAGE CAUSED BY THE IMPROPER INSTALLATION AND SUPPORT OF YOUR HOME IS NOT WARRANTED BY THIS COMPANY.

Footings must be sized to allow for the entire bearing surface of the concrete block pier. The minimum size footings for a single stack pier will be as follows: a square footing must be at least 16 inches by 16 inches (256 square inches) and a round footing must have a diameter of at least 17-1/4 inches (234 square inches). The minimum size footing for a double stack pier will be as follows: a square footing must be at least 16 inches by 16 inches (256 square inches) and a round footing must have a diameter of at least 25-3/4 inches (521 square inches). **IN NO CASE SHOULD THE FOOTINGS BE SMALLER IN SIZE THAN THE RECOMMENDED SIZES SHOWN IN CHARTS 2 through 5a. FIGURES 13 THROUGH 18 ILLUSTRATE UNACCEPTABLE FOOTINGS.**

Additional footings will need to be placed at the ends of exterior side wall openings which are larger than 4 feet in width in a manner to support the concentrated loads which occur at the sides of these openings and at the sides of exterior doorways when required by the manufacturer. Construction of these footings will be the same as the footings placed under the main steel I-beams of the unit.

Piers

All piers used to support your home must have the capacity to carry the vertical load of the home itself, its contents, and temporary roof loads such as snow and ice to the footings below.

The piers shown in Figures 8 through 12 are made of concrete blocks and are a nominal 8 inches by 8 inches by 16 inches conforming to ASTM C-90 with the open cells vertical, stacked true,

FOUNDATION SYSTEM (continued)

and plumbed with a maximum horizontal block offset of 1/2 inch from the top to the bottom of the pier.

Single stacked block piers (Figures 8 and 9) must be installed with the 16-inch dimension perpendicular to the main I-beam of the frame. The piers must be covered with a nominal 2-inch by 8 inch by 16 inch treated hard wood or concrete cap block conforming to ASTM C-90.

The minimum height of any pier must be 18 inches. The maximum height for a single stack pier (See Figures 8 and 9) is 36 inches and the maximum height for a double stack pier is 57 inches (See Figure 10).

To properly size your footings it will be necessary to know the allowable soil bearing pressure for the soil at your home site. This information may be obtained from your local building official or by having a soil investigation and analysis of the site performed. Chart 6 has been included in this manual to provide a general description of soils and give an indication of the wide range of soil bearing pressures which may be encountered which will underscore the importance of the soil analysis.

The soil analysis and site investigation will also provide important information pertaining to the local water table, the drainage characteristics of the soil, the potential for soil expansion, and frost heave potential.

Once the allowable soil bearing pressure has been determined, it will be necessary to determine the roof load design zone for your home and site location by referring to the Structural

Design Basis Certificate, Design Roof Load Zone Map, posted in your home.

The maximum allowable spacing between the piers is 8 feet on centers. You will need to determine whether you want to use only I-beam blocking or a combination of I-beam and perimeter blocking. (The use of perimeter blocking does not eliminate the need for support of side wall openings in excess of 4 feet in width or at exterior doorways where required by the manufacturer.) The choice is up to you.

Select the chart which applies to the width of your home and the roof load rating (20 PSF, 30 PSF, 40 PSF, or 60 PSF) and determine the footing size required for the soil bearing capacity of your site based on pier spacing and location. The greater the soil bearing capacity, the smaller the footing required. Footings may be square or round as you prefer but must have a minimum bearing area as called for in the chart.

Alternate Footings

If you are placing the home on a pre-existing home site, it should be shown that the existing footings are adequate to properly support the home. Sites, which require that the foundation system be lengthened to accommodate the home, must be carefully prepared, making certain the new footings are compatible with the pre-existing footings. Unequal or incompatible footings will cause unequal movement in the home should frost heave or settling occur which could overstress the structure of the home causing a failure as described in the introduction to this instruction.

FOUNDATION SYSTEM (continued)

Should you decide to install your home on a concrete pad, it is recommended that the pad be not less than 6 inches in thickness, that the perimeter of the pad be not less than 10 inches in thickness for a width of 12 inches, that the area within 12 inches of either side of each I-beam and the mating line of the home sections be 10 inches in thickness (24 inches wide - See Figure 19), and that the pad be reinforced. You will need to determine the location of each pier prior to pouring the concrete. Failure to do so may result in the pier being positioned away from the thickened area of the pad when the home is set. The concrete must have a minimum 28-day compression strength of not less than 3,000 pounds per square inch with a slump of 4. It must be noted that such a pad floats on the earth's surface and is susceptible to frost heave and settling. Spring and fall re-alignment may be needed.

The support and anchoring systems described and illustrated in this manual have been designed by a registered professional engineer or architect as required by the Manufactured Home Construction and Safety Standards. Should you find that these designs are not in keeping with your wishes or special site conditions, and you decide to have these systems designed by a registered professional engineer or architect, you must make certain that the design meets the requirements of the above named standard and that the site work is inspected by the engineer or architect to ensure compliance with the design.

Proper Alignment

A manufactured home is

cambered and reverse cambered along the I-beam as part of the engineering for the stress of transportation. Likewise, it is cambered from side to side for transportation stresses and live load as well as dead load stresses. Consequently, siding and flooring and rooflines will have variations due to camber lines, which are normal. The home should be blocked and shimmed on the foundation to follow natural camber and reverse camber lines as the home is received from the factory.

There are many accepted methods of aligning homes; however, the method used in this manual will utilize a "liquid level." A liquid level is simply a plastic reservoir holding a colored liquid with approximately 80 feet of clear plastic tube attached. This device operates on the principle that water seeks its own level. See Figure 20.

Support Locations

The support system described and illustrated in this manual allows for each I-beam on each floor section to be supported on piers resting on properly sized footings, which extend below the local frost line, or on a properly constructed concrete pad. The supports must be located within 18 inches of each end of each floor section and at a maximum 8-foot interval in between the end supports.

In addition to the I-beam supports certain points along the mating line of the floor sections will need to be supported to allow roof loading to transfer into the ground. The location and loading for these supports can be determined by reviewing the foundation system plan located in the back of this manual. The

FOUNDATION SYSTEM (continued)

loading can be converted to footing size by referring to chart number 7. In some cases a ground anchor may also be needed to offset uplift at these locations (see Figure 80).

When supports are required to be placed along the mating line where that floor sections meet, care must be taken to ensure that the supports are not placed directly beneath the HVAC crossovers which pass through the perimeter joist on each floor section. This restriction does not apply to homes designed to be placed only on a basement.

Positioning and Blocking

CAUTION

Should you decide to crane set the home on to its supporting system, extreme care must be taken to ensure that the lifting devices, straps, or cables do not come into contact with the home above the level of the bottom surface of the steel frame. The perimeter of the home was not designed to withstand the point loading of such contact.

The site must be properly prepared as instructed earlier in this manual prior to positioning your home. All concrete work must be completed, all ground anchoring devices must be installed, and all service facilities for water, gas, electrical, and drain connections must be complete.

If any trenching must be accomplished for long run drain lines it should be performed at this time. Any other items, which could be difficult to install after the home is positioned,

should be placed in their proper locations at this time.

Select the first section of the home to be set and move it into position on the prepared site.

Hinged Roof Deployment

Should your home have a hinged roof it will need to be raised and assembled prior to blocking the home in its final resting position through the following procedure (See Figure 21, 22 & 23).

1. Raise the hinged portion of the roof using a series of lifting devices located along the ridge beam on approximate 12 foot centers until the kneewall or kingposts can swing into position under the roof deck and against its stop.
2. Lower the roof until it is supported by the kneewall or kingposts and adjust as needed to insure an even roof transition across the hinge line.
3. Secure each truss top chord or kingpost to the kneewall plate by driving No. 8 x 3-inch screws at a 60-degree angle up through the plate into the truss. One fastener from each side.
4. For hinged roof or eaves and the site-installed eaves in other than wind zone 1 applications, refer to the supplement in the back of this instruction.
5. Fasten the roof sheathing from the upper portion of the roof to the top of the truss on the lower or fixed portion of the roof with two 8d common nails at each truss. (See Figure 23)

FOUNDATION SYSTEM (continued)

Reminders before Jacking

1. Use only jacks which are in good working condition having a rating of 12 tons or more.
2. To distribute the concentrated loads created by the jacks, a steel plate or pad should be placed between the jacks and the steel I-beam, C-channel, or tube. See Figure 24.
3. Use a solid support under the jack base to keep the jack from settling or tipping. Excessive or non-uniform jacking during the installation process can cause the home to be racked or twisted. This could result in serious structural damage to the home, thus voiding your warranty.
4. Always follow the sequence of jacking outlined below to avoid overstressing structural members.

WARNING

HOMES WEIGH MANY TONS. SUPPORT BLOCKING SHOULD BE USED TO SAFEGUARD WORKERS AND THE STRUCTURE DURING ALL INSTALLATION PROCEDURES. NEVER ALLOW ANYONE UNDER THE HOME UNLESS BLOCKING, WHICH WILL SAFELY SUPPORT THE WEIGHT OF THE HOME, IS IN PLACE.

Jacking, Alignment, Blocking and Connection Procedure

WARNING

YOU ARE SPECIFICALLY WARNED AGAINST UTILIZING THE COUPLER JACK AS A LOAD BEARING POINT FOR THE LATERAL MOVEMENT OF

THE SECTIONS OF A MANUFACTURED HOME.

COUPLER JACKS ARE NOT ENGINEERED TO WITHSTAND THE BENDING FORCES THAT MAY OCCUR DURING THE LATERAL MOVEMENT OF THE UNIT SECTIONS. SUCH COUPLER JACKS ARE ENGINEERED TO WITHSTAND ONLY THE COMPRESSIVE FORCES OF THE TONGUE OF THE UNIT SECTIONS DURING TRANSPORTATION STAGING. FURTHERMORE, ANY 3 POINT SYSTEM USED TO SUPPORT AND CONVEY THE UNIT SECTION Laterally is less stable than a 4, 6, or 8 point system and therefore is inherently DANGEROUS

1. If a full concrete pad has not been installed at the site, concrete footings should have been installed as described earlier in this manual corresponding to the spacing called for in the tables. **Reminder**, all exterior side wall openings greater than 4 feet wide must be supported with piers. These supports are in addition to any perimeter blocking you may have elected to use. Additionally, the exterior door manufacturer may require that the side of the doorframe be blocked

2. Raise the hitch of the unit approximately 2 inches higher than its final position with a heavy-duty hydraulic jack. Adequate blocking should then be placed under the hitch assembly to prevent its falling to the ground if the jack assembly should fail.

3. Place a 12-ton jack under each main frame member just ahead of the front spring handers and to the rear of

FOUNDATION SYSTEM (continued)

the rear spring hangers (See Figure 25).

These jacks must be operated simultaneously to raise the home until it is approximately 2 inches higher than its final position. Make certain to use jacking plates to avoid these damages.

4. The concrete pad or poured concrete footings should now be located under the I-beams and/or perimeter edge of the home adhering to specified spacing. Concrete block piers are then placed into position at the specified points on the pad or on the concrete footings. These piers must be constructed as described earlier in this manual and must rest fully on the pad or footings.

5. If the wheels are to be removed prior to the home being fully supported on its piers, safety supports should be placed tightly under the frame members to prevent the home from dropping should the jack fail. The wheels can then be removed and placed where the homeowner specifies for storage.

6. The liquid level previously referred to is now positioned at a height whereby the level of the liquid inside the reservoir is exactly at the height the bottom of the steel frame will be in its final resting position. See Figure 26.

7. By placing a shut-off valve at the end of the plastic tubing, the liquid will be prevented from escaping when the end of the hose is lowered below the level of the fluid in the reservoir.

8. By pulling the end of the plastic tube to the first pier, the end of the tube is raised above the bottom of the steel frame and the valve is opened. The top of the pier is then shimmed to match the level of the liquid in the tube. Remember

that tapered hardwood shims must be added from each side of the frame member so that the frame is not resting on an incline. (See Figures 27 through 31). When this operation is complete, each succeeding pier is installed in the same manner. This operation will be much simpler if the top surface of all the concrete footings have the same elevation.

9. The safety support placed in the A-frame area should now be removed along with any supports, which were placed in the axle area when the wheels may have been removed.

10. The jacks are then lowered together allowing the frame to rest on the tapered hardwood shims on top of the concrete block piers.

11. "Remove all jacks from under the frame."

12. Remove the wood stripping and polyethylene close-up material from all sections of the home as needed. Be careful not to damage any adjacent wallboard or siding as you remove the close-up materials. Finish by driving flush or removing **ALL** protruding nails or staples along the mating surfaces. Anything sticking out could hold the sections apart. Remove any shipping braces that extend beyond the mating surface of the unit at this time.

13. **NOTE:** It is important to take special note of temporary structural supports and bracing locations, as they must be reinstalled for any secondary movement. Before the final positioning of each additional section, fiberglass insulation or an equivalent material must be fastened on the mating edges of the

FOUNDATION SYSTEM (continued)

floor, walls, and ceiling to limit air infiltration after the home is installed. An alternative method would be to seal the joints between the floors, walls, and ceilings with a long life caulk or similar material to limit air infiltration. Material used for this purpose should not be placed in a position where it could restrict air ducts in the heating system supply or return air ducts which might cross at the floor line or through the ridge beam. If the crossover duct system requires the use of a connection seal, make certain that it is in place prior to joining the sections.

NOTE

THE JOINT FORMED BY THE CONNECTION OF THE SECTIONS MUST BE TIGHT TO LIMIT ANY AIR INFILTRATION. SPECIAL CARE MUST BE TAKEN TO ASSURE THAT THIS CONNECTION IS CORRECT. THE MAXIMUM ALLOWABLE GAP BETWEEN THE HOME SECTIONS AT ANY POINT IS ONE HALF OF AN INCH. THE GAP SHOULD BE MADE TO BE TIGHT BY ADDING CONTINUOUS SHIMS.

14. Position the next home section alongside the first so that the section ends are even at the floor line.

15. Whether the floors are several inches apart or several feet, it is recommended that a roller system be used to complete the positioning of the second section. The roller system consists of dollies, which utilize rollers and are so constructed that hydraulic jacks can be positioned on the rollers and under the frame members allowing the frame to be rolled sideways very easily. Many service crews and installers have this equipment. It will minimize any

possibility of frame damage, which could void your warranty. (See Figure 32). It is important that you follow the instructions of the roll-off systems manufacturer.

16. Raise this section and each additional section, in order, installing the pier supports the same way as the first section.

17. After the floors have been positioned together and aligned, fasten the side rails of the floor together with 3/8" x 3 1/2" or 4" lag screws. Drive fasteners from alternate sides at 24 inches on center along the length of the floor from end to end (See Figure 33). An additional two lags must be installed at each end so that there are three lags, 4 inches on center. Pilot holes are to be drilled for lag screws to avoid splitting the rails. **DO NOT USE THE LAG SCREWS TO PULL THE HOME SECTIONS TOGETHER.** When one side of the floor is lower than the other, use a jack to raise the side rail of the low side. Once the floors are even, lag the side rails together. Continue to check alignment and fasten the floors together for the length of the home. Any holes cut in the bottom covering must be repaired as described later on in this instruction.

18. Additional floor sections should be positioned and aligned with the other floor sections as described above. The additional floor sections must be fastened as described above.

19. Inside the home, the ceiling panels and the endwalls on each section must align with each other. If the sections are not in proper alignment, they may be adjusted by shifting the house. This is done by raising the corner of an endwall that needs to go in at the top. This will cause the ceiling on the opposite

FOUNDATION SYSTEM (continued)

side to move forward as illustrated in Figure 34. When the endwalls become flush, fasten them together at the front and back end of the house using No. 8" x 3" screws, 16 inches on center, driven from alternate sides at a 30 degree angle to the wall. A fastener must be within 6 inches of both the top and bottom plate of the endwall. Once the endwalls are secured, make sure the roofs are aligned and that the ceilings line-up. If they are still off, shift the section a little more to bring the roofs and ceilings into alignment.

NOTE: It is imperative that the ceilings on each section be exactly flush before fastening the ridge beams together.

20. By carefully inspecting the ceiling or by using a straight edge, low points can be determined. Start in the front and work to the back of the house. To raise the low portion, use a hydraulic jack and a padded tee underneath the low point. See Figure 35. Carefully raise the jack until the two ceiling sections are flush. Then, fasten the two ridge beams together on the outside of the home. This procedure should be repeated at each point where the one side of the ceiling is low.

21. To secure the two roof sections together, drive 3/8" x 7" lag screws at a 60 to 90 degree angle so they penetrate both ridge beams. Install the lag screws from alternate sides on 24-inch centers, wind zone I, or 18 inches on center, wind zone II along the length of the home. An additional two lags must be installed at each end so that there are three lags, 4 inches on center. (See Figure 36).

In those cases where the connection is made through the roof system, such as the mating gables of a triple wide unit, drive No. 8 x 3 inch flat

head screws at a 60 to 90 degree angle so they penetrate the truss on each side of the joint. Two screws must be installed at each connection, one from either side, 24 inches on centers for wind zone I and 18 inches on centers for wind zone II. Remember, the fasteners are used to keep the sections together and must **NOT** be used as a way to pull the roofs together.

22. The electrical and water supply systems cross connection can now be made. The electrical connections have been identified and numbered. Any holes cut in the bottom-board must be repaired. Refer to the Utility Systems section of this manual for the procedures to be followed when making the cross connections.

23. The alignment of the home can be fine tuned by driving the tapered hardwood shims between the frame and the piers to even out any low areas caused by the compressive weight of the home on the piers.

24. After completion of the alignment and installation procedure, all doors and windows should be checked to see that they operate freely without binding. If binding does occur, the alignment will need to be adjusted. A properly aligned home may not be exactly level. Refer to "Proper Alignment" earlier in this section.

25. At this point the removable hitch and axles can be detached from the integral floor system if desired (removable hitch is optional) and placed where the homeowner specifies for storage (see Figures 37 and 38).

26. The completed set-up must be checked in 8 weeks with corrective action

FOUNDATION SYSTEM (continued)

being taken to compensate for any pier or footing settlement, as well as any shim compression due to unit weight. All doors and windows should be checked to see that they still operate freely without binding and that the weather seals are still intact. The set-up should further be checked on an annual basis as called for in the HomeOwners Manual as owner maintenance.

Ground Anchoring

Once the home is in its final resting position and has been completely supported and aligned, the ground anchoring system can be installed. The purpose of the ground anchoring system is to provide resistance to counter the lateral and uplift forces of the wind which can move the unanchored home off its piers causing structural damage. Multiple story homes and homes with increased roof slopes may have reduced anchor spacings.

CAUTION

IF THE ANCHORING SYSTEM IS NOT PROPERLY INSTALLED, THE INTEGRAL FLOOR SYSTEM OF THE HOME COULD ACTUALLY BE DAMAGED OR THE ALIGNMENT OF THE HOME CHANGED. FOLLOW THE EQUIPMENT MANUFACTURERS RECOMMENDATIONS.

Ground anchor straps or cables should be alternately tensioned on opposite sides of the home to avoid the problems mentioned above.

Pre-Anchoring Inspection

At this time all furniture, carpet, fixtures, or other loose items should be

installed. All shipping blocks, brackets, and/or clips installed on appliances for shipment should be removed. All clamps or brackets installed on windows and doors for shipping purposes should be removed and the operation of these items checked.

At the time of manufacture, the doors and windows were fully operational and were sealed against the weather as needed. Should any windows or doors bind or not close properly, an adjustment to the alignment of the home is needed. Door and window weather seals should be inspected to ensure that they are intact.

The utilities should now be connected and tested; however, this will be covered in another section of this instruction.

Consequences of Incorrect Blocking and Alignment

Incorrect blocking and alignment of your home could produce a sagging home and these related conditions:

1. Buckling and/or loosening of walls, partitions, siding, ceilings, doors, floors, linoleum, carpeting, insulation, wiring, sinks, tubs, toilets, weather-stripping and miscellaneous fixed original fixtures of the home;
2. Leaking windows, doors, roofs, ceilings, walls, floors, seams, and junctions generally caused from rain, snow, or moisture;
3. Improper closing, binding, and sagging of windows, cabinets, and interior and exterior doors; and

FOUNDATION SYSTEM (continued)

4. Malfunctioning of plumbing, water outlets, lighting fixtures and electric heating and air conditioning systems.

Porches and Decks

Certain porch and deck framework must be supported along its outer perimeter and at the vertical columns along the porch. These supports are to be of the same construction as the piers described earlier in this instruction and must be located as shown on the supplement inserted into the back of this manual.

A hinged porch installed on the end of a home section may require the installation of the last few boards to complete the deck. Position the boards as needed following the existing pattern. Fasten in place using 16d coated nails or number 8 screws matching the placement on the per-installed boards.

Steps, handrails, and guardrails are to be installed in keeping with the requirements of the local jurisdiction where the offset between the porch or deck surface and the finished grade of the home site exceeds the maximum allowed without protection.

Masonry Faced Fireplaces

Fireplace installations having an application of floor to ceiling masonry on the front wall of the enclosure can add up to 180 pounds per linear foot of additional concentrated load to the floor of your home. This additional loading will require additional foundation support. This support must be in the form of properly sized footings and piers as described in this manual or as footings and column posts as described on the

individual home foundation plans and detail drawings.

Due to the random nature of fireplace placement and masonry application the location of such installations cannot be predetermined on each home produced. Additional supports should be added to each I-beam of the home frame which intersects the front enclosure wall and where the wall meets the mating line or exterior wall of the home.


Curtain Walls

Where the support system for the home consists of a series of concrete footings and piers, or similar alternate construction, as described in this manual, and the area beneath the home is to be enclosed with a curtain wall of wood, poured concrete, concrete block, brick, or other material construction which would be capable of supporting some part of the weight of the home, the wall must be supported by a properly sized footing which has been located below the local frost line. Should the footing be placed above the frost line, your home could become misaligned and damaged by unseen forces.

CAUTION

IN THOSE CASES WHERE THE HOME IS INSTALLED ON A BASEMENT FOUNDATION, THE AIR INTAKES FOR ANY FUEL BURNING APPLIANCES WHICH DRAW COMBUSTION AIR FROM UNDER THE HOME MUST BE EXTENDED TO THE EXTERIOR SIDE OF THE FOUNDATION WALL.

FIGURE 1

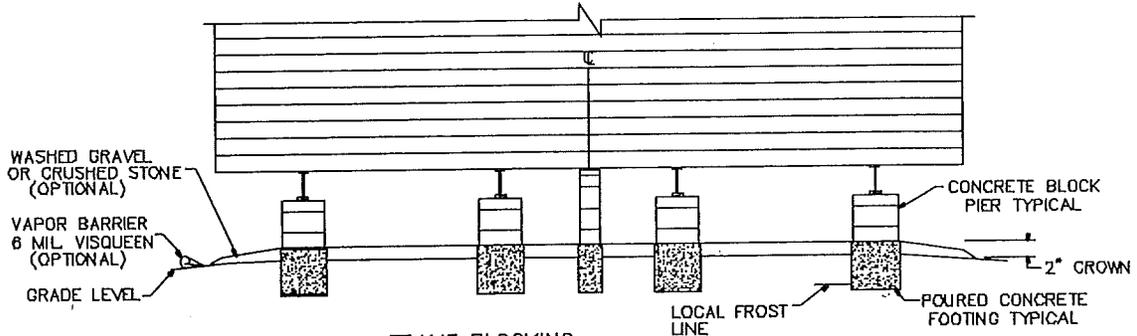

FRAME BLOCKING

NOTE: PERIMETER BLOCKING IS REQUIRED AT ALL EXTERIOR OPENINGS EXCEEDING 4'-0" IN WIDTH. (PATIO DOORS, LARGE WINDOWS, ETC.)

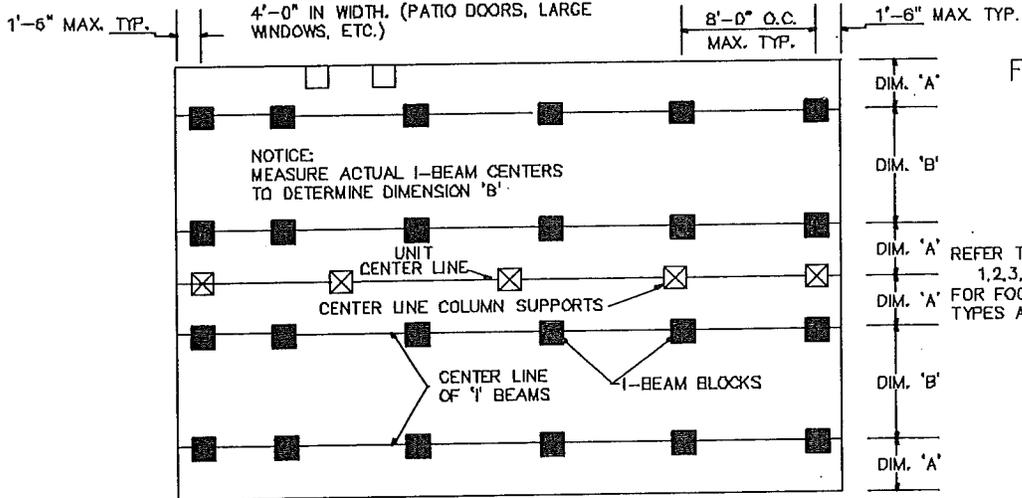


FIGURE 2

PERIMETER AND FRAME BLOCKING

NOTE: PERIMETER BLOCKING IS REQUIRED AT ALL EXTERIOR OPENINGS EXCEEDING 4'-0" IN WIDTH. (PATIO DOORS, LARGE WINDOWS, ETC.)

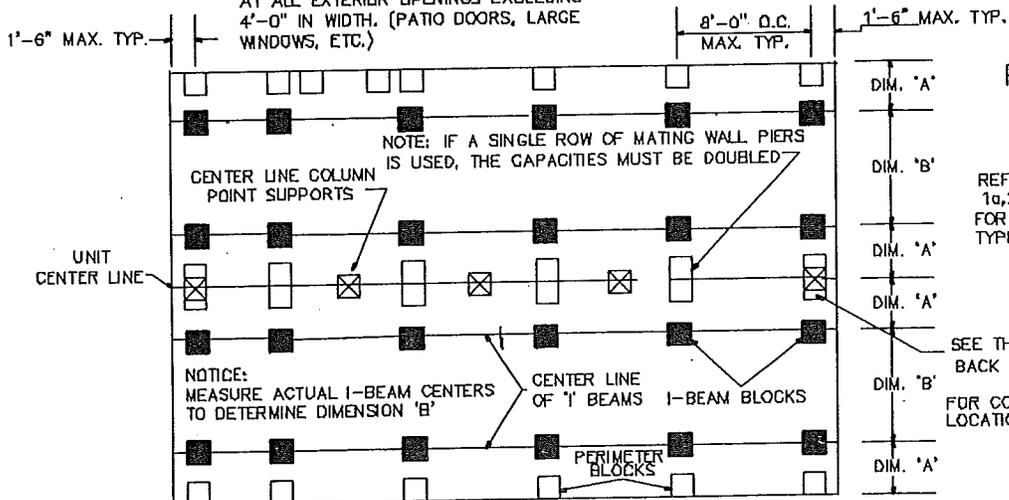


FIGURE 3


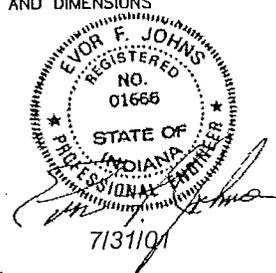


FIGURE 4

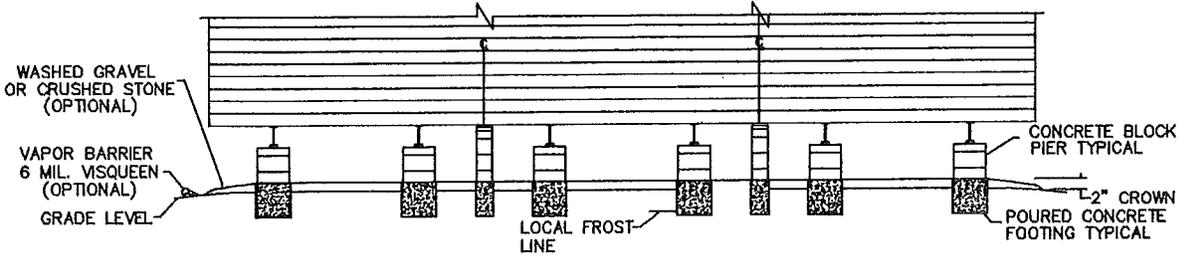

FRAME BLOCKING

NOTE: PERIMETER BLOCKING IS REQUIRED AT ALL EXTERIOR OPENINGS EXCEEDING 4'-0" IN WIDTH. (PATIO DOORS, LARGE WINDOWS, ETC.)

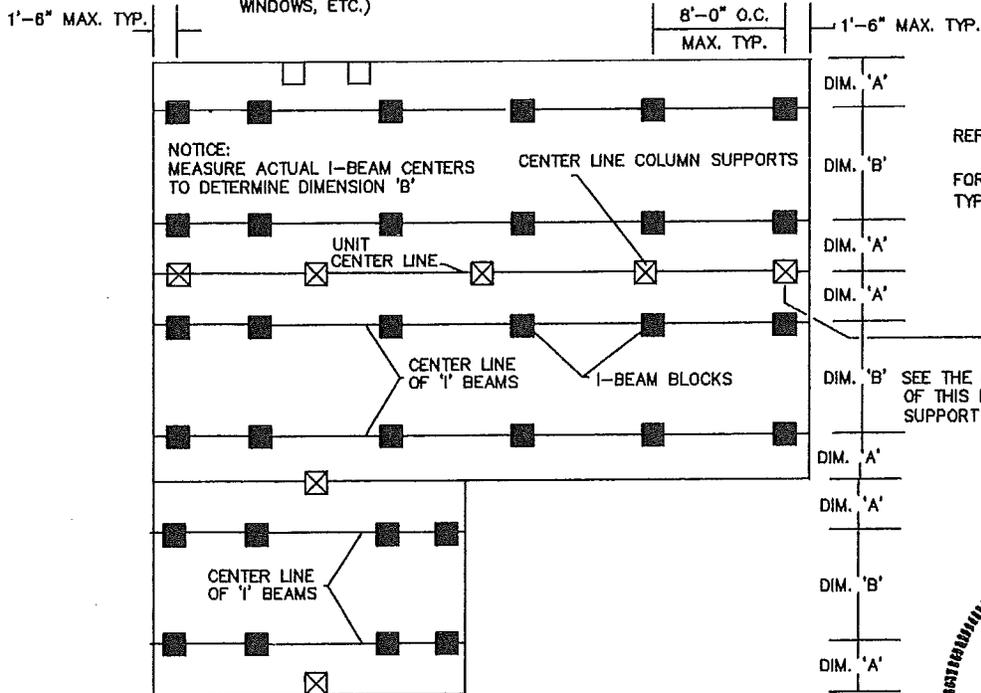


FIGURE 5

REFER TO CHARTS 1, 2, 3, 5 & 6 FOR FOOTINGS, SOIL TYPES AND DIMENSIONS

SEE THE DRAWING IN THE BACK OF THIS MANUAL FOR COLUMN SUPPORT LOCATIONS

NOTE: CENTERLINE SUPPORTS (⊠) MUST NOT BE PLACED DIRECTLY UNDERNEATH HVAC CROSSOVERS, WHICH GO THROUGH THE PERIMETER RAIL.

EVOR F. JOHNS
 REGISTERED
 NO. 01666
 STATE OF INDIANA
 PROFESSIONAL ENGINEER

Date Signed: February 26, 2002

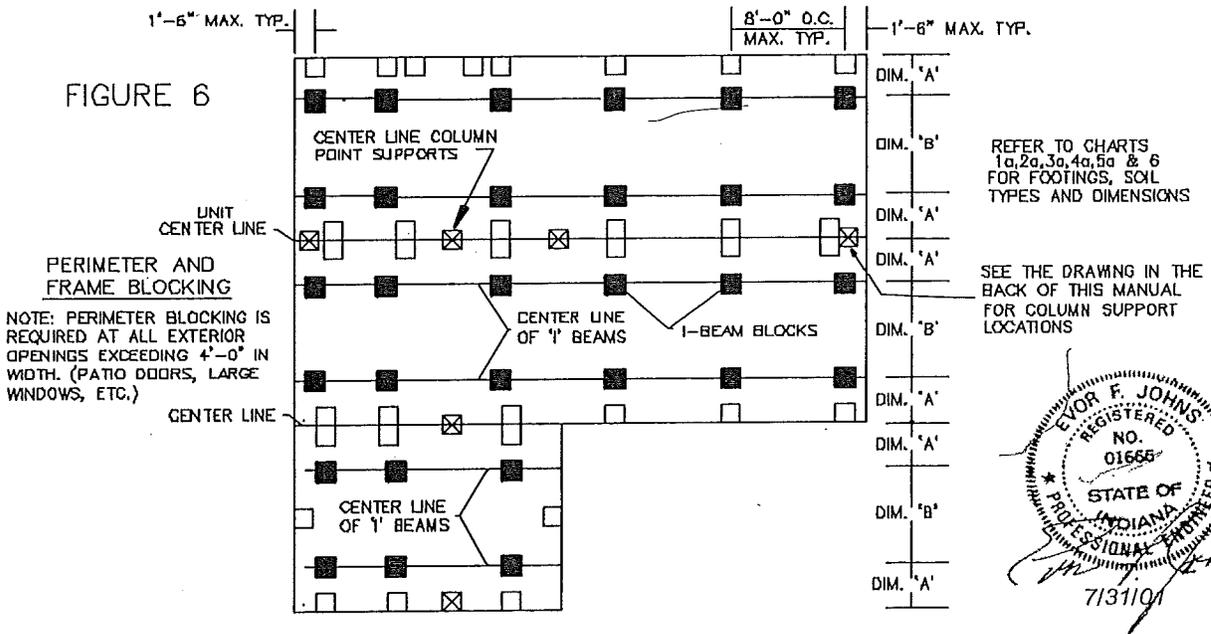


CHART 1

NOMINAL WIDTH	UNIT WIDTH	82 1/2" 1-BEAM CENTERS		UNIT WIDTH	99 1/2" 1-BEAM CENTERS		EXTERIOR WALL THICKNESS
		DIM "A"	DIM "B"		DIM "A"	DIM "B"	
23' WIDE	270"(274)	26 1/4"(27 1/4)	82 1/2"	270"(274)	17 3/4"(18 3/4)	99 1/2"	4" (6")
24' WIDE	282"(286)	29 1/4"(30 1/4)	82 1/2"	282"(286)	20 3/4"(21 3/4)	99 1/2"	4" (6")
26' WIDE	312"(316)	36 3/4"(37 3/4)	82 1/2"	312"(316)	28 1/4"(29 1/4")	99 1/2"	4" (6")
27' WIDE	324"	39 3/4"	82 1/2"	324"	31 1/4"	99 1/2"	6"
28' WIDE	330"	41 1/4"	82 1/2"	334"	33 3/4"	99 1/2"	6"
32' WIDE	364"	49 3/4"	82 1/2"	368"	42 1/4"	99 1/2"	6"

CHART 2

NOTE1: DIMENSION IN PARENTHESES ARE FOR 6" WALL THICKNESS.
NOTE2: MEASURE ACTUAL 1-BEAM CENTERS TO DETERMINE DIMENSION 'B'

PIER & PAD SCHEDULE

DOUBLE WIDE 20 POUND LIVE LOAD WITH NO PERIMETER BLOCKING

SOIL CAP.	LEGEND	PIER LOC.	23 FEET WIDE 8'-0" O.C.		24 FEET WIDE 8'-0" O.C.		26 FEET WIDE 8'-0" O.C.		27/28 FEET WIDE 8'-0" O.C.		32 FEET WIDE 8'-0" O.C.	
			REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)
1000	■	FRAME	4240	702	4400	729	4800	795	5040	835	5627	932
1500	■	FRAME	4240	448	4400	465	4800	507	5040	532	5627	594
2000	■	FRAME	4240	328	4400	341	4800	372	5040	390	5627	436
2500	■	FRAME	4240	259	4400	269	4800	293	5040	308	5627	344
3000	■	FRAME	4240	214	4400	222	4800	242	5040	254	5627	284

CHART 2a

PIER & PAD SCHEDULE DOUBLEWIDE 20 POUND LIVE LOAD WITH PERIMETER BLOCKING												
SOIL CAP.	LEGEND	PIER LOC.	23 FEET WDE 8'-0" O.C.		24 FEET WDE 8'-0" O.C.		26 FEET WDE 8'-0" O.C.		27/28 FEET WDE 8'-0" O.C.		32 FEET WDE 8'-0" O.C.	
			REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)
1000	<input checked="" type="checkbox"/>	FRAME	1813	300	1863	308	1988	329	2063	342	2388	395
	<input type="checkbox"/>	PERIMETER	2028	338	2138	354	2413	400	2578	427	2839	470
1500	<input checked="" type="checkbox"/>	FRAME	1813	191	1863	197	1988	210	2063	218	2388	252
	<input type="checkbox"/>	PERIMETER	2028	214	2138	226	2413	255	2578	272	2839	300
2000	<input checked="" type="checkbox"/>	FRAME	1813	140	1863	144	1988	154	2063	160	2388	185
	<input type="checkbox"/>	PERIMETER	2028	157	2138	165	2413	187	2578	199	2839	220
2500	<input checked="" type="checkbox"/>	FRAME	1813	111	1863	114	1988	121	2063	128	2388	148
	<input type="checkbox"/>	PERIMETER	2028	124	2138	131	2413	147	2578	157	2839	173
3000	<input checked="" type="checkbox"/>	FRAME	1813	91	1863	94	1988	100	2063	104	2388	120
	<input type="checkbox"/>	PERIMETER	2028	102	2138	108	2413	122	2578	130	2839	143

CHART 3

PIER & PAD SCHEDULE DOUBLEWIDE 30 POUND LIVE LOAD WITH NO PERIMETER BLOCKING												
SOIL CAP.	LEGEND	PIER LOC.	23 FEET WDE 8'-0" O.C.		24 FEET WDE 8'-0" O.C.		26 FEET WDE 8'-0" O.C.		27/28 FEET WDE 8'-0" O.C.		32 FEET WDE 8'-0" O.C.	
			REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)
1000	<input checked="" type="checkbox"/>	FRAME	4770	790	4950	820	5400	894	5670	939	6330	1048
1500	<input checked="" type="checkbox"/>	FRAME	4770	604	4950	523	5400	570	5670	599	6330	668
2000	<input checked="" type="checkbox"/>	FRAME	4770	389	4950	383	5400	418	5670	439	6330	490
2500	<input checked="" type="checkbox"/>	FRAME	4770	291	4950	302	5400	330	5670	346	6330	386
3000	<input checked="" type="checkbox"/>	FRAME	4770	240	4950	249	5400	272	5670	288	6330	319

CHART 3a

PIER & PAD SCHEDULE DOUBLEWIDE 30 POUND LIVE LOAD WITH PERIMETER BLOCKING												
SOIL CAP.	LEGEND	PIER LOC.	23 FEET WDE 8'-0" O.C.		24 FEET WDE 8'-0" O.C.		26 FEET WDE 8'-0" O.C.		27/28 FEET WDE 8'-0" O.C.		32 FEET WDE 8'-0" O.C.	
			REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)
1000	<input checked="" type="checkbox"/>	FRAME	1813	300	1863	308	1988	329	2063	342	2388	395
	<input type="checkbox"/>	PERIMETER	2558	424	2688	445	3013	499	3208	531	3543	587
1500	<input checked="" type="checkbox"/>	FRAME	1813	191	1863	197	1988	210	2063	218	2388	252
	<input type="checkbox"/>	PERIMETER	2558	270	2688	284	3013	318	3208	339	3543	374
2000	<input checked="" type="checkbox"/>	FRAME	1813	140	1863	144	1988	154	2063	160	2388	185
	<input type="checkbox"/>	PERIMETER	2558	198	2688	208	3013	233	3208	248	3543	274
2500	<input checked="" type="checkbox"/>	FRAME	1813	111	1863	114	1988	121	2063	128	2388	148
	<input type="checkbox"/>	PERIMETER	2558	158	2688	164	3013	184	3208	198	3543	218
3000	<input checked="" type="checkbox"/>	FRAME	1813	91	1863	94	1988	100	2063	104	2388	120
	<input type="checkbox"/>	PERIMETER	2558	129	2688	135	3013	152	3208	162	3543	179



CHART 4

PIER & PAD SCHEDULE		DOUBLEWIDE 40 POUND LIVE LOAD WITH NO PERIMETER BLOCKING										
SOIL CAP.	LEGEND	PIER LOC.	23 FEET WDE 8'-0" O.C.		24 FEET WDE 8'-0" O.C.		26 FEET WDE 8'-0" O.C.		27/28 FEET WDE 8'-0" O.C.		32 FEET WDE 8'-0" O.C.	
			REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)
1000	<input checked="" type="checkbox"/>	FRAME	5300	878	5500	911	6000	994	6300	1043	7033	1165
1500	<input checked="" type="checkbox"/>	FRAME	5300	560	5500	581	6000	634	6300	665	7033	743
2000	<input checked="" type="checkbox"/>	FRAME	5300	410	5500	426	6000	464	6300	488	7033	544
2500	<input checked="" type="checkbox"/>	FRAME	5300	324	5500	338	6000	368	6300	385	7033	429
3000	<input checked="" type="checkbox"/>	FRAME	5300	287	5500	277	6000	302	6300	318	7033	354

CHART 4a

PIER & PAD SCHEDULE		DOUBLEWIDE 40 POUND LIVE LOAD WITH PERIMETER BLOCKING										
SOIL CAP.	LEGEND	PIER LOC.	23 FEET WDE 8'-0" O.C.		24 FEET WDE 8'-0" O.C.		26 FEET WDE 8'-0" O.C.		27/28 FEET WDE 8'-0" O.C.		32 FEET WDE 8'-0" O.C.	
			REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)
1000	<input checked="" type="checkbox"/>	FRAME	1813	300	1863	308	1988	328	2063	342	2388	395
	<input type="checkbox"/>	PERIMETER	3088	511	3238	536	3513	598	3838	635	4246	703
1500	<input checked="" type="checkbox"/>	FRAME	1813	191	1863	197	1988	210	2063	218	2388	252
	<input type="checkbox"/>	PERIMETER	3088	328	3238	342	3513	381	3838	405	4246	448
2000	<input checked="" type="checkbox"/>	FRAME	1813	140	1863	144	1988	154	2063	160	2388	185
	<input type="checkbox"/>	PERIMETER	3088	239	3238	251	3513	280	3838	297	4246	329
2500	<input checked="" type="checkbox"/>	FRAME	1813	111	1863	114	1988	121	2063	126	2388	146
	<input type="checkbox"/>	PERIMETER	3088	189	3238	198	3513	221	3838	234	4246	259
3000	<input checked="" type="checkbox"/>	FRAME	1813	91	1863	94	1988	100	2063	104	2388	120
	<input type="checkbox"/>	PERIMETER	3088	158	3238	163	3513	182	3838	193	4246	214

CHART 5a

PIER & PAD SCHEDULE		DOUBLEWIDE 60 POUND LIVE LOAD WITH PERIMETER BLOCKING										
SOIL CAP.	LEGEND	PIER LOC.	23 FEET WDE 8'-0" O.C.		24 FEET WDE 8'-0" O.C.		26 FEET WDE 8'-0" O.C.		27/28 FEET WDE 8'-0" O.C.		32 FEET WDE 8'-0" O.C.	
			REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)	REQ'D. PIER CAPACITY (LBS.)	REQ'D. FOOTING (SQ. IN.)
1000	<input checked="" type="checkbox"/>	FRAME	1813	300	1863	308	1988	329	2063	342	2396	397
	<input type="checkbox"/>	PERIMETER	4148	687	4338	718	4813	797	5354	867	5685	942
1500	<input checked="" type="checkbox"/>	FRAME	1813	191	1863	197	1988	210	2063	218	2396	253
	<input type="checkbox"/>	PERIMETER	4148	338	4338	358	4813	508	5354	565	5685	601
2000	<input checked="" type="checkbox"/>	FRAME	1813	140	1863	144	1988	154	2063	160	2396	188
	<input type="checkbox"/>	PERIMETER	4148	231	4338	251	4813	280	5354	297	5685	329
2500	<input checked="" type="checkbox"/>	FRAME	1813	111	1863	114	1988	121	2063	126	2396	147
	<input type="checkbox"/>	PERIMETER	4148	189	4338	198	4813	221	5354	234	5685	259
3000	<input checked="" type="checkbox"/>	FRAME	1813	91	1863	94	1988	100	2063	104	2396	121
	<input type="checkbox"/>	PERIMETER	4148	158	4338	163	4813	182	5354	193	5685	214

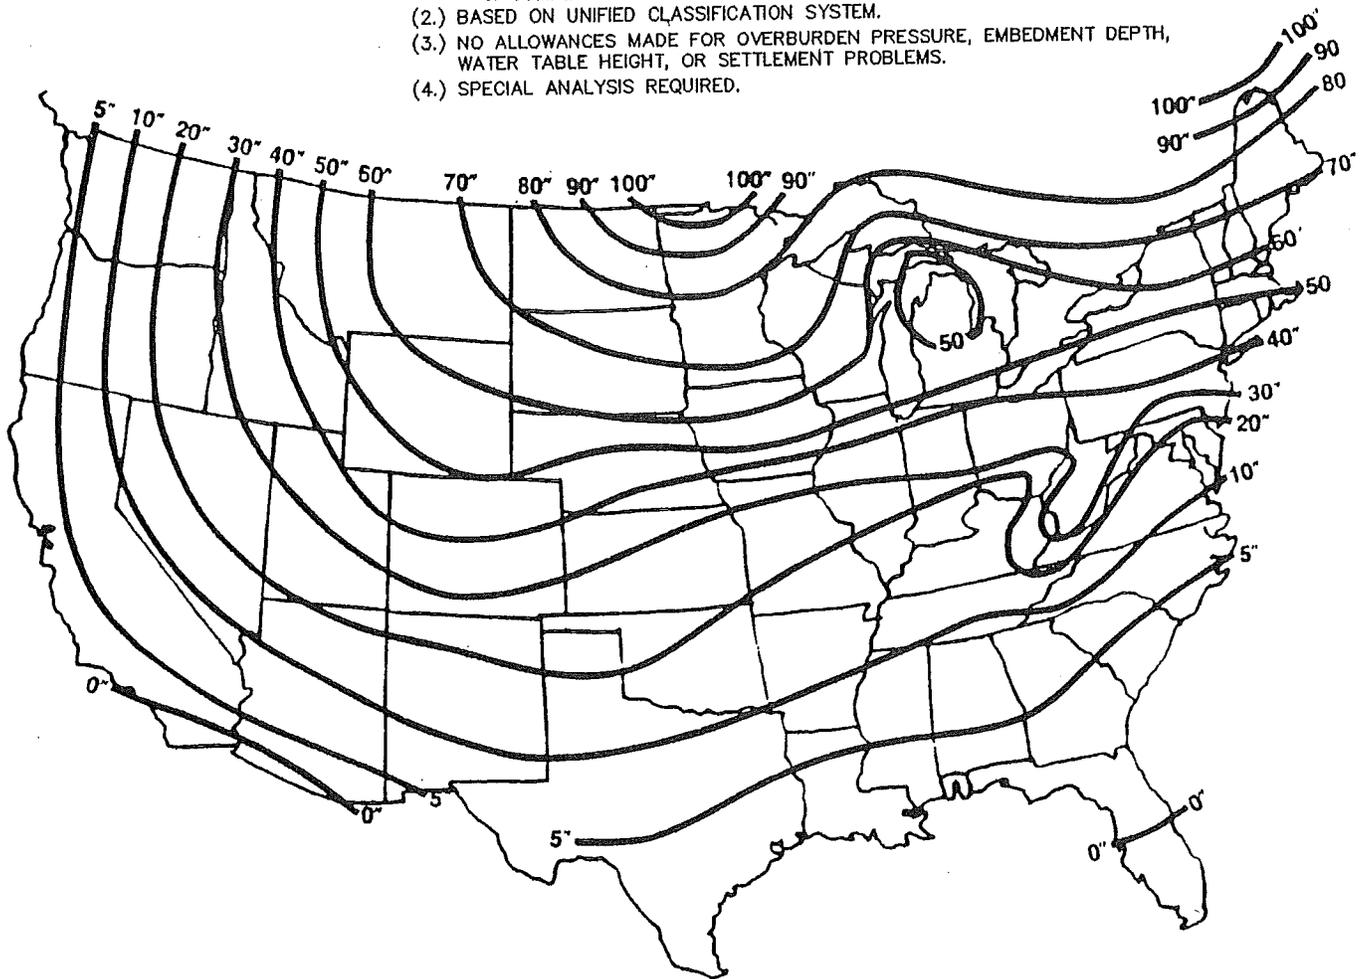


CHART 6

SOIL TYPE (2)	ALLOWABLE PRESSURE (3) (POUNDS PER SQUARE FOOT)
ROCK, HARD PAN	4,000 AND UP
SANDY GRAVEL AND GRAVEL	2,000
SAND, SILTY SAND, CLAYEY SAND, SILTY CLAY, CLAYEY SILT	1,500
CLAY, SANDY CLAY SILTY CLAY, CLAYEY SILT	1,000
UNCOMMITTED FILL	SEE NOTE (4)
PEAT, ORGANIC CLAYS.	SEE NOTE (4)

NOTES:

- (1.) TO BE USED ONLY WHEN NONE OF THE FOLLOWING IS AVAILABLE:
 - a. SOILS INVESTIGATION & ANALYSIS OF SITE.
 - b. COMPLIANCE WITH LOCAL BUILDING CODES.
 - c. COMPLETENT OPINION BY LOCAL ENGINEER OR BUILDING OFFICIAL.
- (2.) BASED ON UNIFIED CLASSIFICATION SYSTEM.
- (3.) NO ALLOWANCES MADE FOR OVERBURDEN PRESSURE, EMBEDMENT DEPTH, WATER TABLE HEIGHT, OR SETTLEMENT PROBLEMS.
- (4.) SPECIAL ANALYSIS REQUIRED.



FROST PENETRATION DEPTHS

FIGURE 7

U.S. DEPARTMENT OF COMMERCE WEATHER BUREAU

CENTER LINE FOOTING SIZE
FOOTING SIZE
(MINIMUM REQUIRED SIZE IN INCHES)

PIER CAPACITY POUNDS	SOIL CAPACITY				
	1000 PSF	1500 PSF	2000 PSF	2500 PSF	3000 PSF
600	16X16X6	16X16X6	16X16X6	16X16X6	16X16X6
800	16X16X6	16X16X6	16X16X6	16X16X6	16X16X6
1000	16X16X6	16X16X6	16X16X6	16X16X6	16X16X6
1500	16X16X6	16X16X6	16X16X6	16X16X6	16X16X6
2000	18x18x6	16X16X6	16X16X6	16X16X6	16X16X6
2500	20x20x6	16X16X6	16X16X6	16X16X6	16X16X6
3000	22x22x6	18x18x6	16X16X6	16X16X6	16X16X6
3500	24x24x6	19x19x6	17x17x6	16X16X6	16X16X6
4000	25x25x6	20x20x6	18x18x6	16X16X6	16X16X6
4500	27x27x8	22x22x6	19x19x6	17x17x6	16X16X6
5000	29x29x8	23x23x6	20x20x6	18x18x6	16X16X6
5500	30x30x8	24x24x8	21x21x6	18x18x6	17x17x6
6000	31x31x8	25x25x8	22x22x8	19x19x6	18x18x6
6500	33x33x10	26x26x8	23x23x8	20x20x6	18x18x6
7000	34x34x10	27x27x8	23x23x8	21x21x8	19x19x6
7500	36x36x10	28x28x8	24x24x8	22x22x8	20x20x6
8000	37x37x10	29x29x10	25x25x8	22x22x8	20x20x8
8500	38x38x12	30x30x10	26x26x8	23x23x8	21x21x8
9000	39x39x12	31x31x10	27x27x10	24x24x8	22x22x8
10000	42x42x12	33x33x12	28x28x10	25x25x10	23x23x8
11000	45x45x15	35x35x12	29x29x10	26x26x10	24x24x10
12000	47x47x15	36x36x12	31x31x12	27x27x10	25x25x10
13000	48x48x15	38x38x15	32x32x12	29x29x12	26x26x10
14000	51x51x18	40x40x15	33x33x12	30x30x12	27x27x10
15000	53x53x18	41x41x15	35x35x15	31x31x12	28x28x12
16000	-NA-	42x42x15	36x36x15	32x32x12	29x29x12
17000	-NA-	44x44x18	37x37x15	33x33x15	30x30x12
18000	-NA-	46x46x18	38x38x15	34x34x15	31x31x15
19000	-NA-	47x47x18	39x39x15	35x35x15	32x32x15
20000	-NA-	48x48x18	41x41x18	36x36x15	32x32x15
21000	-NA-	50x50x21	42x42x18	37x37x15	33x33x15
22000	-NA-	51x51x21	43x43x18	38x38x18	34x34x315
23000	-NA-	52x52x21	44x44x18	39x39x18	35x35x15

NOTE: FOOTING SIZES ARE FOR SQUARE PADS AND ARE BASED ON THE AREA (SQURE INCHES) REQUIRED FOR THE LOAD.

CHART 7



PIER DETAILS

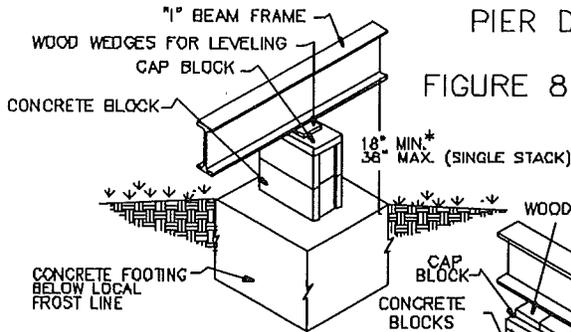


FIGURE 8

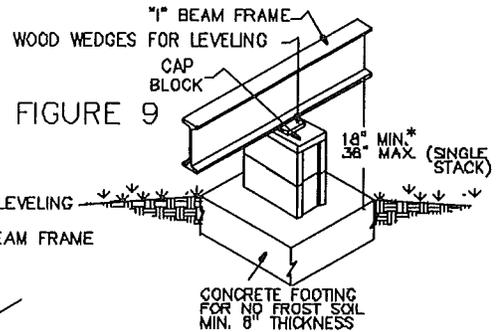


FIGURE 9

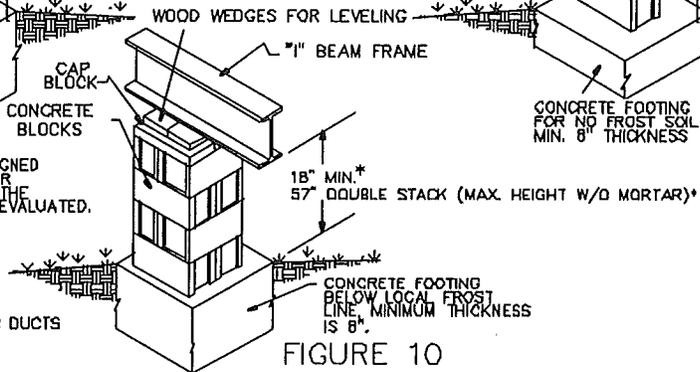


FIGURE 10

- * PIERS OF GREATER HEIGHT MUST BE DESIGNED BY A REGISTERED PROFESSIONAL ENGINEER OR ARCHITECT. WHEN PIERS EXCEED 57', THE ANCHORING SYSTEM WILL NEED TO BE REEVALUATED.
- * CENTERLINE PIERS MAY EXTEND ABOVE 57' ONLY TO MEET THE FLOOR TO SUPPORT THE COLUMN. PIERS ABOVE 57' MUST BE MORTARED.
- * 18" MINIMUM RECOMMENDED FOR THE PROPER INSTALLATION OF EXTERIOR HVAC DUCTS AND ACCESS FOR SERVICING THE HOME.

PIER OFFSET DETAILS

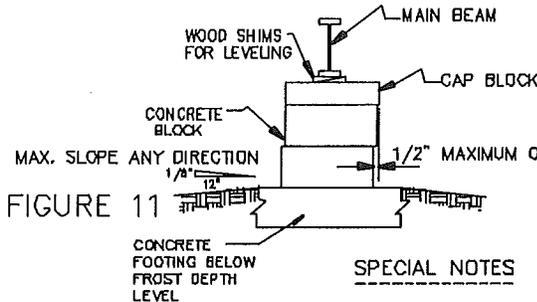


FIGURE 11

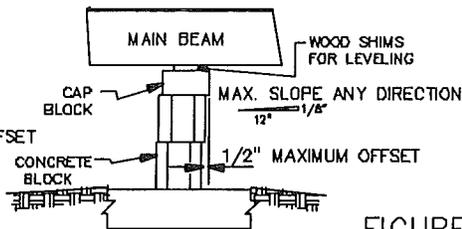


FIGURE 12

SPECIAL NOTES

FOOTING MUST BE LARGE ENOUGH TO ALLOW FOR FULL CONTACT BETWEEN THE BLOCKS AND THE FOOTING.

ALL FOOTINGS HAVE AN 8" MINIMUM THICKNESS, AND MUST EXTEND BELOW THE LOCAL FROST LINE.



IMPROPER FOOTING DETAIL

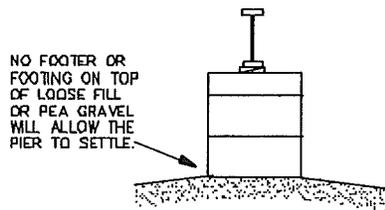


FIGURE 13

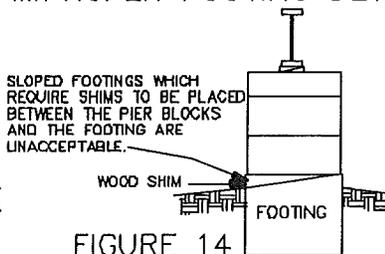


FIGURE 14

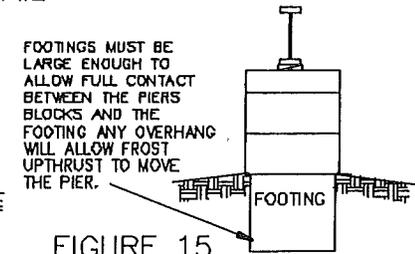


FIGURE 15

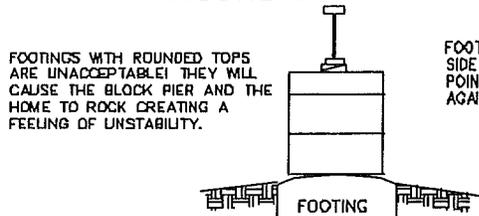


FIGURE 16

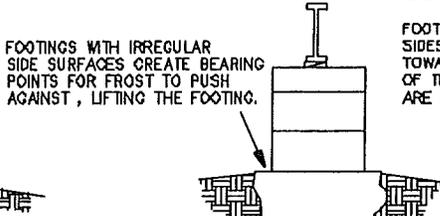


FIGURE 17



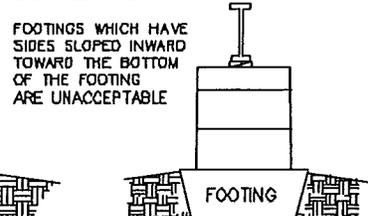


FIGURE 18

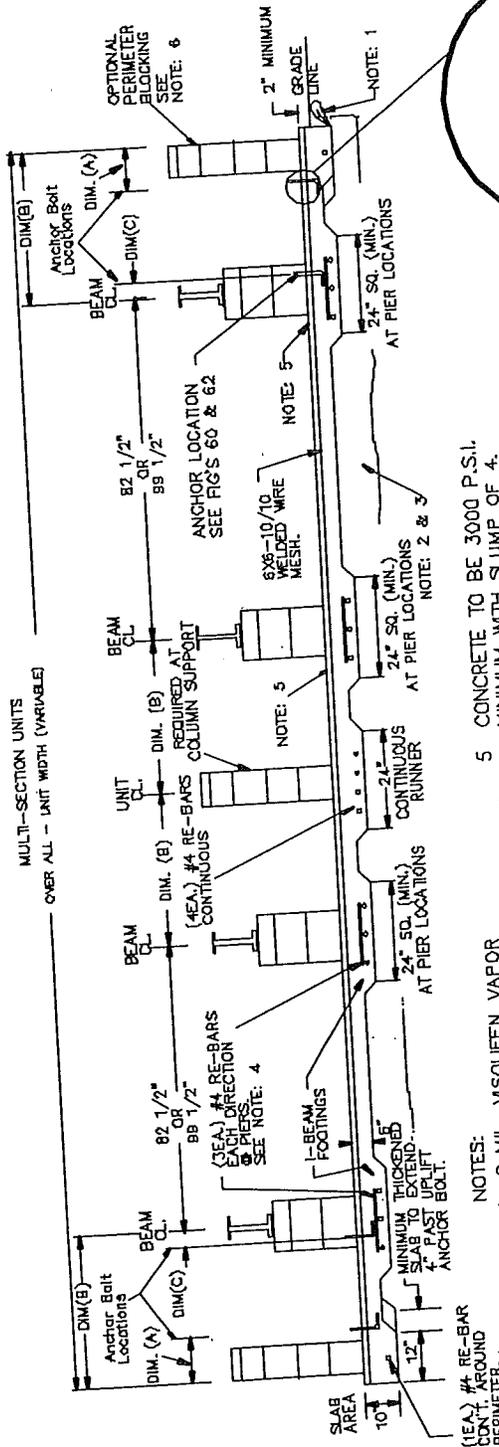

- NOTES:
- 1 6 MIL. VISQUEEN VAPOR BARRIER UNDER CONCRETE.(OPTIONAL)
 - 2 ALL ORGANIC MATERIAL TO BE REMOVED FROM UNDER PAD.
 - 3 NON-ORGANIC FILL MUST BE COMPACTED TO 95% OF ITS MAXIMUM RELATIVE DENSITY.
 - 4 RE-BARS LOCATED 3" FROM BOTTOM AND SIDES OF CONCRETE.
 - 5 CONCRETE TO BE 3000 P.S.I. MINIMUM WITH SLUMP OF 4.
 - 6 PERMETER BLOCKING AROUND THE ENTIRE UNIT IS OPTIONAL, YET IS REQUIRED AT ALL EXTERIOR SIDEWALL OPENINGS EXCEEDING 4'-0" IN WIDTH (PATIO DOORS, LARGE WINDOWS, ETC.)
 - 7 IN LOCATIONS SUSCEPTIBLE TO FROST HEAVE, PERIODIC REALIGNMENT WILL BE REQUIRED.
 - 8 PAD MUST BE SLOPED FROM THE CENTERS OUTWARD EACH DIRECTION A MAXIMUM OF 1/8 INCH PER FOOT

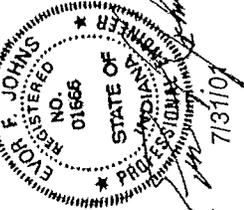

UNIT WIDTH MINIMAL	UNIT WIDTH ACTUAL *	EXTERIOR WALL THICKNESS	DIMENSION "A"	DIMENSION "B"	DIMENSION "B"	DIMENSION "C"
23' WIDE	270" (274")	4" (6")	10" (12")	82 1/2" I-BEAM	99 1/2" I-BEAM	2"
24' WIDE	282" (286")	4" (6")	10" (12")	28 1/4" (27 1/4")	17 3/4" (18 3/4")	2"
26' WIDE	312" (316")	4" (6")	10" (12")	29 1/4" (30 1/4")	20 3/4" (21 3/4")	2"
27' WIDE	(324")	(6")	(10")	36 3/4" (37 3/4")	28 1/4" (29 1/4")	2"
28' WIDE	(330")	(6")	(10")	(39 3/4")	(31 1/4")	2"
28' WIDE	(354")	(6")	(12")	(41 1/4")	32 3/4" (33 3/4")	2"
32' WIDE	(364")	(6")	(10")	(49 3/4")	42 1/4" (43 1/4")	2"
32' WIDE	(368")	(6")	(12")			2"

- NOTES:
1. DOES NOT INCLUDE ANY EXTERIOR SHEATHING, SIDING, EAIVE OVERHANG OR MATING LINE TOLERANCE OF UP TO PLUS 5/8 OF AN INCH DUE TO SITE INSTALLED WEATHER SEALS.
 2. DIMENSIONS IN () REPRESENT UNIT HAVING 6" EXTERIOR WALLS.
 - * NOT INCLUDING SIDING AND/OR SHEATHING ON EXTERIOR WALLS.

FIGURE 19



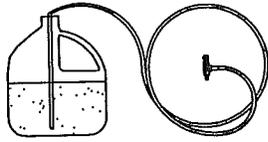



FIGURE 20

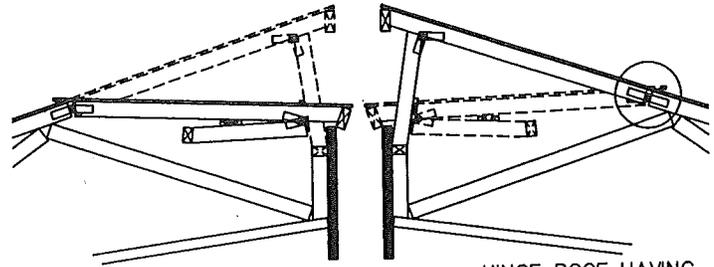

HINGE ROOF HAVING FULL RIDGE CONNECTION
FIGURE 21

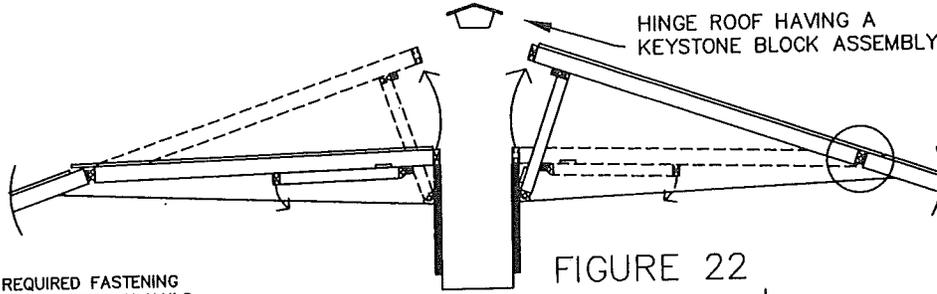

HINGE ROOF HAVING A KEYSTONE BLOCK ASSEMBLY
FIGURE 22

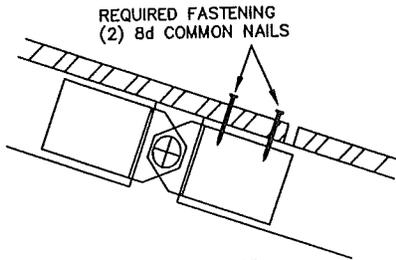

REQUIRED FASTENING
(2) 8d COMMON NAILS
FIGURE 23

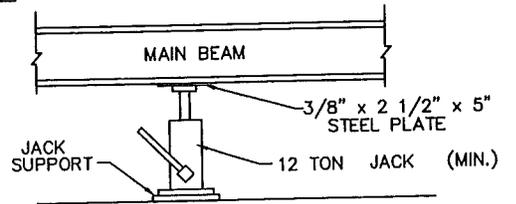


FIGURE 24

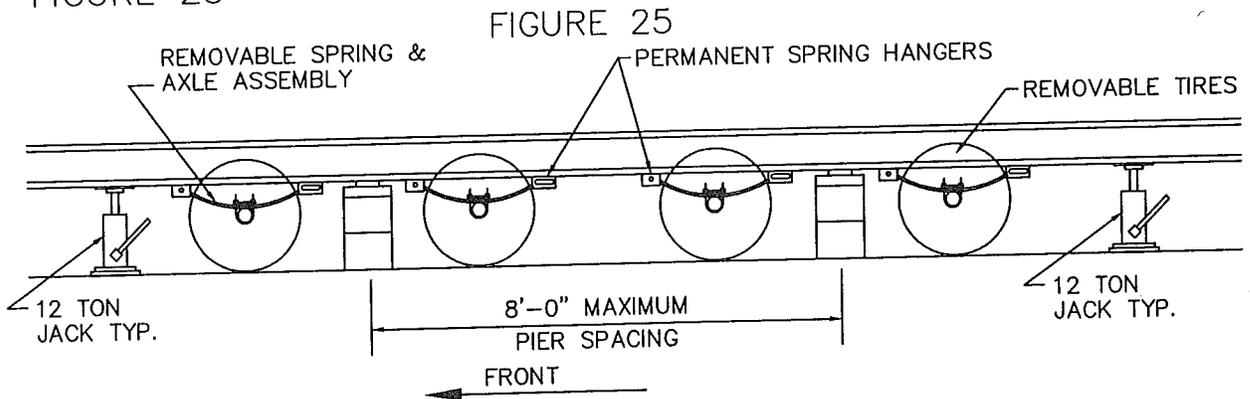



FIGURE 25

LIQUID RESERVIOR

VALVE

FLEXIBLE CLEAR TUBING

FIGURE 26

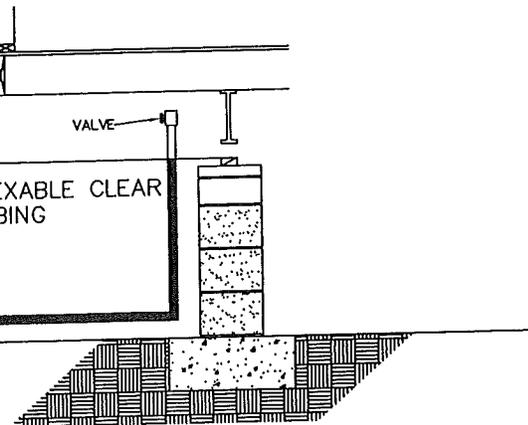



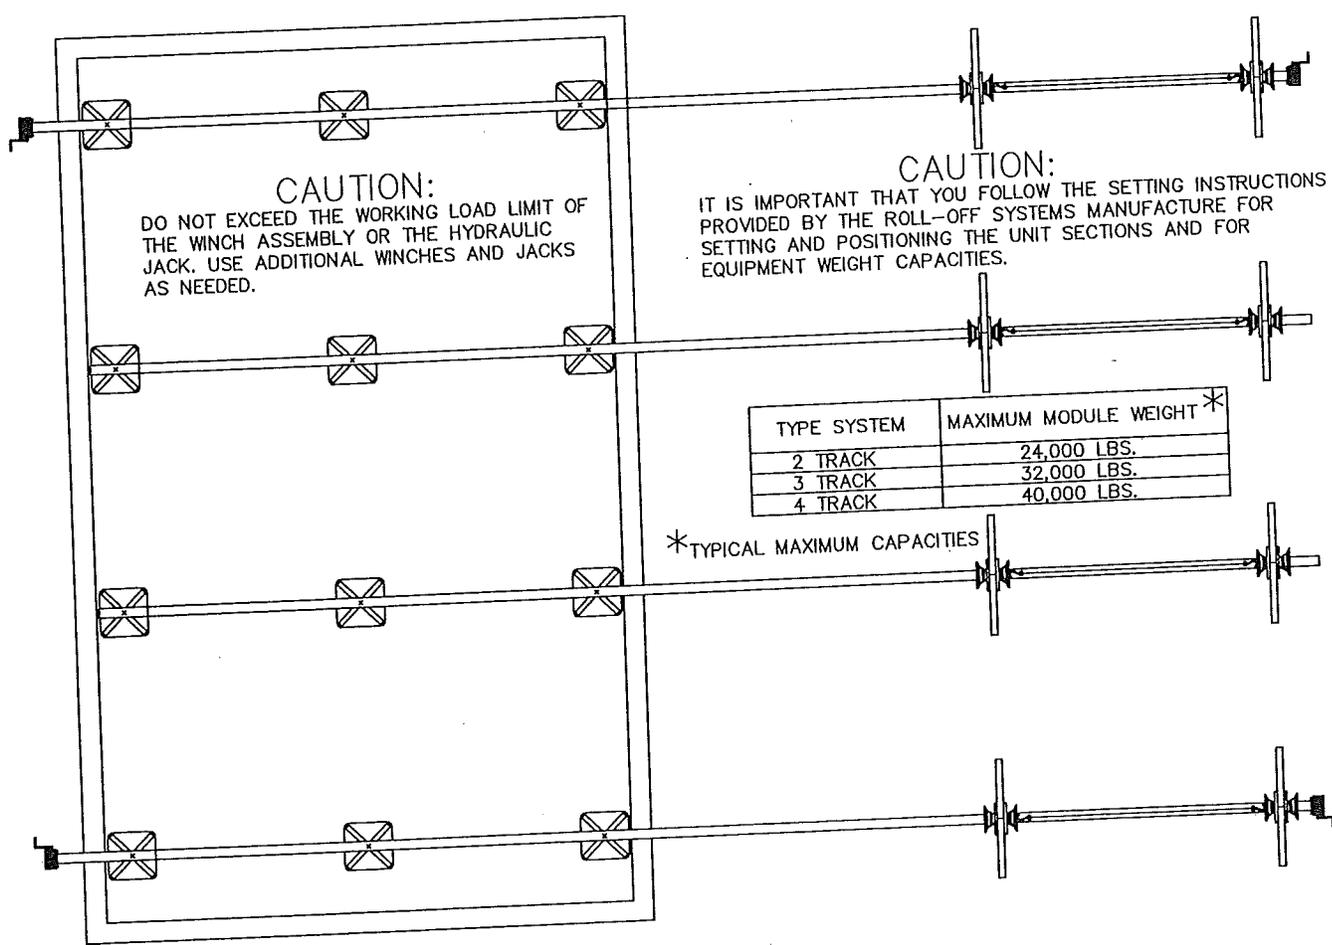


FIGURE 32
Page 24

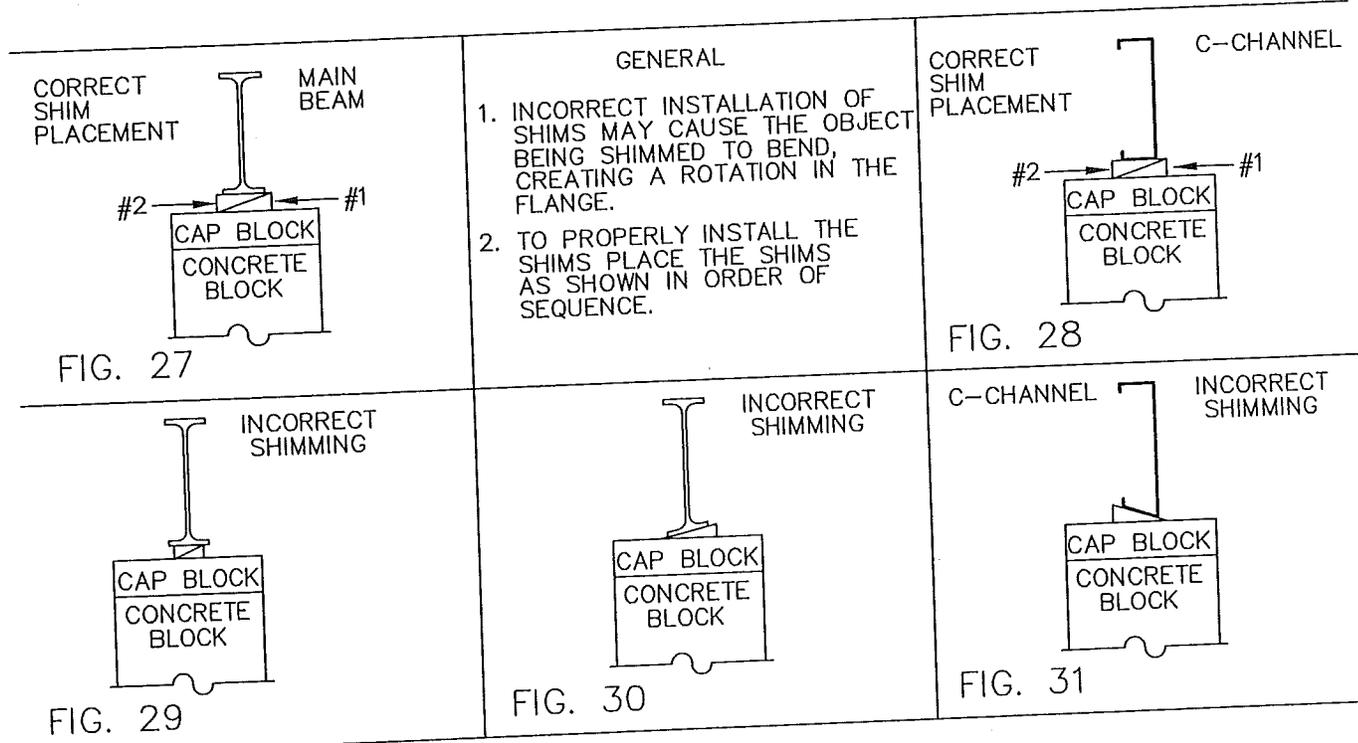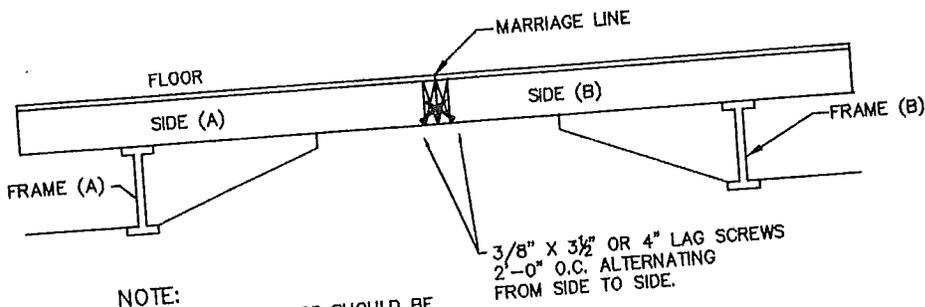

NOTE:
TWO ADDITIONAL LAGS SHOULD BE
ADDED AT EACH END OF THE FLOORS
SO THAT THERE ARE 3 LAGS, 4" O.C.

FIGURE 33

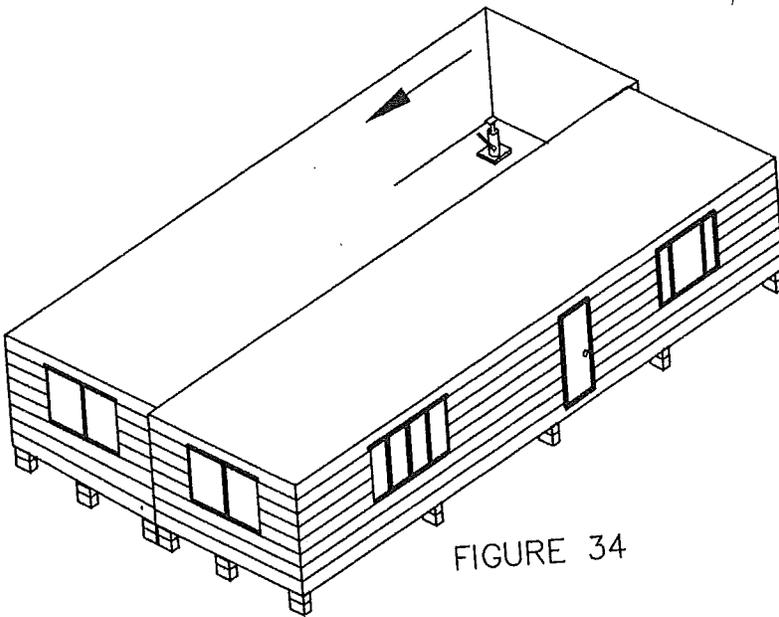
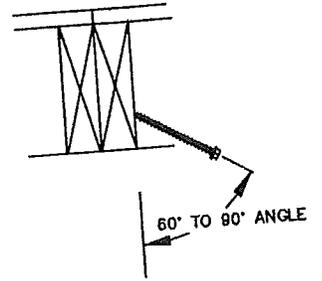


FIGURE 34



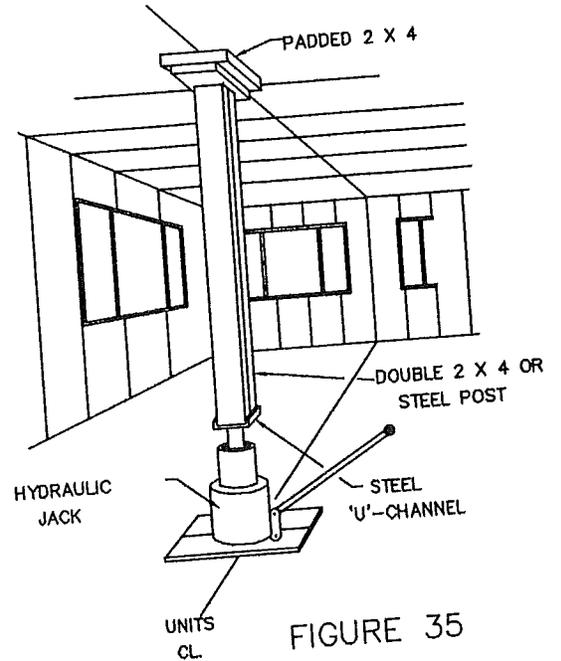


FIGURE 35

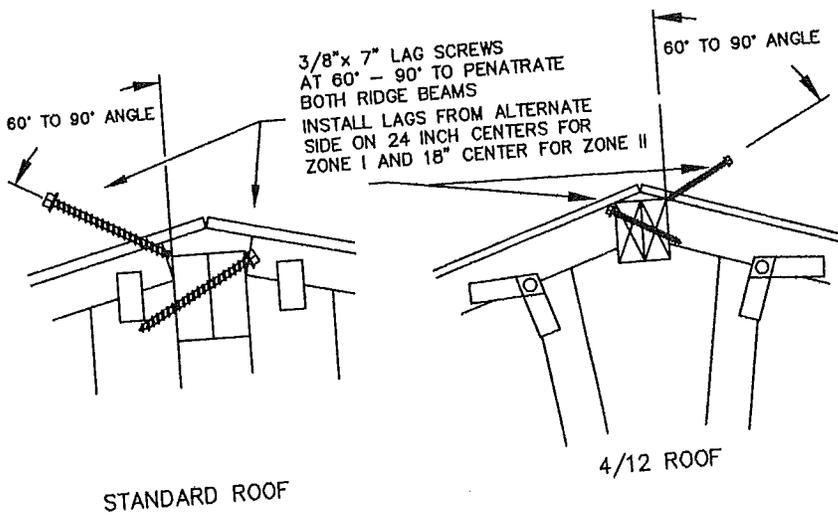


NOTE:
TWO ADDITIONAL LAGS SHOULD BE
ADDED AT EACH END OF THE ROOF
SO THAT THERE ARE 3 LAGS, 4" O.C.

FIGURE 36

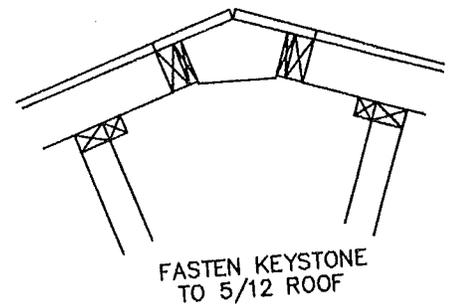

- (2) #8x3" SCREWS
EACH SIDE, EACH CAVITY
- (3) KC27 3"
11 Ga. NAILS
EACH SIDE, EACH CAVITY
- (4) Q25 STAPLES
2 1/2" x 15 Ga.
EACH SIDE, EACH CAVITY

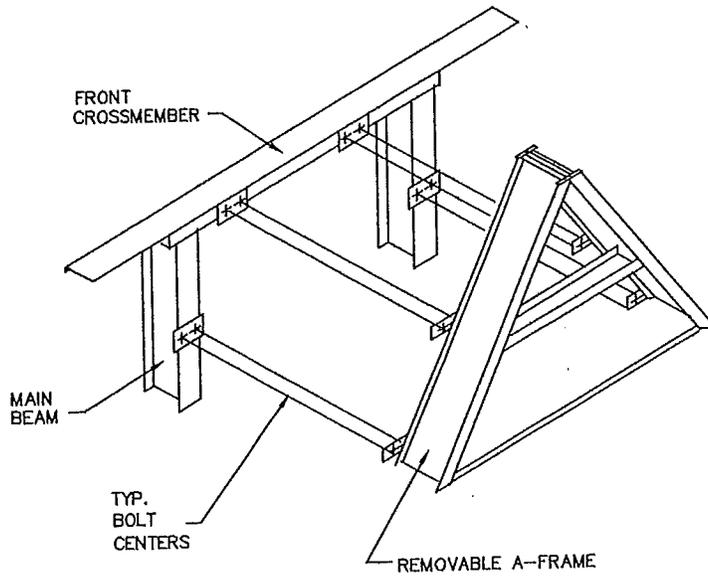

(NOTE: AS VIEWED FROM UNDERNEATH THE HOME.)

FIGURE 37

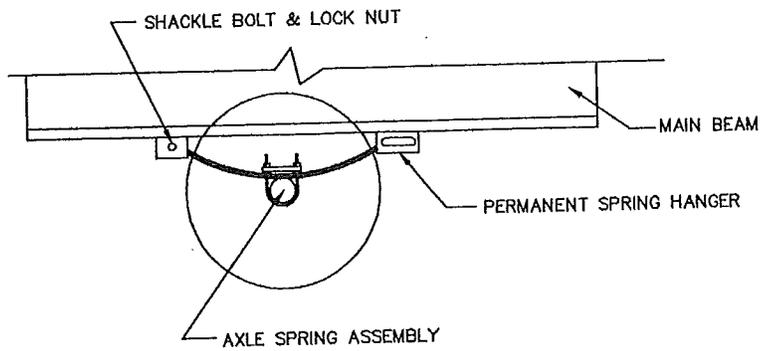


FIGURE 38

INTERIOR & EXTERIOR CLOSURE

EXTERIOR CLOSURE

GENERAL

Once the home has been set in place and properly supported; aligned to allow for proper operation of doors, windows and etc.; and all utility cross connections have been completed, the exterior closure process can begin. Through this process the exterior coverings are completed providing a high degree of weather resistance and vermin proofing. Any gaps, which remain along the mating surfaces of the home, must be filled and sealed before the coverings are applied. Failure to seal these spaces will result in air infiltration and higher energy usage.

ROOF CLOSURE

Carefully fold down the hinged eave, as it applies, and fasten it to the exterior wall as shown in Figure 39. Where the eave is a ship loose assembly install it as shown in Figures 40. Where the home has a hinged roof (the roof should already be raised) the ridge assembly will need to be installed along the ridgeline as shown in Figure 41.

Once the roof deck has been completed additional underlayment and shingles must be installed to complete the weather resistance of the roof. The roof covering will need to be completed along the joint of the hinged eave, ship loose eave assembly (see Figures 39 and 40), hinged roof and ridge assembly for hinged roof units (see Figures 21, 22, 23 and 41). When the roof has been completely shingled the ridge cap may be installed to complete the process following the instructions on the shingle wrapper.

The asphalt saturated organic felt shingle underlayment must conform to ASTM D 4869 or be a listed alternate. Both the underlayment and the shingles must be installed and fastened following the directions printed on the shingle wrapper. Asphalt roof cement and asphalt lap cement must conform to ASTM D 4586 and ASTM D 4479 respectively.

Where the roof venting is to be achieved through the application of a ridge vent installed on the mating line of the home, the vent material will need to be installed during the exterior close up at the home site. A 1 inch to 2 1/2 inch gap has been left on each joining floor section along the centerline of the home where the roof is fully sheathed. Where a "key stone" center piece is installed for a hinged roof, you will need to leave a 2-2 1/2 inch gap at the peak. You must ensure that the opening is free of roofing paper and shingle material that would block airflow if left in place.

Install the top courses of shingles up to the gap and install the ridge vent over the shingles making sure to center the vent along the ridge line of the home (see Figure 42). The vent material must extend at least 12 inches past the opening on each end. Once the vent installation is complete, the shingle cap must be installed over the vent material. Follow the manufacture's printed instructions packaged with the vent material.

NOTE: In certain areas of the roof the shingles may have been secured with nail on strips to protect the shingles from the affects of transportation. These strips must be removed and the holes

EXTERIOR CLOSURE (Continued)

created by the fasteners filled with asphalt roof cement.

TRUSS WALL SUPPORT FOR ROOF SLOPES GREATER THAN 4/12

After the hinged roof has been raised and set in place, insert the gable truss wall support framing into the opening in the truss as shown in figure 41. Slide the side supports outward until they tighten against the truss framing or outlookers and fasten in place using (2) # 8X3" screws to fasten the top of the support to the outlookers, and (1) # 8X3" screw between each vertical member to fasten the bottom of the support to the truss. Insert the center support into the space between the unit sections, sliding it downward until it makes contact with the truss framing. Fasten the support in place using # 8X3" screws.

BOTTOMBOARD CLOSURE

The underside of your manufactured home is covered with a closure material commonly called bottomboard. This material is usually a reinforced paper product, a laminated plastic product or a woven plastic product. This material encloses and protects the in-floor plumbing, electrical, mechanical and thermal systems of your home as well as guarding against the entrance of rodents.

Should the bottomboard have become damaged in transit to your home site or by tearing or cutting during the installation of your home, or at any other time, it can be repaired by using a patch of like or equal material held in place by high tack spray adhesive.

To repair a hole or tear in the bottomboard, cut a piece of like or equal material that is 4 inches larger than the widest point of the hole or tear. Spray both the patch and the area around the hole or tear with a high tack spray adhesive. Let the spray "air" for a short time as directed by the spray manufacturer and then apply the patch over the affected area so that there is a 2-inch overlap at any edge. Smooth the patch firmly in place to insure full contact.

To repair or tighten the fit around a pipe penetration in the bottomboard, cut a piece of like or equal material approximately 6 inches wider than the pipe in all directions. Cut a hole in the center of the patch that exactly matches the size of the pipe. If the patch will not slip over the pipe, cut a slit in the patch from the center to the outer edge so that it will slip around the pipe. Spray both the patch and the area around the pipe with a high tack spray adhesive. Let the spray "air" for a short time as directed by the spray manufacturer and then apply the patch over the affected area. Smooth the patch firmly in place to insure full contact.

EXTERIOR SIDING CLOSURE

Your home may have one of many exterior finish treatments. These treatments vary from vinyl lap siding, vinyl vertical panel siding, wood lap siding, wood log siding or wood/hardboard panel siding. Follow the instructions of the siding manufacturer for installation. Any polyethylene close up material will need to be removed from

EXTERIOR CLOSURE (Continued)

the ends of the home. Any fastener holes in the siding left after the removal of transit materials must be sealed with a high-grade silicone caulk.

INTERIOR CLOSURE

General

All the materials necessary to complete the interior closure were provided with the home when it was delivered to your manufactured home dealer. These materials match the decor of the home and can be easily identified by matching the molding and/or paneling with the materials installed by the manufacturer.

Figure 43 illustrates the various shapes of moldings provided with the home and their typical installation locations. Before installing moldings along the mating line of the exterior walls and ceilings, make certain that all the gaps are tightly filled with insulation or caulking material.

Moldings may be stapled or nailed in place. Cover the staple and nail holes with color coordinated putty (not supplied by the manufacturer).

Before extending the carpet and pad across the center line of the home, make certain that the floors are even and that any gaps have been tightly filled with insulation or other caulking material.

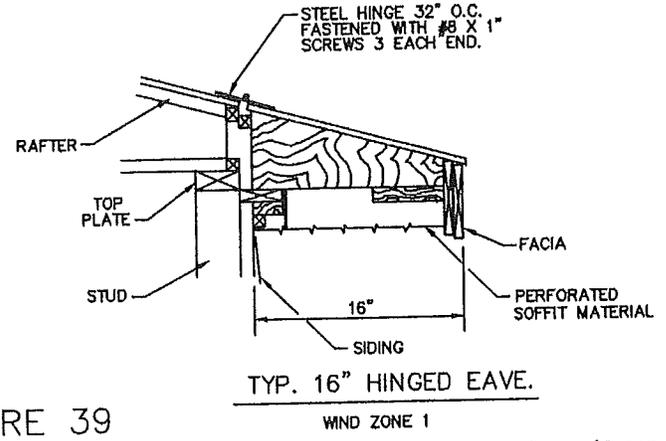
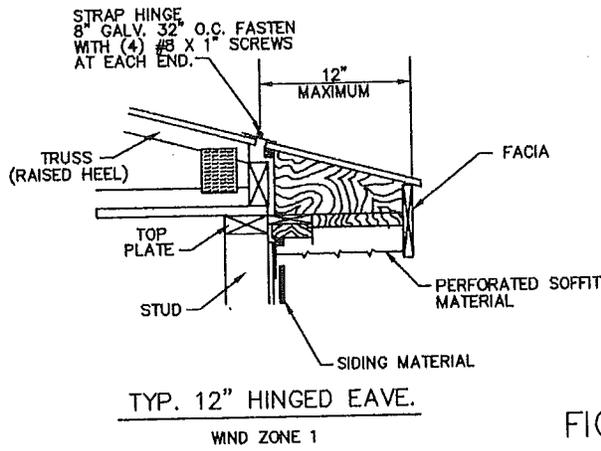


FIGURE 39

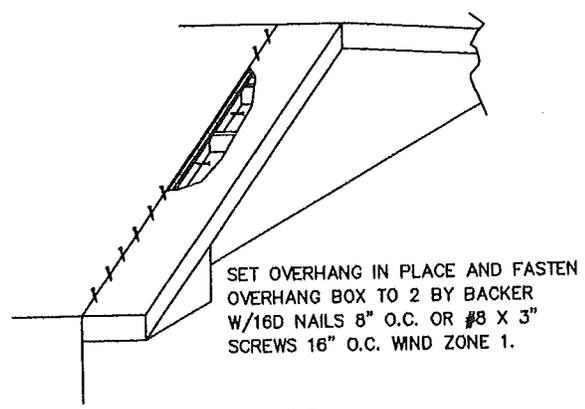


FIGURE 40

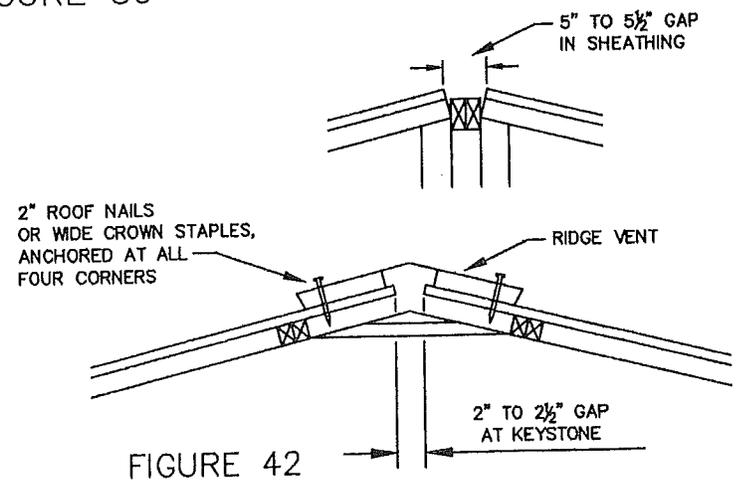


FIGURE 42

- KEYSTONE PLY.
FASTENING TO TRUSS:
- (2) #8 SCREWS
EACH SIDE, EACH CAVITY
 - (3) KC27 3"
11 Ga. NAILS
EACH SIDE, EACH CAVITY
 - (4) Q25 STAPLES
2 1/2" x 15 Ga.
EACH SIDE, EACH CAVITY

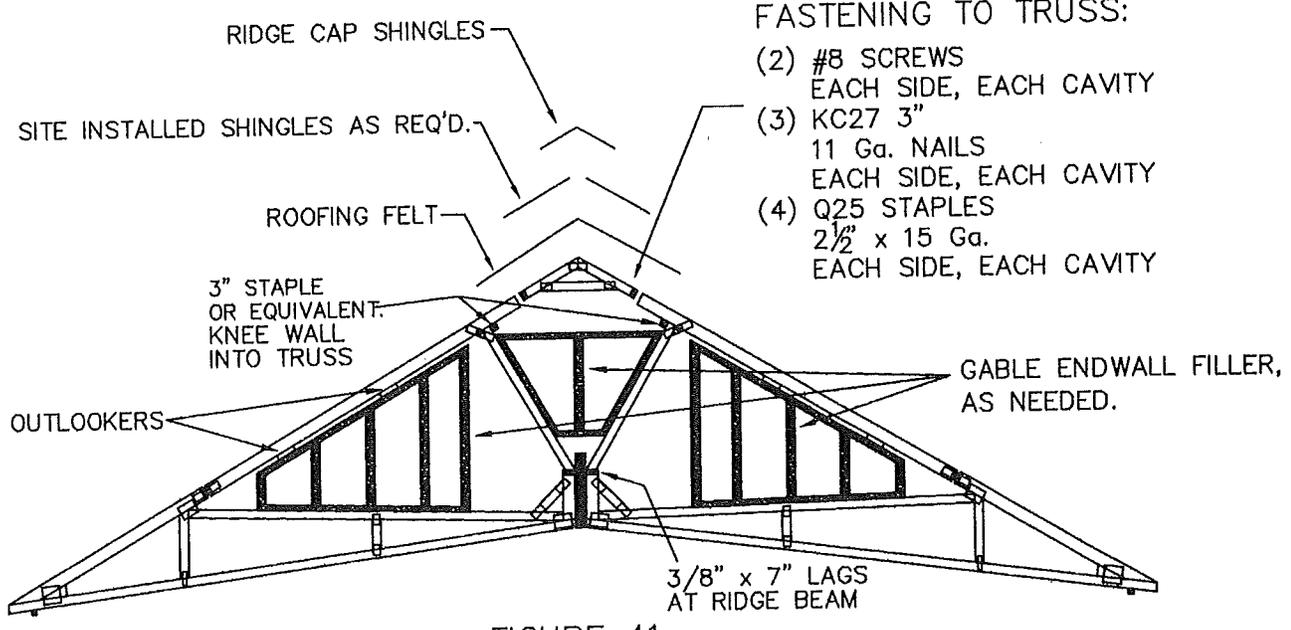


FIGURE 41

WALL MOLDINGS





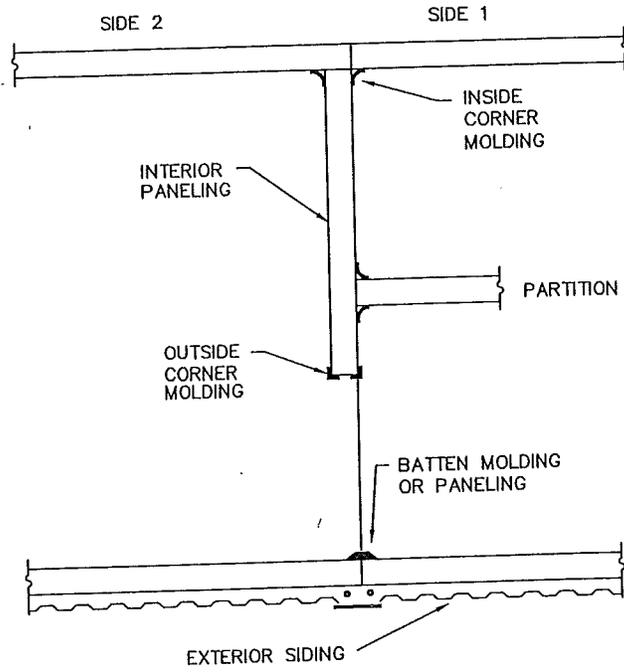


FIGURE 43

CEILING MOLDINGS

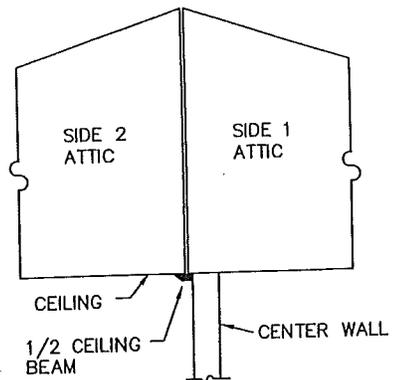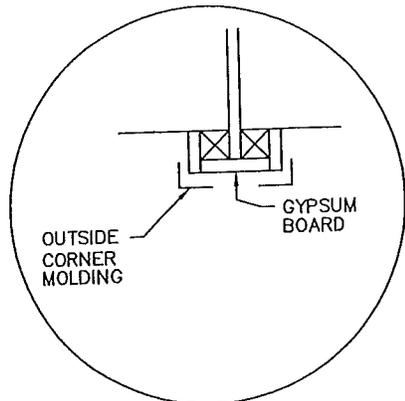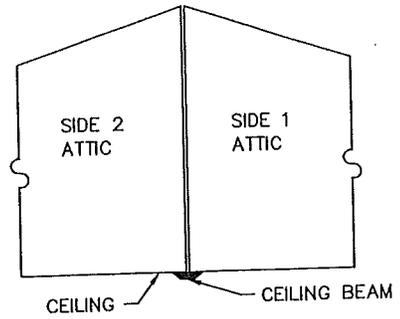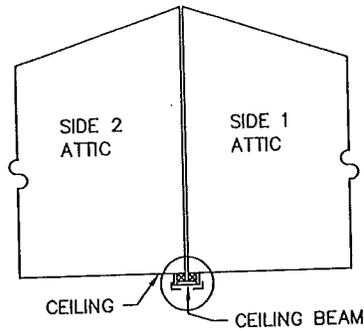

UTILITY SYSTEMS

UTILITY SYSTEMS

General

Before leaving the manufacturing facility, the gas, water, and drain line systems of your home were tested for tightness. In addition, the electrical system has been thoroughly tested. However, prior to connecting these systems to their supply, another test should be conducted to ensure that these systems are functioning properly and all fuel gas system piping should be examined for damage, which may have occurred in transit or on the dealer's lot.

All connections and testing of these systems must be made by an experienced installer. It is nevertheless highly recommended that you make personal inspections, particularly of any exposed water or drain line connections for leaks, inside the home and underneath the home, and that you confirm that the electrical system has been properly grounded through the 4-wire feeder as described in the Electrical Systems section of this instruction.

Note: It must be possible to gain access to all utility connections through removable sections of the skirting or through access doors.

Water Distribution, Connection, and Testing

The water distribution system of your home has been equipped with a 3/4 inch threaded inlet connection. The location is marked on the side of the home with a tag stating "Fresh Water Connection." When connecting the site water supply to this connection, care must be taken to ensure that the threads and inside of the pipe are clean and clear of any obstruction which may have

occurred while the home was in transit or on your dealer's lot.

The water distribution system was designed for a maximum water inlet pressure of 80 pounds per square inch. Should you locate your home in an area where the water pressure exceeds 80 pounds per square inch, a pressure-reducing valve must be installed. In addition to the pressure-reducing valve, if required, a full flow shut-off valve must be installed on the main feeder line adjacent to the home (See Figure 44). This valve must be either a full port gate or full port ball valve with threaded or solder joints.

It is further recommended that a check valve be installed on the water inlet to prevent water system drainage in the event of a loss of water pressure from the source. Such pressure loss could cause the water heater to drain, exposing the heating elements of electric water heaters causing them to fail.

All water heaters have an approved, fully automatic valve designed to provide temperature and pressure relief. These valves are provided with a drain that discharges below your home. The opening in this drain should be inspected to ensure that it is clear of any obstruction, which may have occurred while the home was in transit, or on your dealer's lot.

In areas subject to freezing temperatures, all exposed water supply lines must be protected by wrapping with insulation and by using one or more listed electric heat tapes. Use only heat tapes that are listed and approved for use on manufactured homes. A receptacle outlet has been provided on the underside of your home in the area of

UTILITY SYSTEMS (continued)

the water inlet for the express use of the heat tapes.

CAUTION

ONLY HEAT TAPES LISTED FOR USE WITH MANUFACTURED HOMES MAY BE USED. THEY MUST BE INSTALLED IN ACCORDANCE WITH THEIR LISTINGS AND INSTALLATION INSTRUCTIONS. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN AN ELECTRICAL HAZARD OR SHORT CIRCUIT, WHICH COULD CAUSE A FIRE.

If your home is equipped with an uninsulated or vented (to allow for combustion air for a gas water heater) exterior water heater door, the exposed water lines within the water heater compartment must be insulated.

CAUTION

DO NOT BLOCK OR SEAL THE COMBUSTION AIR VENTS IN THE WATER HEATER DOOR.

Procedure for Testing the Water System

Testing the water distribution system can be performed by subjecting this system to a hydrostatic pressure of 100 pounds per square inch for 15 minutes without loss of pressure.

CAUTION

IF AIR ONLY IS TO BE USED IN TESTING THE WATER SUPPLY SYSTEM, THE WATER HEATER SHOULD BE ISOLATED FROM THE TEST.

This can be done by disconnecting the hot and cold water lines on the water heater and then joining them together. The piping can then be subjected to an air test of 100 pounds per square inch for a period of 15 minutes. If the water heater is to be left connected to the system while conducting an air test, the pressure should never exceed 30 pounds per square inch. Even though water heaters have a working pressure from 125 to 150 pounds per square inch, it is a hydrostatic or water pressure measurement. Subjecting a water tank to air pressure alone (if it exceeds 30 pounds per square inch) will create a possibility of damaging the tank or having the tank actually explode. **THEREFORE, NEVER APPLY AIR PRESSURE EXCEEDING 30 POUNDS PER SQUARE INCH TO THE WATER SYSTEM UNLESS THE HOT WATER TANK IS ISOLATED FROM THE SYSTEM.**

Draining the Water Lines

To ensure that the water supply lines are completely drained it will be necessary to blow out the lines. The air pressure can be supplied by a low-pressure compressor (30 pounds per square inch maximum). The procedure will be as follows:

1. Turn off water heater.
2. Turn off water supply.
3. Open all faucets throughout home.
4. Disconnect water supply inlet.

UTILITY SYSTEMS (continued)

5. Open water heater drain valve, after attaching a hose to the valve so the water drains outside the home.
6. Let water supply system and water heater drain completely.
7. Flush toilets and drain water tanks completely.
8. Close all water faucets with the exception of one.
9. Connect 30 pounds per square inch air supply to water inlet connection.
10. With the air supply on the system, open one faucet at a time throughout the home.
11. After entire system has been drained of all water, disconnect the air supply and close off water inlet valve.
12. Pour an antifreeze solution into all drain traps, including sinks, tubs, and toilets. **BE SURE THAT THE ANTIFREEZE YOU USE IS SAFE FOR THE FIXTURES AND P-TRAPS.**
13. Do not overlook the laundry area if plumbed, and the exterior faucet when installed.

Waste Drainage System Connection and Testing

The waste drainage system in your home terminates in a standard 3-inch waste connection, which is located underneath the home in the area of the bathroom. Depending on the design of the home and the number of bathrooms, a certain amount of site work may be necessary to complete the connections

and bring the drain outlet to one point. Refer to the provided illustration.

When connecting the drains into one outlet or routing the unit drain to the site drain, the system must be properly assembled, sloped, and supported. It is recommended that all the piping be cut and pre-assembled to make certain of fit prior to final assembly. A slope of 1/4 inch per foot of drain length is required for the drain system. However, where it is impractical due to the structural features or arrangement of the home, a slope of not less than 1/8 inch per foot is allowable providing there is a full-size clean out installed at the upper end. This reduced slope applies only to the piping, which brings the unit drain to the building site drain.

The drainage system must be properly supported to ensure proper slope and to eliminate any damage to the system or the possibility of a low spot developing which could cause the waste to back up. The supports must be located a maximum of 48 inches on center. Straps used to support the drain from the floor of the home must be at least 3/4 inches in width, .020 inches in thickness, and must be made to resist corrosion. Other approved hangers and supports may also be used in accordance with their listings (See Figures 45, 46 & 47, and any instructions which may have been supplemented into the rear of this manual).

Just prior to the connection of the home drainage system to the site drain, the system should be plugged and flooded to test for any leaks, which may have developed in the system, due to in-transit vibrations, and in the

UTILITY SYSTEMS (continued)

site-installed piping. The procedure for this testing is as follows:

1. With the drainage system outlet tightly capped and the tub and shower drains plugged, fill the system with water until the toilet bowls are full to the bottom of the rim. The water should stand without the level falling for 15 minutes.
2. Fill fixtures, which are higher than the toilet bowl (lavatories, sinks, etc.) with water. Check these fixture connections for leaks as you allow the water to flow through the system as the drains are opened.
3. Any leakage noted during these tests should be isolated and corrected prior to home occupancy.

In areas subject to freezing temperatures, all exposed drain lines should be protected by wrapping with insulation and by using one or more listed electric heat tapes where insulation alone is inadequate.

CAUTION

ONLY HEAT TAPES LISTED FOR USE WITH MANUFACTURED HOMES MAY BE USED. THEY MUST BE LISTED FOR USE WITH THE TYPE OF MATERIAL USED IN THE DRAINAGE SYSTEM AND MUST BE INSTALLED IN ACCORDANCE WITH THEIR INSTALLATION INSTRUCTIONS. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN AN ELECTRICAL HAZARD OR SHORT CIRCUIT, WHICH COULD CAUSE A FIRE.

Gas System Connection and Testing

The gas piping system in this home is designed for a pressure not exceeding 14 inches water column (1/2 psi) and not less than 10 inches water column (3/8 psi).

On sectional homes, which incorporate gas appliances in more than one section, the gas crossover line will be provided between the home sections. This crossover line will be located below the floor structure at the centerline between the sections. It will be quipped with an approved metal connector. After the dust covers have been removed, the crossover connector is installed to make the connection. See Figure 48.

The gas piping system was tested at the time of manufacture, however, it is essential that it be inspected and tested at the site for leaks that may have been caused by in-transit vibrations or physical damage that may have occurred after the time of manufacture and system testing prior to connecting the system to the gas supply.

CAUTION

DO NOT APPLY MORE THAN THE SPECIFIED PRESSURE AS DAMAGE TO GAS VALVES AND/OR REGULATORS MAY RESULT.

Before a test is begun, the temperature of the ambient air and the piping should be approximately the same. Conduct the test when air temperatures will remain stable.

The gas piping system must be tested two ways:

UTILITY SYSTEMS (continued)

1. Piping only - all appliances isolated.
2. Entire system - with appliances.
 - A. Piping only test:
 - 1) Isolate all appliances from the system by closing all appliance shut-off valves.
 - 2) Pressure must be measured with a mercury manometer or slope gauge calibrated in increments of not more than 1/10 pound.
 - 3) Pressurize the system to 3 pounds per square inch.
 - 4) Isolate the pressure source from the system.
 - 5) The gauge must stand 10 minutes without a pressure drop.
 - 6) Release pressure and open all appliance shut-off valves.
 - B. Entire system test:
 - 1) Pressurize the system to either:
 - a. 3/8 to 1/2 pounds per square inch, or
 - b. 10 inches to 14 inches water column
 - 2) Apply bubble solution to all appliance connections.

NOTE

PRIOR TO MAKING CONNECTION TO SITE SUPPLY, GAS INLET ORIFICES OF FURNACES, WATER HEATERS, AND APPLIANCES MUST BE CHECKED TO ENSURE THEY ARE SET UP FOR TYPE OF GAS TO BE USED - L.P. (LIQUIFIED PETROLEUM) OR NATURAL GAS. THE GAS PRESSURE SHOULD NOT EXCEED 14 INCHES WATER COLUMN.

If conversion is required, individual appliance, furnace, or water heater manufacturer's instructions must be complied with.

Gas appliance vents (flues) shall be visually inspected to ensure that they have been connected to the appliance and roof jacks are installed and have not come loose due to transit vibrations. Any portions of a gas vent that was not assembled due to shipping height restrictions must be installed and inspected.

The gas connection to the gas supply should be made by an authorized representative of the gas company (See Figure 49).

Oil Piping Connection and Testing

Homes which are equipped with oil burning furnaces must have the oil supply piping installed on site. Piping is not supplied by this company.

The furnace manufacturer's instructions must be consulted for proper pipe sizing and installation procedures.

In addition, unless the home is installed in a park with a centralized oil

UTILITY SYSTEMS (continued)

distribution system, an oil storage tank of suitable capacity must be installed outside the home in a location accessible for service and safe from fire and other hazards.

Oil tanks that feed vaporizing type oil furnaces must be installed so that oil flows by gravity. To achieve efficient gravity flow, the tank must be installed so that the bottom of the tank is at least 18 inches above the level of the furnace oil control, while the top of the tank is within 8 feet of the oil control level.

For gun type oil furnaces, the location of the oil storage tank is left to the discretion of the home owner. Since the furnace includes a fuel pump, the tank may be installed above or below ground. For tanks installed below ground, the filler neck should extend 1 foot above grade and a 1-1/4 inch diameter minimum vent pipe extending at least 2 feet above grade must be provided.

Regardless of the type of oil furnace served, or the tank location, the tank should be installed to provide a gradual slope toward the fill end or drain plug (if so equipped) to facilitate pumping or draining of water and sludge.

An accessible and approved manually operated shut-off valve must be installed at the oil tank outlet. Additionally, it is recommended that a suitable filter be installed in the fuel line near the tank to help trap dirt and water.

NOTE

ALL OIL STORAGE TANK AND OIL PIPING INSTALLATIONS MUST MEET

ALL APPLICABLE LOCAL REGULATIONS AND SHOULD BE MADE ONLY BY EXPERIENCED, QUALIFIED PERSONNEL.

Before setting the system in operation, the tank installation and supply piping must be checked for leakage. The tank must be filled to capacity with the fuel to be burned and all joints in the system checked visually for leakage.

Crossover Duct

On multi-section homes, the flow of conditioned air from one section to the other(s) is accomplished by a crossover ducting system. For homes having a main duct in each floor section, the crossover will be one or more large diameter flexible ducts, which are required to be suspended under the floor and above the ground, intended to connect the furnace to each duct or one duct to another. For homes having only one main duct, the crossover will be made up of several smaller flexible ducts passing through or beneath the perimeter joist along the mating line of each floor section. (See figures 50 through 54)

The flexible ducts are connected to attachment collars on the main duct and to one another using splice collars. The connection is made by slipping the inner duct over the end of the collar past the raised rib and securing it with an adjustable strap with enough tension to hold the duct in place. The outer surface of the duct is then pulled over the connection and secured with several wraps of duct tape. (See figures 55 and 56)

UTILITY SYSTEMS (continued)

Where the flexible ducts connect to a termination fitting installed through the perimeter joist so that they align with like fittings on the other side of the mating line, a connection will not need to be made. You only need to confirm that the gasket has been installed on one side or the other before the sections are brought together. (See figure 57)

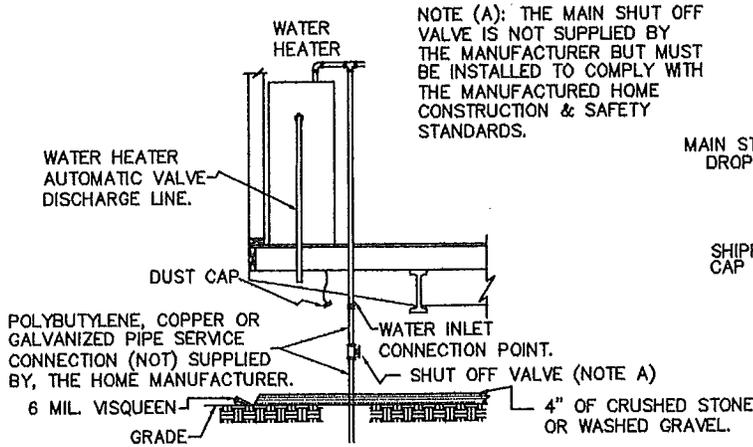


FIGURE 44

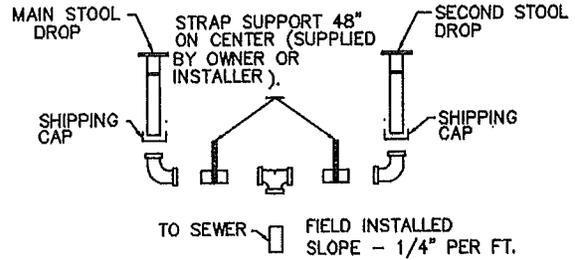


FIGURE 45

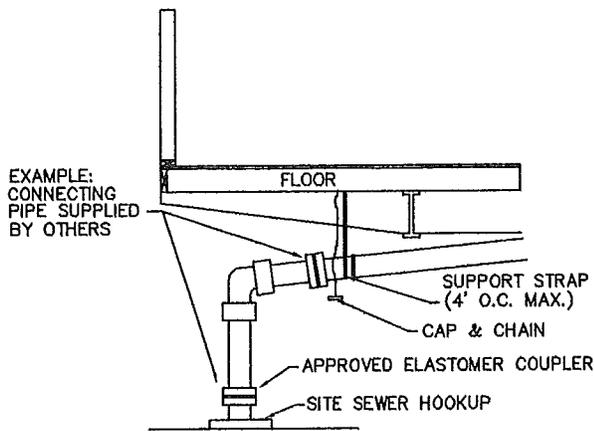


FIGURE 46

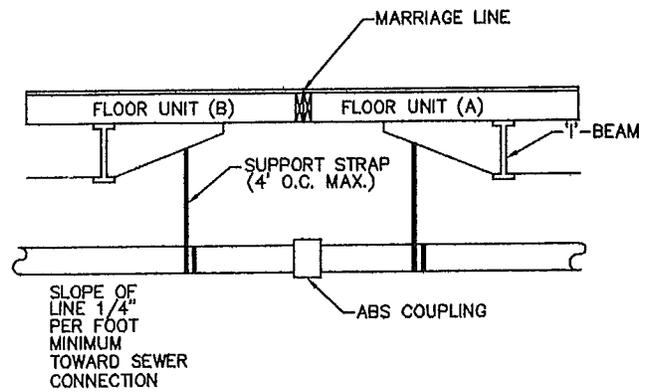


FIGURE 47


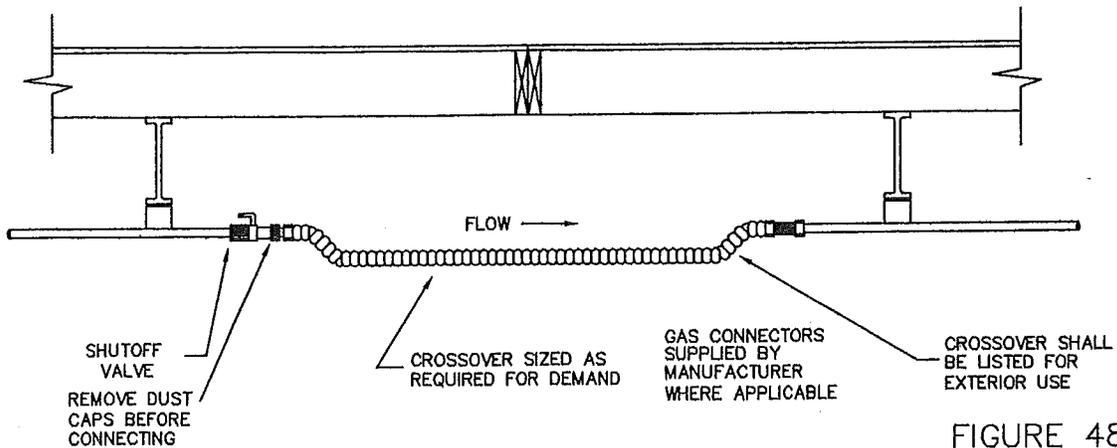


FIGURE 48

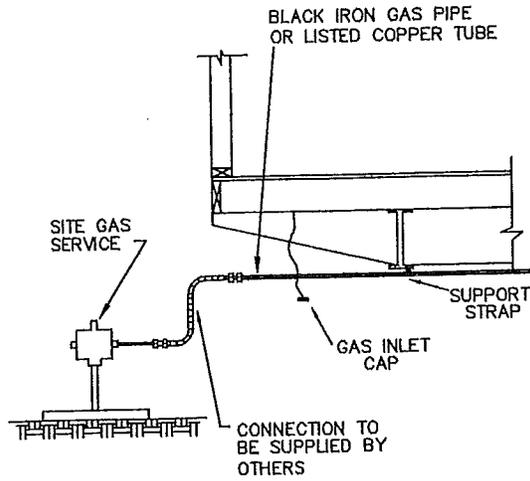

TYPICAL GAS LINE CROSSOVER

FIGURE 49

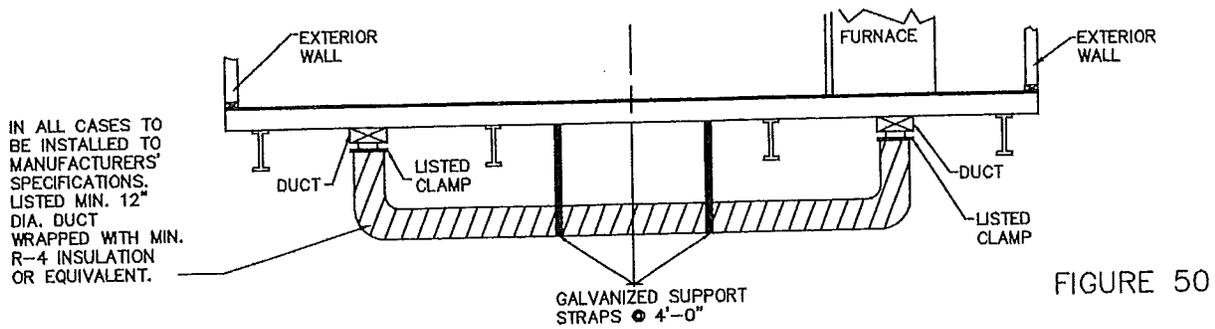


FIGURE 50

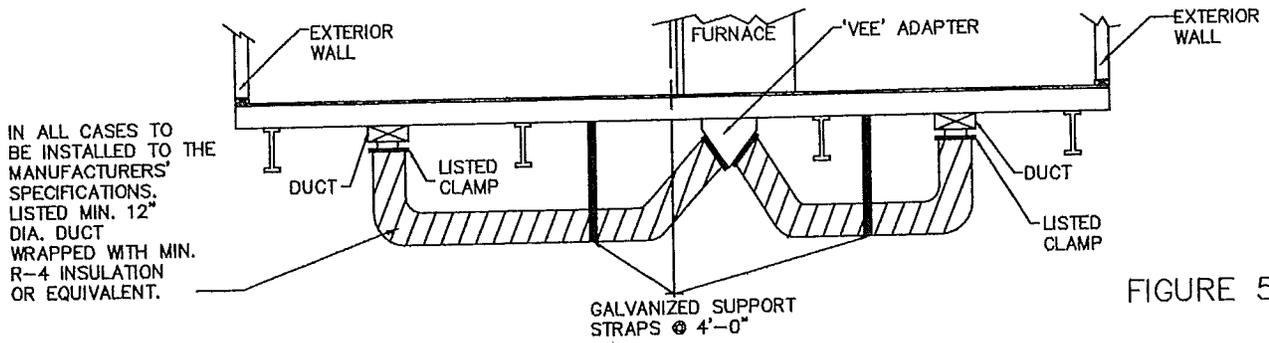


FIGURE 51

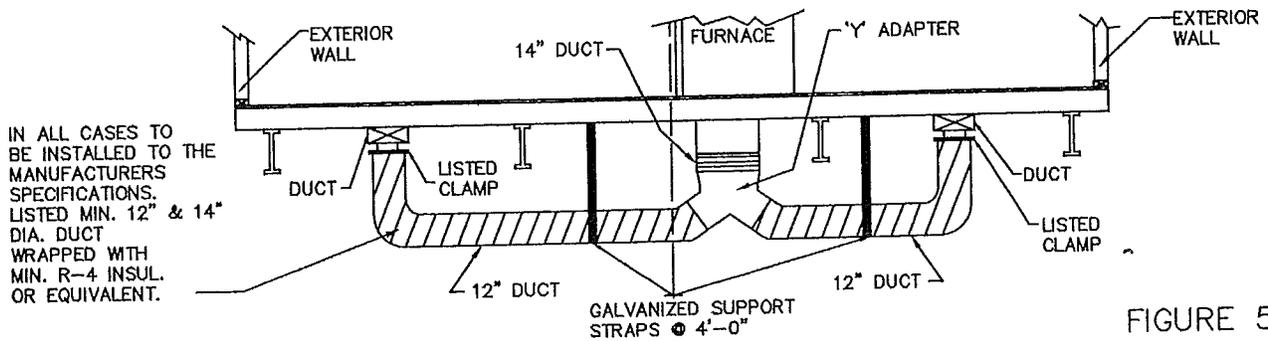


FIGURE 52

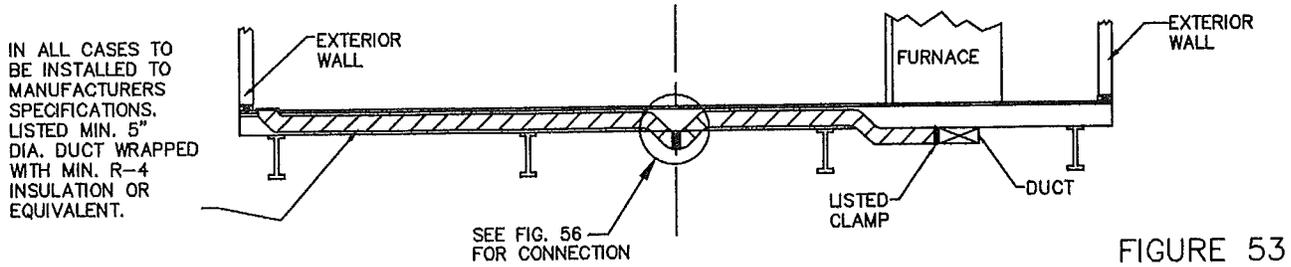


FIGURE 53

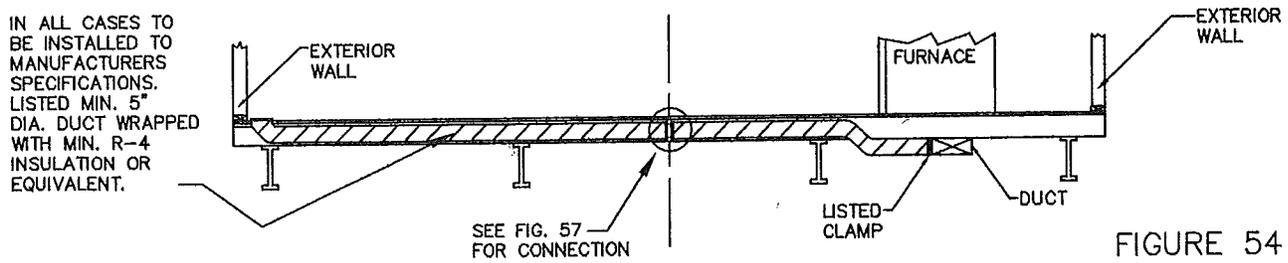


FIGURE 54


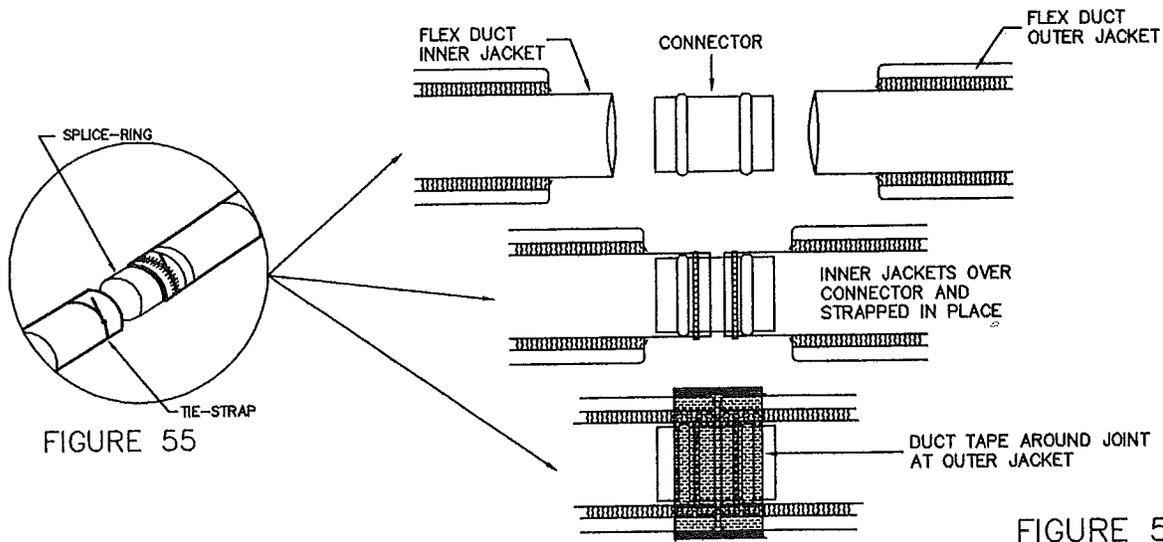


FIGURE 55

FIGURE 56

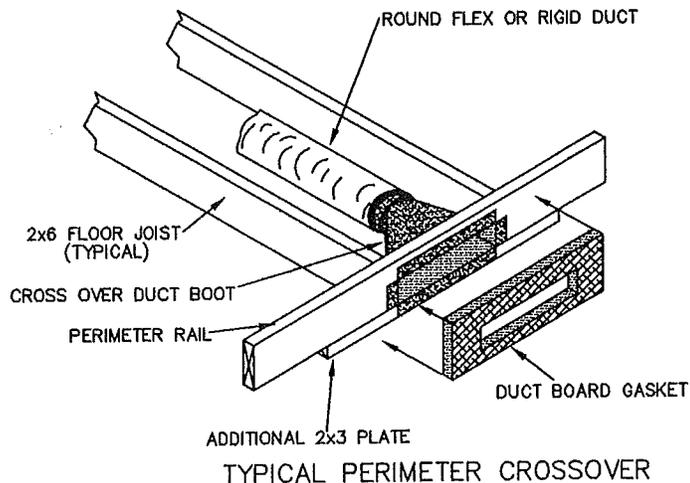

TYPICAL PERIMETER CROSSOVER

FIGURE 57

INSTALLATION NOTES

ELECTRIC SYSTEMS

ELECTRIC SYSTEMS (continued)

Electric System

Your home is designed to be connected to an electrical supply source rated at 120/240 Volts, 3-pole, 4-wire, 60-Hertz having an insulated neutral. In making the feeder connections to this power source, it is extremely important that conductors of the correct size, insulation type, and material be used. If the conductors are incorrectly sized, the ampacity for that conductor may be exceeded resulting in a voltage drop within your home or an overheating of the conductor which will cause the circuit breaker to trip protecting the system from a short circuit.

Ampacity is the safe current carrying capacity of a conductor expressed in amperes. The greater the amperes flowing, the greater the heat build-up within the conductor. If the amperage is allowed to become too great, the conductor may become so hot that it will damage the insulation. Should the insulation be damaged severely enough that the individual conductors come into contact with one another, a short circuit will result which could cause a fire. To avoid the possibility of a voltage drop or short circuit caused by improper conductor sizing, refer to Chart 8 for proper conductor sizing.

Before locating your home at a permanent site or park, make certain that sufficient power is available. Insufficient power will result in the improper operation of motors, appliances, and lights which will further result in a more costly electrical service. Proper performance of your home's electrical system depends on a full 120/240 volts of electrical power at an amperage equal to the rating of the main circuit breaker located in the distribution panel within

your home. The amperage rating of the disconnect circuit breaker located in the disconnect box outside of your home must also be equal to that of the main circuit breaker in the distribution panel.

It is also vital for the protection of the occupants of the home that it be properly grounded. The only safe and approved method of grounding your home is through the electrically isolated grounding bar located in the distribution panel which grounds all non-current carrying metal parts to the electrical system in your home to a single point. The grounding bus bar(s) may be located on either side of the panel box or split between the sides and hold(s) the bare copper grounding conductors only.

The neutral bus bar(s) may be located on both sides of the circuit breakers or be combined on either side and hold(s) only the white insulated conductors.

The grounding conductor of the entrance feeder connects the grounding bus bar to an electrical ground at the disconnect box (See Figure 58 & 59). For this reason you must have a 3-pole, 4-wire feeder.

NOTICE

THE MANUFACTURED HOME CONSTRUCTION AND SAFETY STANDARDS AND THE NATIONAL ELECTRICAL CODE PROHIBIT CONNECTING THE GROUNDING BAR AND THE NEUTRAL BAR TOGETHER IN THE DISTRIBUTION PANEL. THE GROUND AND THE NEUTRAL ARE INSULATED FROM ONE ANOTHER. IT IS EXTREMELY IMPORTANT THAT THE GROUNDING CONDUCTOR AND

ELECTRIC SYSTEMS (continued)

THE NEUTRAL CONDUCTOR FROM THE DISTRIBUTION PANEL IN THE HOME BE CONNECTED TOGETHER AT THE DISCONNECT BOX LOCATED OUTSIDE OF THE HOME (SEE FIGURES 58 & 59). FOR THIS REASON, ALL FOUR OF THE FEEDER CONDUCTORS ARE ABSOLUTELY ESSENTIAL.

WARNING

IF THE GROUNDING CONDUCTOR AND THE NEUTRAL CONDUCTOR ARE NOT CONNECTED TOGETHER AT THE DISCONNECT BOX AND THEN PROPERLY GROUNDED TO THE EARTH AS REQUIRED BY THE NATIONAL ELECTRICAL CODE, THE INDIVIDUAL BRANCH CIRCUIT BREAKERS LOCATED IN THE DISTRIBUTION PANEL WITHIN THE HOME WILL NOT FUNCTION AND A SHORT CIRCUIT AT ANY TIME COULD CAUSE AN ELECTROCUTION.

The electrical supply connection to the home may be made utilizing a raceway or buried cable. A raceway is provided from the distribution panel and is routed to the underside of the home. A junction box must be used to connect the home feeder raceway to the supply raceway beneath the home. This feeder installation must be in accordance with the National Electrical Code. The proper feeder conductor sizes and required junction box sizes are given in Chart 8 and Figures 58 & 59.

The main distribution panelboard within the home has been sized for the electrical equipment and/or branch circuits that were installed during the manufacturing process as original equipment. Branch circuits for electrical

equipment added to the home in the aftermarket such as air conditioning units, heat pumps and water pumps, as well as for ancillary structures such as porches, garages, workshops, barns, etc. must originate at a power source outside the home.

WARNING

DO NOT INSTALL LAMPS (LIGHT BULBS) IN THE LIGHTING FIXTURES THAT EXCEED THE MAXIMUM WATTAGE LIMIT POSTED ON OR NEAR THE LIGHT FIXTURE. OVER LAMPING CAN CAUSE AN ELECTRICAL SHOCK OR FIRE HAZARD.

CAUTION

IF YOUR HOME IS EQUIPPED WITH AN ELECTRIC WATER HEATER, DO NOT TURN ON THE CIRCUIT BREAKER IN THE DISTRIBUTION PANEL UNTIL AFTER THE WATER HEATER HAS BEEN FILLED WITH WATER. ENERGIZING THE CIRCUIT PRIOR TO FILLING THE WATER HEATER WILL RESULT IN SEVERE DAMAGE TO THE HEATING ELEMENT WITHIN THE WATER HEATER.

Multi-Section Bonding

WARNING

IT IS ESSENTIAL FOR THE SAFETY OF THE INSTALLATION PERSONNEL THAT THE FRAME SECTIONS BE BONDED TOGETHER PRIOR TO CONNECTING AN ENERGIZING THE HOMES ELECTRICAL SYSTEM. FAILURE TO COMPLETE THIS OPERATION AS THE FIRST STEP OF

ELECTRIC SYSTEMS (continued)

THE ELECTRICAL INSTALLATION COULD CREATE AN ELECTRICAL SHOCK HAZARD SHOULD THE FRAME BECOME ENERGIZED FROM ANY SOURCE.

Bonding between sections of a home must be accomplished at set-up by connecting a #8 AWG bare copper wire between the chassis members using approved grounding lugs with bolts, star washers and nuts, or self-tapping screws shipped with the home. This connection is made at the rear of the home sections at the outrigger location. See Figure 60.

Multi-Section Electrical Crossovers

Electrical crossovers for multi-section homes are located along the center line between the sections. These crossover locations can be distinguished by a number of tags and a locator drawing posted in the home. See Figures 61, 62 & 63 for typical crossover wiring and alternate crossover methods.

Exception: Some crossover connections are made with listed crossover connectors that do not require junction boxes.

Test Procedure for Electrical System

The electrical system should be tested to make certain there is no reversed polarity, open grounds, or short circuits in the system. Such tests should be performed after the home has been completely set up and assembled, all metal structural and trim pieces have been installed, and the internal electrical connections have been made.

1. All exposed non-current carrying metal parts that may become energized

shall be effectively bonded. A test to confirm this bonding should be made **BEFORE** the home is connected to 120/240 VAC service.

2. Perform the following checks for proper bonding or continuity using an Ideal No. 61-030 Continuity Tester or equivalent. (This tester is a small pen flashlight using two "AA" batteries and utilizing a long wire lead with an alligator clamp.)

a. Using the flashlight continuity tester, connect the alligator clip to a positive ground (metal skin, window frames on metal exterior units, floor duct riser (when a metal heat duct system has been installed), or a metal screw head on a receptacle or switch plate) and touch the body of the flashlight to each fixture canopy. The continuity light should light if each fixture is properly grounded.

b. Using the continuity tester, check all appliances and vent fans. By touching the metal body of the flashlight to the appliance or fan and having the alligator clamp connected to a convenient ground, the light should come on if the appliance or fan is properly grounded.

c. Using the same procedure, check the bonding between the following:

(1) Metal register boot and convenient ground (only with metal ducts),

(2) Steel frame and metal roof,

(3) Steel frame and metal exterior skin,

(4) Steel frame and metal gas piping,

(5) Metal fireplace and convenient ground,

ELECTRIC SYSTEMS (continued)

- (6) Water heater and convenient ground,
- (7) Furnace and convenient ground,
- (8) Steel frame and metal EMT raceway to distribution panel where applicable.

NOTE

BONDING IS NOT REQUIRED ON METAL INLET OF PLASTIC WATER SYSTEMS OR ON PLUMBING FIXTURES SUCH AS TUBS, FAUCETS, SHOWER RISERS, AND METAL SINKS WHEN CONNECTED ONLY TO PLASTIC WATER AND DRAIN PIPING.

ANY INDICATION OF AN INADEQUATE BOND BETWEEN ANY OF THE ITEMS LISTED ABOVE WILL REQUIRE INVESTIGATION AND CORRECTION.

3. An additional check using the continuity tester should be conducted as follows:

a. Using the flashlight continuity tester, connect the alligator clip to a positive ground, turn on all light fixture and appliance switches including all fans and the furnace, and touch the flashlight probe to the neutral bar in the electrical distribution panel and each connected load. The continuity light should not light. If the continuity tester does light, it is an indication of an electrical short.

b. Should an electrical short to ground be indicated, the short must be isolated and corrected before connecting the power to the home from the source.

4. After the home is connected to 120/240VAC service, make the following checks:

a. Using a polarity checker, such as a Trinetics Ground Monitor GM-20 or equivalent, plug into each AC receptacle in the home noting an indication of reversed polarity, open grounds, or shorts. Any reverse polarity, open grounds, or shorts which are located must be investigated and repaired.

b. Using a ground fault tester such as a Unitest GFI Circuit Tester or equivalent, check each ground fault circuit breaker or receptacle outlet for proper operation. Any ground fault breaker or receptacle outlet which does not operate properly should be replaced.

c. Install light bulbs and/or fluorescent tubes in all fixtures and check for proper operation by turning on the appropriate switches. Repair or replace any inoperative light switches or fixtures.

Test Procedure for Smoke Detectors

All manufactured homes have smoke detectors wired into the home's electrical system. These devices are sensitive to smoke in the initial stages of a fire and will sound an alarm to alert occupants during a fire. It is essential that the smoke detectors are tested at the time the home is installed at the home site. Testing smoke detectors is a simple operation, but may require the use of a stepladder to safely reach each one.


Begin by locating each smoke detector and turning off each light switch in the house. Where the smoke detectors have battery backup, the batteries must be removed to allow testing of the 120-volt system. To perform the test, simply press the test button until the alarm sounds.

NOTICE

METHOD OF WIRING & GROUNDING
THIS MANUFACTURED HOME

NOTE: ALL WIRES FROM THE PANEL BOX TO THE DISCONNECT MUST
BE INSULATED, INCLUDING THE GROUND WIRE.

(ALL FOUR WIRES ARE ABSOLUTELY ESSENTIAL.)

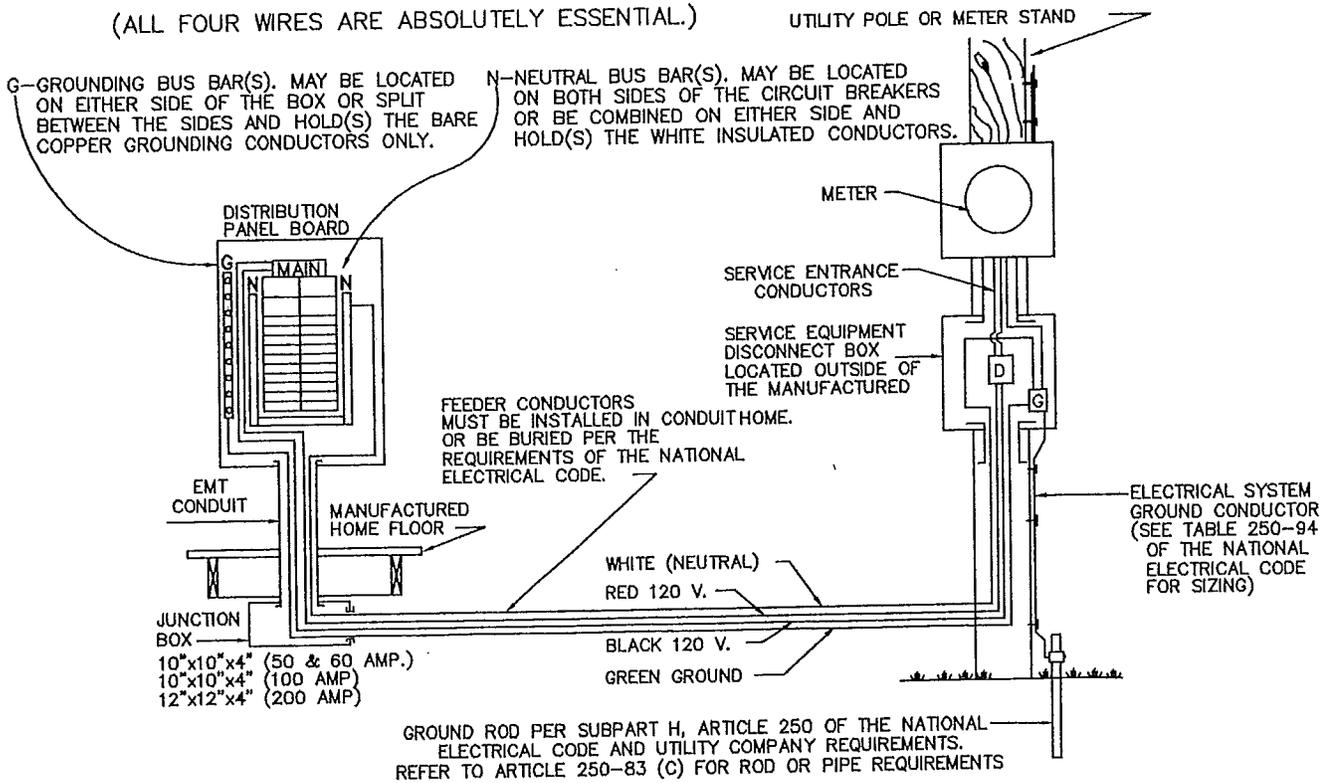

CAUTIONS

READ EVERY ITEM

1. CONFIRM THAT THE GROUNDING CONDUCTOR IS CONNECTED TO THE GROUNDING BUS BAR AND THAT THE NEUTRAL CONDUCTOR IS CONNECTED TO THE NEUTRAL BUS BAR.
2. NEVER DOUBLE-UP ON A CIRCUIT BREAKER.
3. NEVER REMOVE COVER FROM ENTRY PANEL.
4. NEVER OVERLOAD A CIRCUIT.
5. NEVER ADD ADDITIONAL CIRCUITS TO THIS PANEL.
6. NEVER REPLACE A CIRCUIT BREAKER WITH ONE HAVING A HIGHER AMPACITY RATING.
7. NEVER CONNECT THE ENTRY PANEL TO THE DISCONNECT BOX WITH A MANUFACTURED LIFE LINE (PIGTAIL CONNECTOR).
8. NEVER USE 3 WIRES IN PLACE OF 4 BECAUSE THE HOME WILL BE IMPROPERLY GROUNDED. WITHOUT THE 4 WIRE CONNECTION, THE CIRCUIT BREAKERS WILL NOT FUNCTION AND A SHORT CIRCUIT AT ANY TIME COULD CAUSE AN ELECTROCUTION.
9. TRIPPED CIRCUIT BREAKERS OF A PROPERLY CONNECTED SYSTEM INDICATE A SHORT CIRCUIT.

WARNING

THE FOURTH INSULATED CONDUCTOR, WHICH IS THE GROUND, IS ABSOLUTELY CRITICAL FOR SAFETY AND PREVENTION OF AN ELECTROCUTION IN THE EVENT OF A SHORT CIRCUIT.

FIGURE 58

NOTICE

METHOD OF INSTALLING SERVICE EQUIPMENT, WIRING AND GROUNDING FOR THIS MANUFACTURED HOME.

NOTE: ALL WIRES FROM THE PANEL BOX TO THE DISCONNECT MUST BE INSULATED, INCLUDING THE GROUND WIRE.
 THE NEUTRAL IS INSULATED FROM THE GROUND IN THE PANELBOARD.
 (ALL FOUR WIRES ARE ABSOLUTELY ESSENTIAL.)

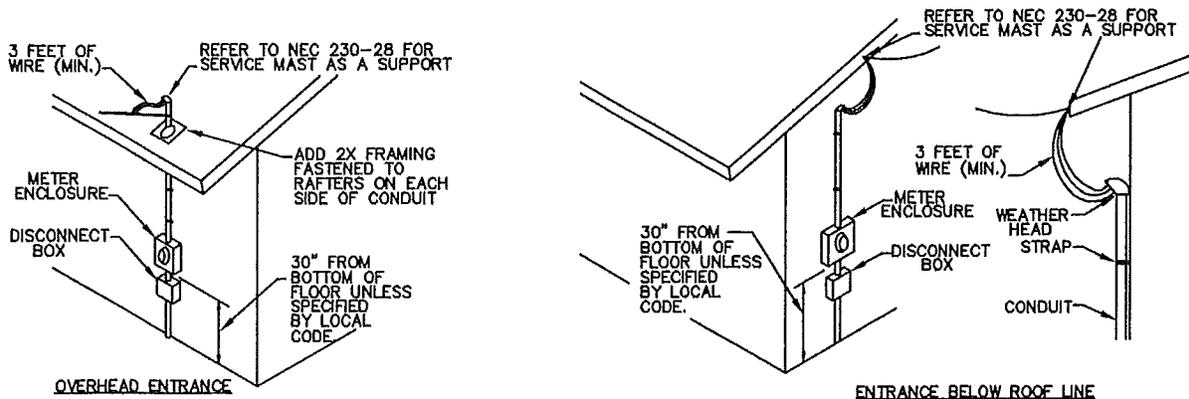
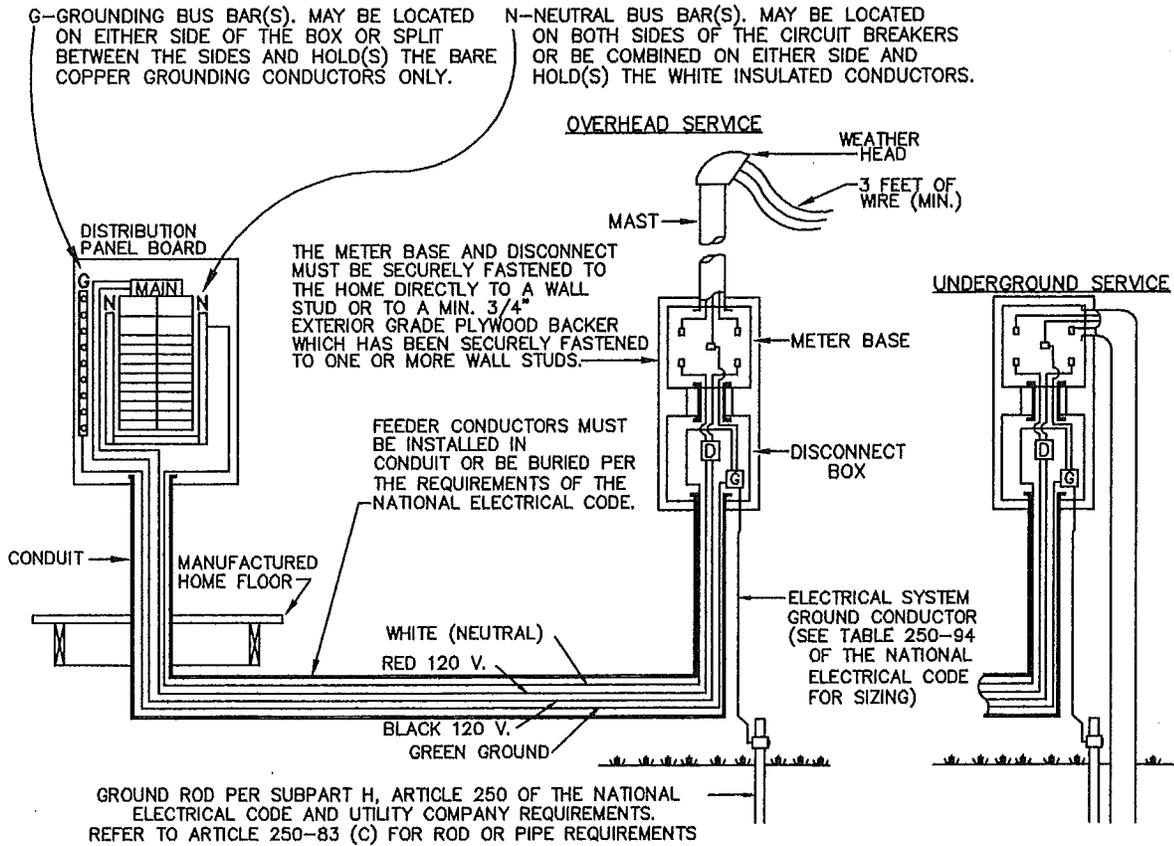


FIGURE 59

INTERIOR WALL CROSSOVER DETAIL

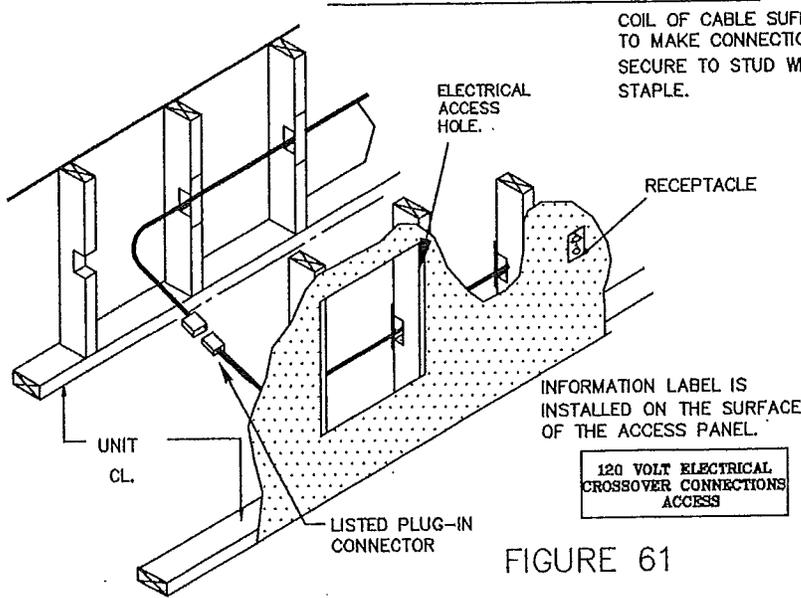


FIGURE 61

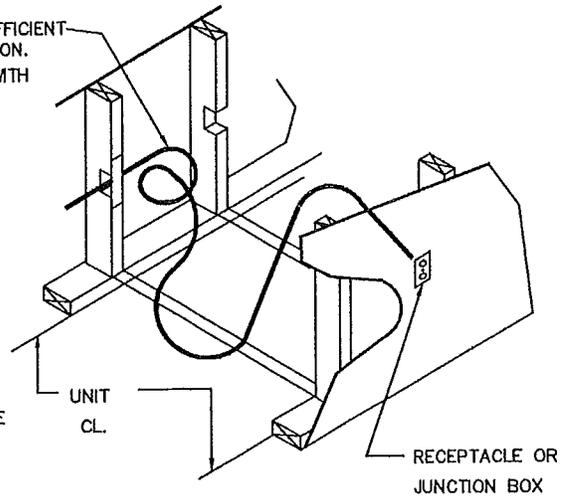


FIGURE 62

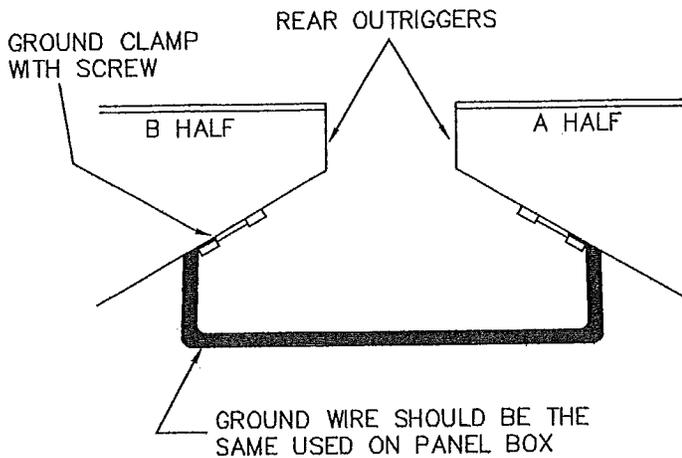


FIGURE 60

ADDITIONAL CONNECTORS WILL BE NEEDED FOR ADDITIONAL FLOOR SECTIONS

ENDWALL CROSSOVER DETAIL

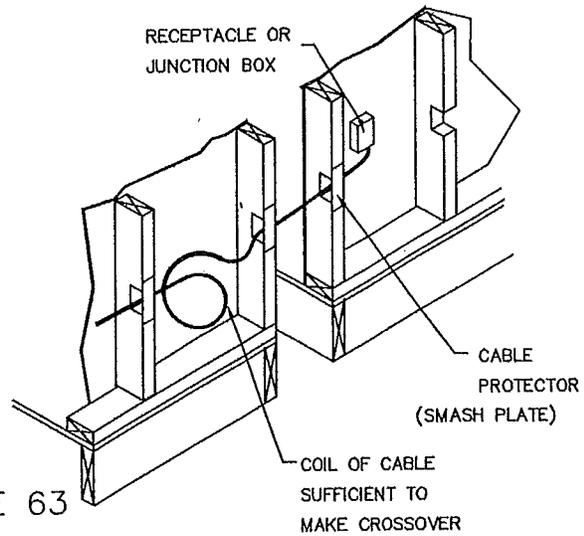


FIGURE 63

-- 15 OR 20 AMPS --

FEEDER SIZE (SEE MAIN BREAKER AND LABEL ON DIS- TRIBUTION PANEL) (AMPS)	MINIMUM SIZES		FEEDER CONDUCTOR SIZES (AWG) 1,2,3 COPPER CONDUCTORS SHOWN		
	JUNCTION BOX (IN)	CONDUIT (IN)	RED & BLACK (POWER)	WHITE (NEUTRAL)	GREEN (GROUNDING)
50 & 60	10x10x4	1 1/2"	NO. 6 THW (CU.)	NO. 6 THW (CU.)	NO. 8 THW (CU.)
100	10x10x4	1 1/2"	NO. 3 THW (CU.)	NO. 3 THW (CU.)	NO. 8 THW (CU.)
200	12x12x4	2"	NO. 3/0 THW (CU.)	NO. 3/0 THW (CU.)	NO. 4 THW (CU.)

NOTE: 1. BASED ON 75° 27 C. COPPER WIRE.
 2. CONDUCTOR SIZES ARE IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE TABLE 310-16.
 3. COPPER CLAD ALUMINUM OR ALUMINUM CONDUCTORS MAY BE USED WHEN PROPERLY SIZED IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE.
 4. VOLTAGE DROP NOT CONSIDERED

CHART 8

GROUND ANCHORING SYSTEM

GROUND ANCHORING SYSTEM

General

All homes, whether manufactured or site constructed, must be securely fastened to the ground to resist the sliding and overturning effects of high winds.

This section will provide the information needed to properly install an anchoring system, which will provide the resistance to lateral movement (sliding) and overturning (uplift) as follows:

Zone I: A horizontal wind load of not less than 15 pounds per square foot and a net uplift of not less than -9 pounds per square foot increased by a factor of safety of 1.5.

Zone II: A horizontal wind load of not less than 39 pounds per square foot and a net uplift of not less than -27 pounds per square foot increased by a factor of safety of 1.5

Zone III: Not applicable

Your home was designed for the wind conditions specified in the Structural Design Basis Certificate, Design Wind Zone Map, which is posted within your home on a wall in the master bedroom clothes closet.

CAUTION

ALTHOUGH LOCAL SHELTERED CONDITIONS MAY SEEM TO PERMIT THE INSTALLATION OF YOUR HOME WITHOUT THE USE OF A PROPER ANCHORING SYSTEM, THE ANCHORING SYSTEM MUST BE USED IN ALL CASES FOR YOUR SAFETY AND COMFORT.

Design Criteria

1. Anchoring equipment must be capable of resisting an allowable working load equal to or exceeding 3,150 pounds and must be capable of withstanding a 50 percent overload (4,725 pounds total) without failure of either the anchoring equipment or the attachment point on your home.

2. Anchoring equipment means straps, cable, turnbuckles, and chains, including tensioning devices, which are used with ties to secure a manufactured home to ground anchors.

3. Anchoring equipment should be certified by a registered professional engineer or architect to resist these specified forces in accordance with testing procedures in ASTM Standard Specification D3953-91, Standard Specification for Strapping, Flat Steel and Seals.

4. Ground anchor strapping used in conjunction with the anchoring system must be equivalent of Type 1, Class B, Grade 1 steel strapping, 1 1/4 inches wide and 0.035 inches thick. The strapping must also comply with the requirements stated in item number 3 above.

5. Ground anchors should be certified by a registered professional engineer, architect or nationally recognized testing laboratory as to their resistance, based on the maximum angle of diagonal tie and/or vertical tie loading. The anchors must be installed in accordance with the manufacturer's installation instructions, which are supplied with the anchors.

GROUND ANCHORING SYSTEM (continued)

6. Ground anchors should be installed to their full depth, below the local frost line and at least 12 inches above the local water table.

7. Stabilizing devices or cement collars must be installed to provide added resistance to overturning or sliding forces.

8. Ground anchors must be placed within two feet of each end of the home and be evenly spaced along the length of the home being careful not to exceed the maximum spacing shown in charts 9 through 16.

9. Ground anchors and anchor heads must be sized to resist the loads listed in the notes for Figures 64 through 75. The materials necessary to anchor your home to the ground have not been provided by this company and may be obtained through your independent manufactured home dealer.

Installation Instructions - Frame Anchoring Procedure

1. As noted earlier in this instruction, the ground anchors must be installed prior to locating the home on the site in its final resting position. The exact location of the anchor heads is as follows:

When diagonal ties are used, the anchor head will be 10 inches in from the edge of the floor for homes having 4 inch exterior walls and 12 inches in from the edge of the floor for homes having 6 inch exterior walls. This will allow the anchor head to be inside an 8-inch block wall. When vertical ties are used, the anchor head will be 2 inches outboard of the I-beam centerline. See Figures 64

through 75. Note: Anchor spacing decreases as roof pitch increases.

2. The ground anchor should be installed at the same angle as the diagonal tie so that the pulling force on the anchor is in line with the ties. Should this not be possible, a concrete collar shall be poured around the anchor shaft or a metal stabilizing device driven in front of the anchors direction of pull. The collar must be 10 inches in diameter and 18 inches deep. See Figure 76. As an alternate to the concrete collar, a stabilizing device may be installed on the anchor. See Figure 77.

3. The home must be in its final resting position and in proper working alignment prior to the installation of the anchor ties.

4. The diagonal ties (frame ties) must be spaced as evenly as practical along the length of the home with not more than 2 feet open end spacing at each end.

5. The vertical and/or diagonal (frame ties) required can be determined by referring to Figures 64-75. The spacing requirements are based on: your geographical area, (Zone I or Zone II, as indicated on your Structural Design Basis Certificate, Design Wind Zone Map), vertical or diagonal system, width of unit, height of pier and slope of roof. Refer to Figure 83 for additional floor sections.

6. Vertical and/or diagonal ties can be connected to the frame I-beams by wrapping, clipping or bolting. Where the ties are wrapped the strapping must be protected from the edges of the I-beam by crimping another layer of strapping to the top and bottom hangers of the I-beam before making the wrap. Make

GROUND ANCHORING SYSTEM (continued)

certain to wrap only at the protected areas. (see Figures 79, 80, 81 and 82).

7. Tighten the straps using the tensioning device provided with the ground anchors. Following the tensioning specifications provided by the anchor equipment manufacture carefully. Use caution to avoid overtensioning of the straps, which might pull the home off the piers. It is recommended that all straps be tightened only enough to remove the slack. Then, after all straps are installed and the slack removed, tension the straps.

8. The strap tension should be rechecked at frequent intervals until all pier settlement has stopped and alignment adjustments made as needed.

Longitudinal Frame Ties

In addition to the vertical and/or diagonal ties required along the length of the home, diagonal ties are also required to be placed at the ends of the home. They must be attached to the I-beam as shown in Figures 87, 88, and 89. The design criteria found on page 54 for anchoring equipment applies to their ties as well. The ties may be bolted or clipped to the I-beam or lower flange as shown.

Tie spacing is dependent on the geographic zone the home is located in (Zone I or Zone II, as indicated on your Structural Design Basis Certificate, Design Wind Zone Map), height of exterior wall and pier height. Refer to charts 21 and 22 for spacing.

Column Uplift Anchoring

When it is necessary to anchor a centerline column due to wind uplift

loading, the anchor strap will have been installed on the home at the time of manufacture. The strap will need to be connected to a ground anchor as shown in figure 84, 85 and 86.

CAUTION

DURING ANY REALIGNING PROCESS, DO NOT JACK THE HOME AGAINST TIGHTENED GROUND TIES.


Alternate Procedures

1. Should your home be placed on a full concrete slab as shown in Figure 19, the ground anchors may be replaced with anchor bolts imbedded in the concrete slab as shown. The location of the anchor bolt in relation to the longitudinal I-beams of the frame will be the same as for the ground anchors. (See Figure 78).

2. If for any special considerations at the home site you cannot use this ground anchoring system, you may have an anchoring system designed by a registered professional engineer or architect at the home owner's or installer's expense. The design criteria described earlier in this section should be used for loads, safety factors, and equipment specifications. The engineer or architect should inspect the installed system to ensure proper installation. Above all, your home must be properly anchored to the ground.

3. Anchors embedded into concrete runners under the I-beams rather than the full slab (See Figure 19) or into the individual footings are unacceptable unless such installation complies with paragraph number 2 above.

FIG. 64

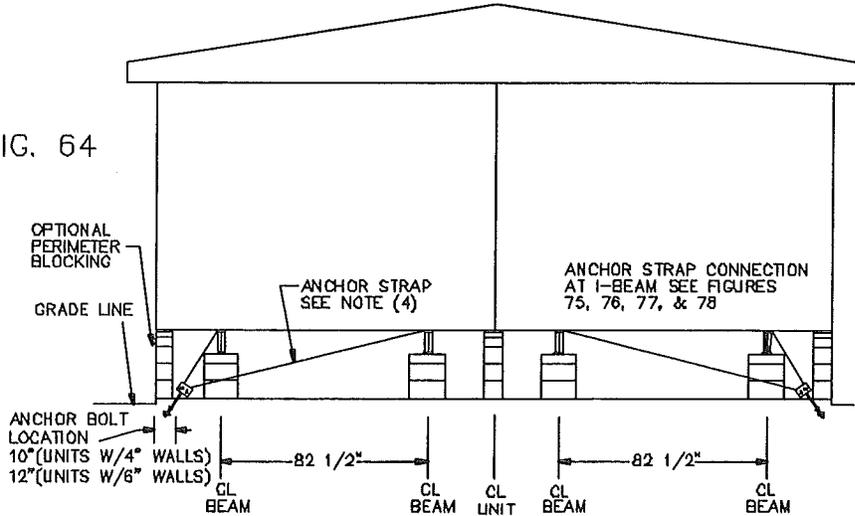

GENERAL NOTES


1. THE ANCHOR MUST BE MINUTE MAN OR EQUAL. ANCHOR AND ANCHOR HEAD MUST HAVE AN ULTIMATE STRENGTH EQUAL TO OR GREATER THAN 5202 LBS. FOR 23' & 24' WIDE, 8033 LBS. FOR 26', 27' & 28' WIDE AND 5925 LBS. FOR 32' WIDE.
2. ANCHOR BOLTS (REGARDLESS OF ZONING) MUST START NO FURTHER THAN 2'-0" FROM EACH END OF HOME.
3. IF ANCHOR IS INSERTED VERTICALLY A CONCRETE COLLAR OR STABILIZING DEVICE MUST BE USED AT THE GROUND LINE. SEE FIG. 76 & 77.
4. EACH OF THE STRAPS AND CONNECTIONS TO THE I-BEAM MUST HAVE AN ULTIMATE STRENGTH OF 4725 LBS. SEE FIG. 76 & 77.
5. REFER TO CHART 9 FOR ZONE 1 AND ZONE 2 MAXIMUM STRAP SPACING FOR THIS ANCHORING SYSTEM.

MAXIMUM ANCHOR SPACING (DIAGONAL) 82 1/2" I-BEAM CENTERS
ROOF SLOPE LESS THAN 4.36/12 (20°) ONLY

CHART 9

MAXIMUM PIER HEIGHT	23' WIDE UNITS		24' WIDE UNITS		26' WIDE UNITS		27'/28' WIDE UNITS		32' WIDE UNITS	
	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2
25 1/2"	21 ft.	12 ft.	22 ft.	12 ft.	24 ft.	14 ft.	25 ft.	14 ft.	27 ft.	12 ft.
33 1/2"	20 ft.	11 ft.	20 ft.	12 ft.	23 ft.	13 ft.	24 ft.	13 ft.	26 ft.	14 ft.
41 1/2"	19 ft.	10 ft.	19 ft.	11 ft.	21 ft.	12 ft.	22 ft.	13 ft.	24 ft.	14 ft.
49 1/2"	17 ft.	10 ft.	18 ft.	10 ft.	20 ft.	11 ft.	21 ft.	12 ft.	23 ft.	13 ft.
57 1/2"	17 ft.	9 ft.	17 ft.	10 ft.	19 ft.	11 ft.	20 ft.	11 ft.	22 ft.	12 ft.

FIG. 65

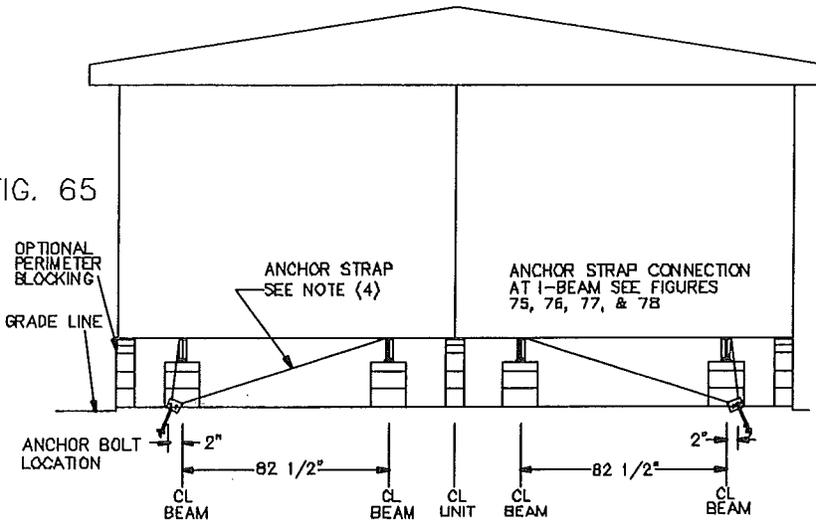

GENERAL NOTES

1. THE ANCHOR MUST BE MINUTE MAN OR EQUAL. ANCHOR AND ANCHOR HEAD MUST HAVE AN ULTIMATE STRENGTH EQUAL TO OR GREATER THAN 4725 LBS. FOR 23, 24, 26, 27, 28, AND 32 WIDE UNITS.
2. ANCHOR BOLTS (REGARDLESS OF ZONING) MUST START NO FURTHER THAN 2'-0" FROM EACH END OF HOME.
3. IF ANCHOR IS INSERTED VERTICALLY A CONCRETE COLLAR OR STABILIZING DEVICE MUST BE USED AT THE GROUND LINE. SEE FIG. 76 & 77.
4. EACH OF THE STRAPS AND CONNECTIONS TO THE I-BEAM MUST HAVE AN ULTIMATE STRENGTH OF 4725 LBS. SEE FIG. 76 & 77.
5. REFER TO CHART 10 FOR ZONE 1 AND ZONE 2 MAXIMUM STRAP SPACING FOR THIS ANCHORING SYSTEM.

MAXIMUM ANCHOR SPACING (VERTICAL) 82 1/2" I-BEAM CENTERS
ROOF SLOPE LESS THAN 4.36/12 (20°) ONLY

CHART 10

MAXIMUM PIER HEIGHT	23' WIDE UNITS		24' WIDE UNITS		26' WIDE UNITS		27'/28' WIDE UNITS		32' WIDE UNITS	
	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2
25 1/2"	15 ft.	8 ft.	15 ft.	8 ft.	15 ft.	8 ft.	15 ft.	8 ft.	15 ft.	8 ft.
33 1/2"	14 ft.	8 ft.	14 ft.	8 ft.	14 ft.	8 ft.	14 ft.	8 ft.	14 ft.	8 ft.
41 1/2"	13 ft.	8 ft.	13 ft.	8 ft.	13 ft.	8 ft.	13 ft.	8 ft.	13 ft.	8 ft.
49 1/2"	13 ft.	7 ft.	13 ft.	7 ft.	13 ft.	7 ft.	13 ft.	7 ft.	13 ft.	7 ft.
57 1/2"	12 ft.	7 ft.	12 ft.	7 ft.	12 ft.	7 ft.	12 ft.	7 ft.	12 ft.	7 ft.


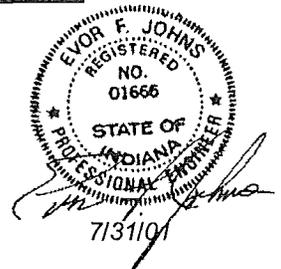


FIG. 66

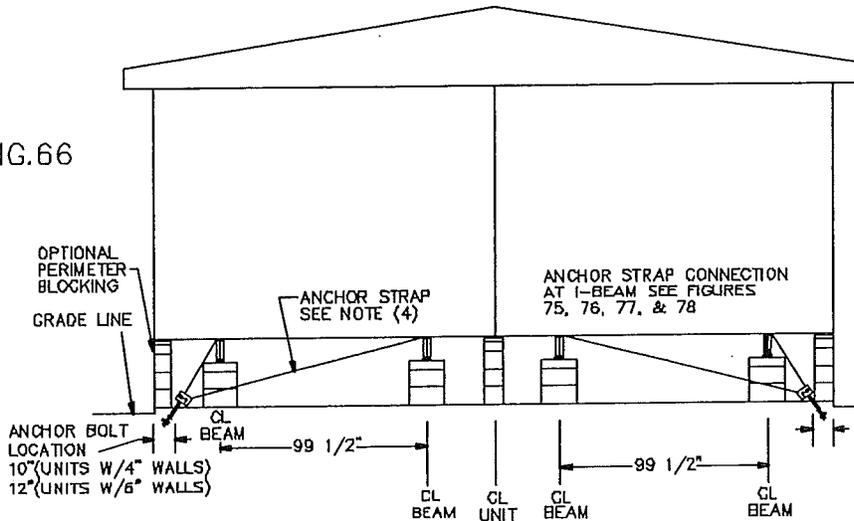

GENERAL NOTES


1. THE ANCHOR MUST BE MINUTE MAN OR EQUAL. ANCHOR AND ANCHOR HEAD MUST HAVE AN ULTIMATE STRENGTH EQUAL TO OR GREATER THAN 5318 LBS. FOR 23, 24, AND 26 WIDE, 5549 LBS. FOR 27 and 28 WIDE AND 5827 LBS. FOR 32 WIDE.
2. ANCHOR BOLTS (REGARDLESS OF ZONING) MUST START NO FURTHER THAN 2'-0" FROM EACH END OF HOME.
3. IF ANCHOR IS INSERTED VERTICALLY A CONCRETE COLLAR OR STABILIZING DEVICE MUST BE USED AT THE GROUND LINE. SEE FIG. 76 & 77.
4. EACH OF THE STRAPS AND CONNECTIONS TO THE I-BEAM MUST HAVE AN ULTIMATE STRENGTH OF 4725 LBS. SEE FIG. 76 & 77.
5. REFER TO CHART 11 FOR ZONE 1 AND ZONE 2 MAXIMUM STRAP SPACING FOR THIS ANCHORING SYSTEM.

MAXIMUM ANCHOR SPACING (DIAGONAL) 99 1/2" I-BEAM CENTERS
ROOF SLOPE LESS THAN 4.36/12 (20°) ONLY

CHART 11

MAXIMUM PIER HEIGHT	23' WIDE UNITS		24' WIDE UNITS		26' WIDE UNITS		27'/28' WIDE UNITS		32' WIDE UNITS	
	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2
25 1/2"	18 ft.	10 ft.	19 ft.	11 ft.	22 ft.	13 ft.	23 ft.	13 ft.	26 ft.	13 ft.
33 1/2"	17 ft.	10 ft.	18 ft.	10 ft.	21 ft.	12 ft.	22 ft.	12 ft.	24 ft.	14 ft.
41 1/2"	16 ft.	9 ft.	17 ft.	10 ft.	20 ft.	11 ft.	21 ft.	12 ft.	23 ft.	13 ft.
49 1/2"	18 ft.	9 ft.	16 ft.	9 ft.	19 ft.	11 ft.	19 ft.	11 ft.	22 ft.	12 ft.
57 1/2"	15 ft.	8 ft.	15 ft.	9 ft.	18 ft.	10 ft.	19 ft.	10 ft.	21 ft.	12 ft.

FIG. 67

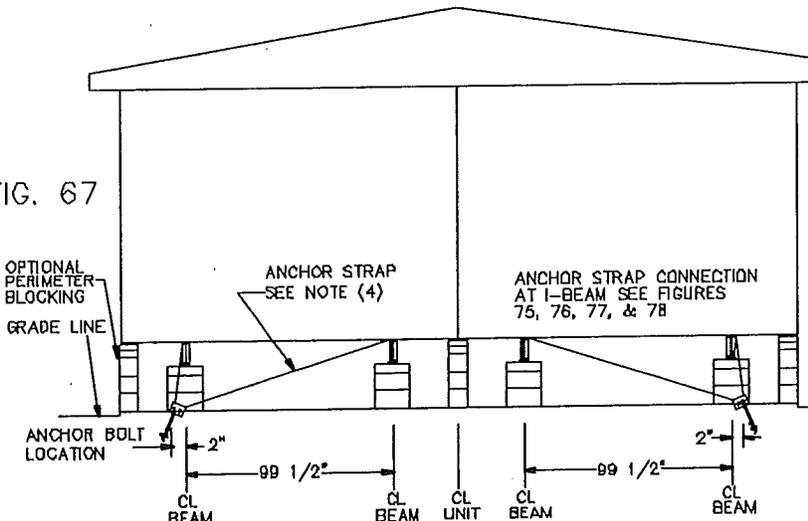

GENERAL NOTES

1. THE ANCHOR MUST BE MINUTE MAN OR EQUAL. ANCHOR AND ANCHOR HEAD MUST HAVE AN ULTIMATE STRENGTH EQUAL TO OR GREATER THAN 4725 LBS. FOR 23, 24, 26, 27, 28, AND 32 WIDE UNITS.
2. ANCHOR BOLTS (REGARDLESS OF ZONING) MUST START NO FURTHER THAN 2'-0" FROM EACH END OF HOME.
3. IF ANCHOR IS INSERTED VERTICALLY A CONCRETE COLLAR OR STABILIZING DEVICE MUST BE USED AT THE GROUND LINE. SEE FIG. 76 & 77.
4. EACH OF THE STRAPS AND CONNECTIONS TO THE I-BEAM MUST HAVE AN ULTIMATE STRENGTH OF 4725 LBS. SEE FIG. 76 & 77.
5. REFER TO CHART 12 FOR ZONE 1 AND ZONE 2 MAXIMUM STRAP SPACING FOR THIS ANCHORING SYSTEM.

MAXIMUM ANCHOR SPACING (VERTICAL) 99 1/2" I-BEAM CENTERS
ROOF SLOPE LESS THAN 4.36/12 (20°) ONLY

CHART 12

MAXIMUM PIER HEIGHT	23' WIDE UNITS		24' WIDE UNITS		26' WIDE UNITS		27'/28' WIDE UNITS		32' WIDE UNITS	
	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2
25 1/2"	15 ft.	8 ft.	15 ft.	8 ft.	15 ft.	8 ft.	15 ft.	8 ft.	15 ft.	8 ft.
33 1/2"	15 ft.	8 ft.	15 ft.	8 ft.	15 ft.	8 ft.	15 ft.	8 ft.	15 ft.	8 ft.
41 1/2"	14 ft.	8 ft.	14 ft.	8 ft.	14 ft.	8 ft.	14 ft.	8 ft.	14 ft.	8 ft.
49 1/2"	14 ft.	8 ft.	14 ft.	8 ft.	14 ft.	8 ft.	14 ft.	8 ft.	14 ft.	8 ft.
57 1/2"	13 ft.	7 ft.	13 ft.	7 ft.	13 ft.	7 ft.	13 ft.	7 ft.	13 ft.	7 ft.


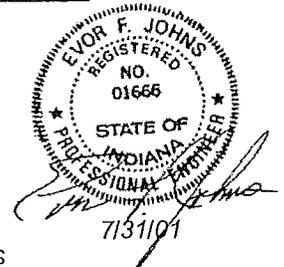


FIG. 68

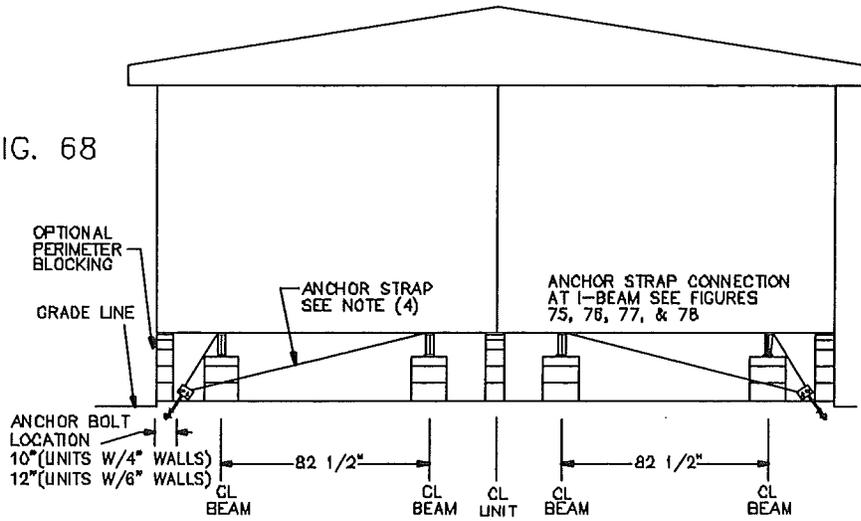

MAXIMUM ANCHOR SPACING (DIAGONAL) 82 1/2" I-BEAM CENTERS
ROOF SLOPE 5/12 ONLY

CHART 13

MAXIMUM PIER HEIGHT	24' WIDE UNITS		26' WIDE UNITS		27 1/2' WIDE UNITS		32' WIDE UNITS	
	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2
25 1/2"	12 ft.	7 ft.	12 ft.	7 ft.	12 ft.	7 ft.	11 ft.	6 ft.
33 1/2"	12 ft.	7 ft.	11 ft.	6 ft.	11 ft.	6 ft.	10 ft.	6 ft.
41 1/2"	11 ft.	6 ft.	10 ft.	6 ft.	10 ft.	6 ft.	10 ft.	5 ft.
49 1/2"	10 ft.	6 ft.	10 ft.	5 ft.	10 ft.	5 ft.	9 ft.	5 ft.
57 1/2"	10 ft.	5 ft.	9 ft.	5 ft.	9 ft.	5 ft.	9 ft.	5 ft.

GENERAL NOTES

1. THE ANCHOR MUST BE MINUTE MAN OR EQUAL. ANCHOR AND ANCHOR HEAD MUST HAVE AN ULTIMATE STRENGTH EQUAL TO OR GREATER THAN 5202 LBS. FOR 23 & 24 WIDE, 8033 LBS. FOR 26, 27 & 28 WIDE AND 5925 LBS. FOR 32 WIDE.
2. ANCHOR BOLTS (REGARDLESS OF ZONING) MUST START NO FURTHER THAN 2'-0" FROM EACH END OF HOME.
3. IF ANCHOR IS INSERTED VERTICALLY A CONCRETE COLLAR OR STABILIZING DEVICE MUST BE USED AT THE GROUND LINE. SEE FIG. 76 & 77.
4. EACH OF THE STRAPS AND CONNECTIONS TO THE I-BEAM MUST HAVE AN ULTIMATE STRENGTH OF 4725 LBS. SEE FIG. 76 & 77.
5. REFER TO CHART 13 FOR ZONE 1 AND ZONE 2 MAXIMUM STRAP SPACING FOR THIS ANCHORING SYSTEM.


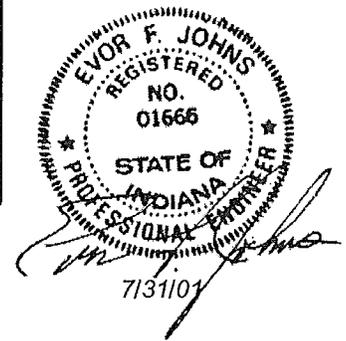


FIG. 69

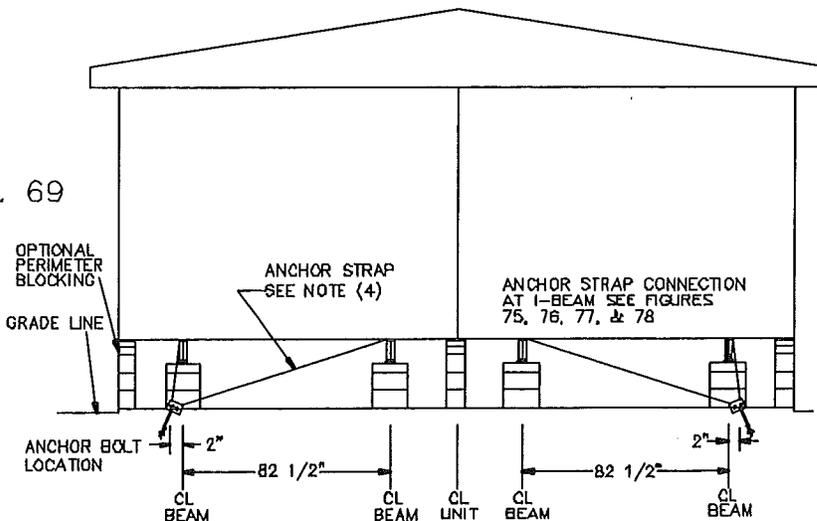

MAXIMUM ANCHOR SPACING (VERTICAL) 82 1/2" I-BEAM CENTERS
ROOF SLOPE 5/12 ONLY


CHART 14

MAXIMUM PIER HEIGHT	24' WIDE UNITS		26' WIDE UNITS		27 1/2' WIDE UNITS		32' WIDE UNITS	
	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2
25 1/2"	9 ft.	5 ft.	9 ft.	5 ft.	9 ft.	5 ft.	8 ft.	5 ft.
33 1/2"	9 ft.	5 ft.	8 ft.	5 ft.	8 ft.	5 ft.	8 ft.	4 ft.
41 1/2"	8 ft.	5 ft.	8 ft.	4 ft.	8 ft.	4 ft.	7 ft.	4 ft.
49 1/2"	8 ft.	4 ft.	8 ft.	4 ft.	7 ft.	4 ft.	7 ft.	4 ft.
57 1/2"	8 ft.	4 ft.	7 ft.	4 ft.	7 ft.	4 ft.	7 ft.	4 ft.

GENERAL NOTES

1. THE ANCHOR MUST BE MINUTE MAN OR EQUAL. ANCHOR AND ANCHOR HEAD MUST HAVE AN ULTIMATE STRENGTH EQUAL TO OR GREATER THAN 4725 LBS. FOR 24, 26, 27, 28, AND 32 WIDE UNITS.
2. ANCHOR BOLTS (REGARDLESS OF ZONING) MUST START NO FURTHER THAN 2'-0" FROM EACH END OF HOME.
3. IF ANCHOR IS INSERTED VERTICALLY A CONCRETE COLLAR OR STABILIZING DEVICE MUST BE USED AT THE GROUND LINE. SEE FIG. 76 & 77.
4. EACH OF THE STRAPS AND CONNECTIONS TO THE I-BEAM MUST HAVE AN ULTIMATE STRENGTH OF 4725 LBS. SEE FIG. 76 & 77.
5. REFER TO CHART 14 FOR ZONE 1 AND ZONE 2 MAXIMUM STRAP SPACING FOR THIS ANCHORING SYSTEM.

FIG. 70

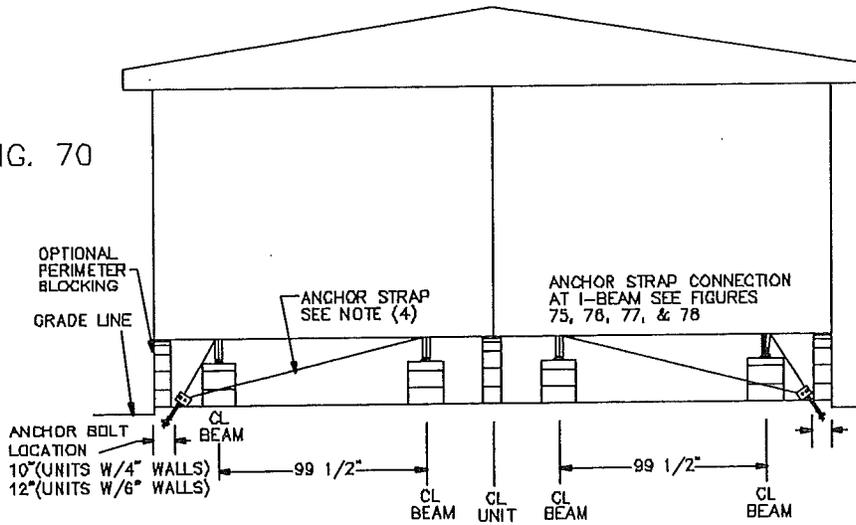

MAXIMUM ANCHOR SPACING (DIAGONAL) 99 1/2" I-BEAM CENTERS
ROOF SLOPE 5/12 ONLY

CHART 15


MAXIMUM PIER HEIGHT	24' WIDE UNITS		26' WIDE UNITS		27'/28' WIDE UNITS		32' WIDE UNITS	
	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2
25 1/2"	13 ft.	7 ft.	12 ft.	7 ft.	12 ft.	7 ft.	11 ft.	6 ft.
33 1/2"	12 ft.	7 ft.	11 ft.	8 ft.	11 ft.	8 ft.	11 ft.	6 ft.
41 1/2"	11 ft.	6 ft.	11 ft.	6 ft.	11 ft.	6 ft.	10 ft.	5 ft.
49 1/2"	11 ft.	8 ft.	10 ft.	8 ft.	10 ft.	8 ft.	10 ft.	5 ft.
57 1/2"	10 ft.	6 ft.	10 ft.	5 ft.	10 ft.	5 ft.	9 ft.	5 ft.

GENERAL NOTES

1. THE ANCHOR MUST BE MINUTE MAN OR EQUAL. ANCHOR AND ANCHOR HEAD MUST HAVE AN ULTIMATE STRENGTH EQUAL TO OR GREATER THAN 5318 LBS. FOR 23, 24, AND 26 WIDE, 5549 LBS. FOR 27 and 28 WIDE AND 5827 LBS. FOR 32 WIDE.
2. ANCHOR BOLTS (REGARDLESS OF ZONING) MUST START NO FURTHER THAN 2'-0" FROM EACH END OF HOME.
3. IF ANCHOR IS INSERTED VERTICALLY A CONCRETE COLLAR OR STABILIZING DEVICE MUST BE USED AT THE GROUND LINE. SEE FIG. 76 & 77.
4. EACH OF THE STRAPS AND CONNECTIONS TO THE I-BEAM MUST HAVE AN ULTIMATE STRENGTH OF 4725 LBS. SEE FIG. 76 & 77.
5. REFER TO CHART 15 FOR ZONE 1 AND ZONE 2 MAXIMUM STRAP SPACING FOR THIS ANCHORING SYSTEM.



FIG. 71

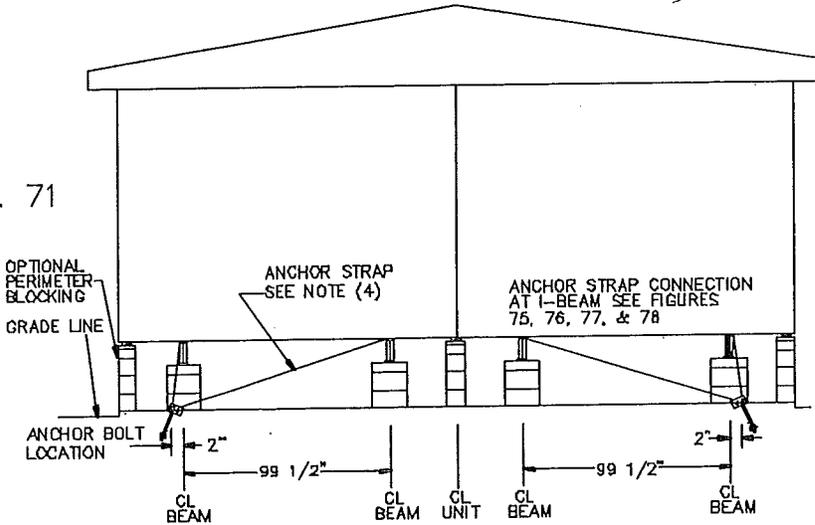

MAXIMUM ANCHOR SPACING (VERTICAL) 99 1/2" I-BEAM CENTERS
ROOF SLOPE 5/12 ONLY


CHART 16

MAXIMUM PIER HEIGHT	24' WIDE UNITS		26' WIDE UNITS		27'/28' WIDE UNITS		32' WIDE UNITS	
	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2
25 1/2"	9 ft.	5 ft.	9 ft.	5 ft.	9 ft.	5 ft.	8 ft.	5 ft.
33 1/2"	9 ft.	5 ft.	9 ft.	5 ft.	8 ft.	5 ft.	8 ft.	4 ft.
41 1/2"	9 ft.	5 ft.	8 ft.	5 ft.	8 ft.	5 ft.	8 ft.	4 ft.
49 1/2"	8 ft.	5 ft.	8 ft.	4 ft.	8 ft.	4 ft.	8 ft.	4 ft.
57 1/2"	8 ft.	5 ft.	8 ft.	4 ft.	8 ft.	4 ft.	7 ft.	4 ft.

GENERAL NOTES

1. THE ANCHOR MUST BE MINUTE MAN OR EQUAL. ANCHOR AND ANCHOR HEAD MUST HAVE AN ULTIMATE STRENGTH EQUAL TO OR GREATER THAN 4725 LBS. FOR 23, 24, 26, 27, 28, AND 32 WIDE UNITS.
2. ANCHOR BOLTS (REGARDLESS OF ZONING) MUST START NO FURTHER THAN 2'-0" FROM EACH END OF HOME.
3. IF ANCHOR IS INSERTED VERTICALLY A CONCRETE COLLAR OR STABILIZING DEVICE MUST BE USED AT THE GROUND LINE. SEE FIG. 76 & 77.
4. EACH OF THE STRAPS AND CONNECTIONS TO THE I-BEAM MUST HAVE AN ULTIMATE STRENGTH OF 4725 LBS. SEE FIG. 76 & 77.
5. REFER TO CHART 16 FOR ZONE 1 AND ZONE 2 MAXIMUM STRAP SPACING FOR THIS ANCHORING SYSTEM.

FIG. 72

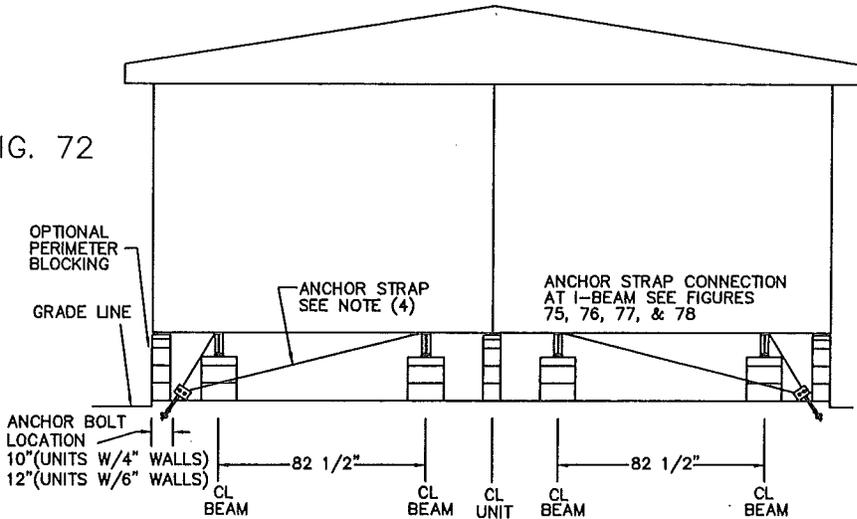

MAXIMUM ANCHOR SPACING (DIAGONAL) 82 1/2" I-BEAM CENTERS
ROOF SLOPE 7/12 ONLY

CHART 17


MAXIMUM PIER HEIGHT	24' WDE UNITS		26' WDE UNITS		27'/28' WDE UNITS		32' WDE UNITS	
	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2
25 1/2"	9 ft.	5 ft.	9 ft.	5 ft.	9 ft.	5 ft.	8 ft.	4 ft.
33 1/2"	9 ft.	5 ft.	8 ft.	4 ft.	8 ft.	4 ft.	8 ft.	4 ft.
41 1/2"	8 ft.	4 ft.	8 ft.	4 ft.	8 ft.	4 ft.	8 ft.	4 ft.
49 1/2"	7 ft.	4 ft.	8 ft.	4 ft.	8 ft.	4 ft.	7 ft.	4 ft.
57 1/2"	7 ft.	3 ft.	7 ft.	4 ft.	7 ft.	4 ft.	7 ft.	4 ft.

GENERAL NOTES

1. THE ANCHOR MUST BE MINUTE MAN OR EQUAL. ANCHOR AND ANCHOR HEAD MUST HAVE AN ULTIMATE STRENGTH EQUAL TO OR GREATER THAN 5202 LBS. FOR 23 & 24 WIDE, 6033 LBS. FOR 26, 27 & 28 WIDE AND 5925 LBS. FOR 32 WIDE.
2. ANCHOR BOLTS (REGARDLESS OF ZONING) MUST START NO FURTHER THAN 2'-0" FROM EACH END OF HOME.
3. IF ANCHOR IS INSERTED VERTICALLY A CONCRETE COLLAR OR STABILIZING DEVICE MUST BE USED AT THE GROUND LINE. SEE FIG. 76 & 77.
4. EACH OF THE STRAPS AND CONNECTIONS TO THE I-BEAM MUST HAVE AN ULTIMATE STRENGTH OF 4725 LBS. SEE FIG. 76 & 77.
5. REFER TO CHART 13 FOR ZONE 1 AND ZONE 2 MAXIMUM STRAP SPACING FOR THIS ANCHORING SYSTEM.



FIG. 73

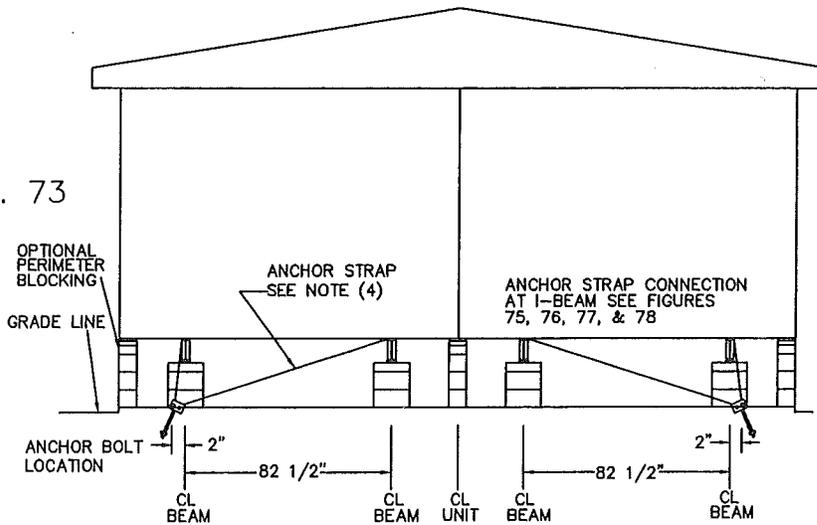

MAXIMUM ANCHOR SPACING (VERTICAL) 82 1/2" I-BEAM CENTERS
ROOF SLOPE 7/12 ONLY


CHART 18

MAXIMUM PIER HEIGHT	24' WDE UNITS		26' WDE UNITS		27'/28' WDE UNITS		32' WDE UNITS	
	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2
25 1/2"	6 ft	3 ft	7 ft	4 ft	7 ft	4 ft	6 ft	4 ft
33 1/2"	6 ft	3 ft	6 ft	4 ft	6 ft	4 ft	6 ft	3 ft
41 1/2"	6 ft	3 ft	6 ft	3 ft	6 ft	3 ft	5 ft	3 ft
49 1/2"	6 ft	3 ft	6 ft	3 ft	5 ft	3 ft	5 ft	3 ft
57 1/2"	6 ft	3 ft	5 ft	3 ft	5 ft	3 ft	5 ft	3 ft

GENERAL NOTES

1. THE ANCHOR MUST BE MINUTE MAN OR EQUAL. ANCHOR AND ANCHOR HEAD MUST HAVE AN ULTIMATE STRENGTH EQUAL TO OR GREATER THAN 4725 LBS. FOR 24, 26, 27, 28, AND 32 WIDE UNITS.
2. ANCHOR BOLTS (REGARDLESS OF ZONING) MUST START NO FURTHER THAN 2'-0" FROM EACH END OF HOME.
3. IF ANCHOR IS INSERTED VERTICALLY A CONCRETE COLLAR OR STABILIZING DEVICE MUST BE USED AT THE GROUND LINE. SEE FIG. 76 & 77.
4. EACH OF THE STRAPS AND CONNECTIONS TO THE I-BEAM MUST HAVE AN ULTIMATE STRENGTH OF 4725 LBS. SEE FIG. 76 & 77.
5. REFER TO CHART 14 FOR ZONE 1 AND ZONE 2 MAXIMUM STRAP SPACING FOR THIS ANCHORING SYSTEM.

FIG. 74

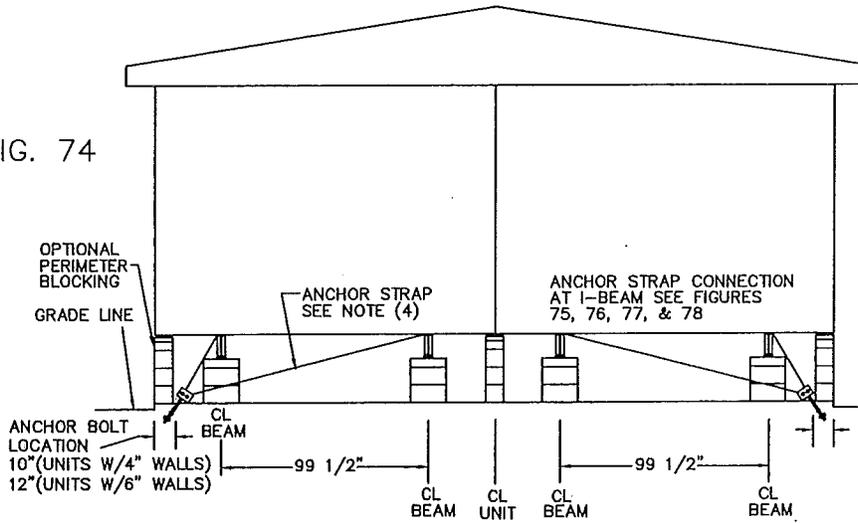

GENERAL NOTES

1. THE ANCHOR MUST BE MINUTE MAN OR EQUAL ANCHOR AND ANCHOR HEAD MUST HAVE AN ULTIMATE STRENGTH EQUAL TO OR GREATER THAN 5318 LBS. FOR 23, 24, AND 26 WDE, 5549 LBS. FOR 27 & 28 WDE AND 5827 LBS. FOR 32 WDE.
2. ANCHOR BOLTS (REGARDLESS OF ZONING) MUST START NO FURTHER THAN 2'-0" FROM EACH END OF HOME.
3. IF ANCHOR IS INSERTED VERTICALLY A CONCRETE COLLAR OR STABILIZING DEVICE MUST BE USED AT THE GROUND LINE. SEE FIG. 76 & 77.
4. EACH OF THE STRAPS AND CONNECTIONS TO THE I-BEAM MUST HAVE AN ULTIMATE STRENGTH OF 4725 LBS. SEE FIG. 76 & 77.
5. REFER TO CHART 15 FOR ZONE 1 AND ZONE 2 MAXIMUM STRAP SPACING FOR THIS ANCHORING SYSTEM.

MAXIMUM ANCHOR SPACING (DIAGONAL) 99 1/2" I-BEAM CENTERS
ROOF SLOPE 7/12 ONLY

CHART 19

MAXIMUM PIER HEIGHT	24' WDE UNITS		26' WDE UNITS		27'/28' WDE UNITS		32' WDE UNITS	
	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2
25 1/2"	9 ft.	5 ft.	9 ft.	5 ft.	9 ft.	5 ft.	8 ft.	4 ft.
33 1/2"	9 ft.	5 ft.	8 ft.	4 ft.	8 ft.	4 ft.	8 ft.	4 ft.
41 1/2"	8 ft.	4 ft.	8 ft.	4 ft.	8 ft.	4 ft.	8 ft.	4 ft.
49 1/2"	8 ft.	4 ft.	8 ft.	4 ft.	8 ft.	4 ft.	8 ft.	4 ft.
57 1/2"	7 ft.	4 ft.	8 ft.	4 ft.	8 ft.	4 ft.	7 ft.	4 ft.


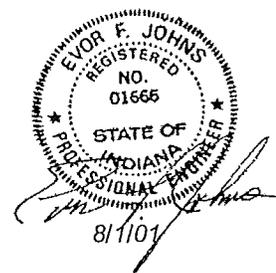


FIG. 75

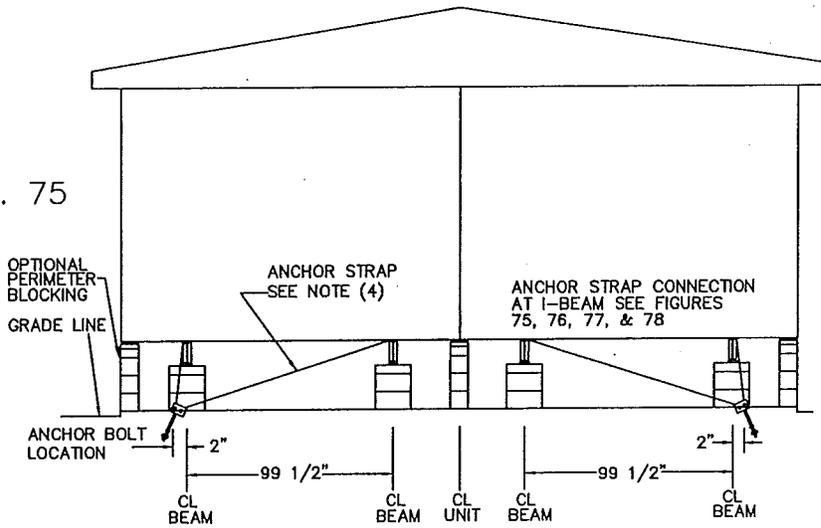

GENERAL NOTES

1. THE ANCHOR MUST BE MINUTE MAN OR EQUAL ANCHOR AND ANCHOR HEAD MUST HAVE AN ULTIMATE STRENGTH EQUAL TO OR GREATER THAN 4725 LBS. FOR 23, 24, 26, 27, 28, AND 32 WDE UNITS.
2. ANCHOR BOLTS (REGARDLESS OF ZONING) MUST START NO FURTHER THAN 2'-0" FROM EACH END OF HOME.
3. IF ANCHOR IS INSERTED VERTICALLY A CONCRETE COLLAR OR STABILIZING DEVICE MUST BE USED AT THE GROUND LINE. SEE FIG. 76 & 77.
4. EACH OF THE STRAPS AND CONNECTIONS TO THE I-BEAM MUST HAVE AN ULTIMATE STRENGTH OF 4725 LBS. SEE FIG. 76 & 77.
5. REFER TO CHART 16 FOR ZONE 1 AND ZONE 2 MAXIMUM STRAP SPACING FOR THIS ANCHORING SYSTEM.

MAXIMUM ANCHOR SPACING (VERTICAL) 99 1/2" I-BEAM CENTERS
ROOF SLOPE 7/12 ONLY

CHART 20

MAXIMUM PIER HEIGHT	24' WDE UNITS		26' WDE UNITS		27'/28' WDE UNITS		32' WDE UNITS	
	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2	ZONE # 1	ZONE # 2
25 1/2"	6 ft.	3 ft.	7 ft.	4 ft.	7 ft.	4 ft.	6 ft.	4 ft.
33 1/2"	6 ft.	3 ft.	7 ft.	4 ft.	6 ft.	4 ft.	6 ft.	3 ft.
41 1/2"	6 ft.	3 ft.	6 ft.	4 ft.	6 ft.	4 ft.	6 ft.	3 ft.
49 1/2"	6 ft.	3 ft.	6 ft.	3 ft.	6 ft.	3 ft.	6 ft.	3 ft.
57 1/2"	6 ft.	3 ft.	6 ft.	3 ft.	6 ft.	3 ft.	5 ft.	3 ft.

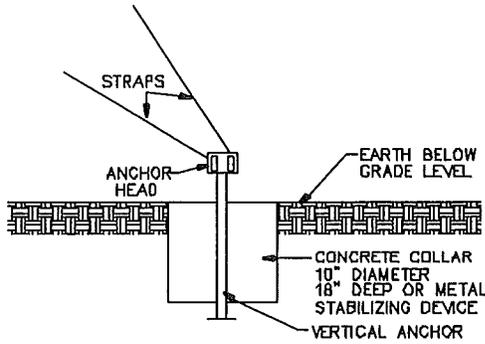


FIGURE 76

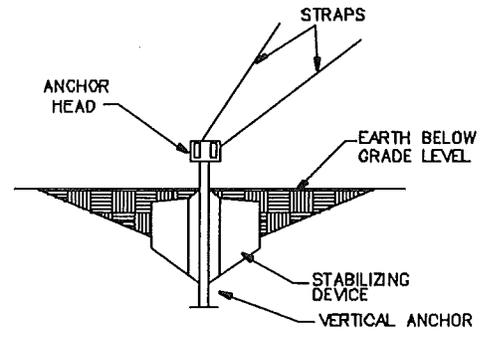


FIGURE 77

NOTES:

* THE TIE STRAP AND CONNECTORS MUST HAVE AN ULTIMATE STRENGTH MINIMUM OF 4725 LBS.

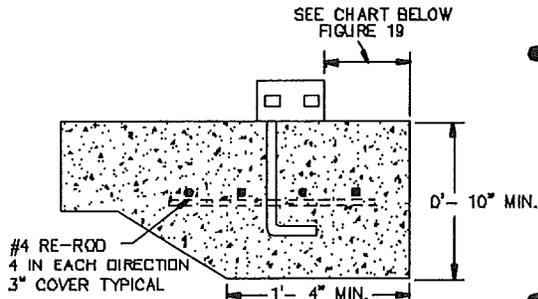


FIGURE 78

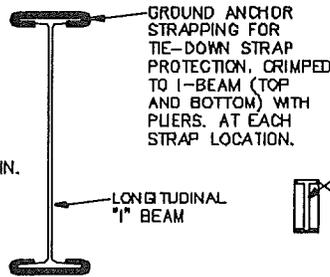


FIGURE 79

NOTE:

ANCHOR BOLT ONLY TO BE USED WITH CONCRETE PAD. GROUND SCREW ANCHOR (SHOWN BELOW) IS TO BE USED FOR ALL OTHER APPLICATIONS FOLLOWING THE MANUFACTURER'S RECOMMENDATIONS AND CONTINGENT UPON LOCAL SOIL CONDITIONS

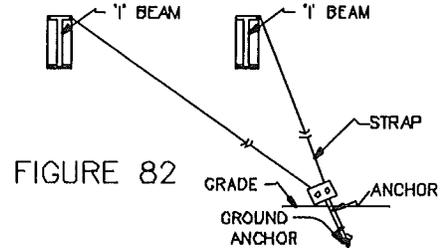


FIGURE 82

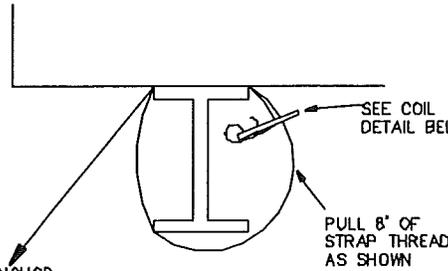
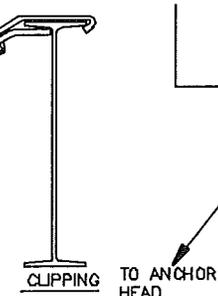
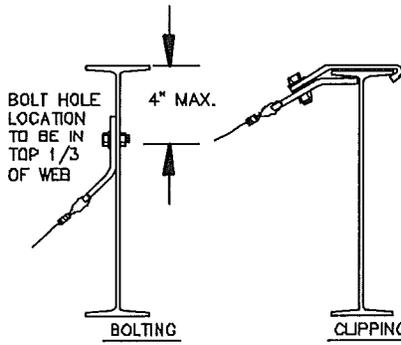


FIGURE 80

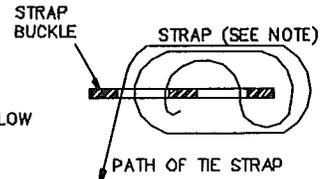


FIGURE 81

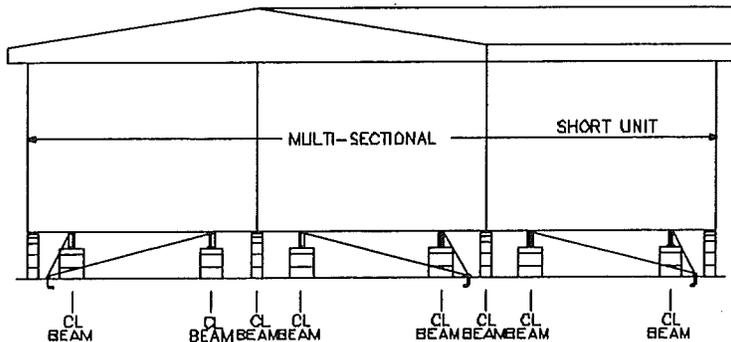
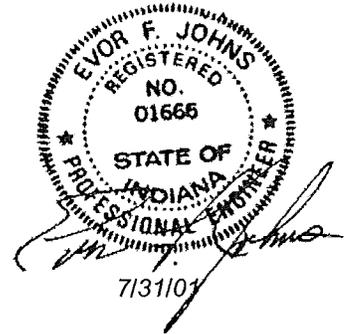


FIGURE 83



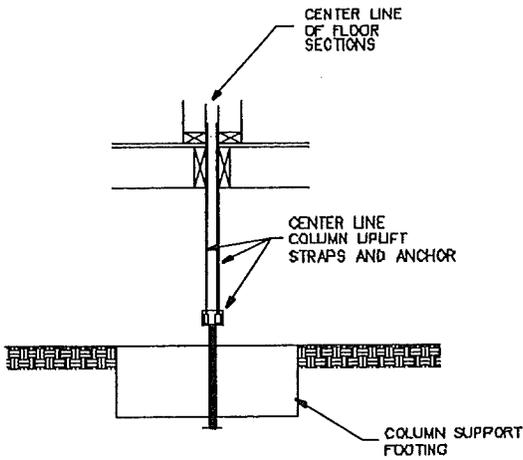


FIGURE 84

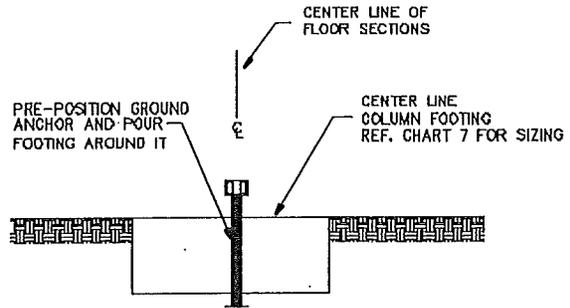


FIGURE 85


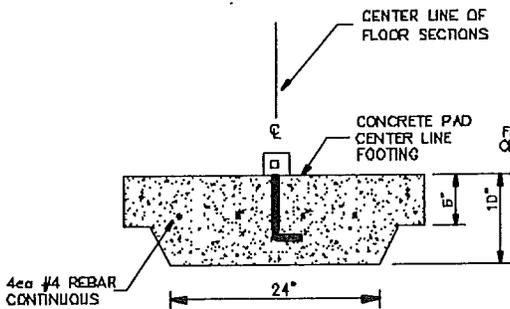


FIGURE 86

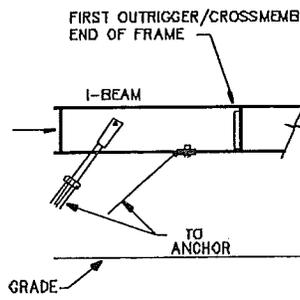

FOR WIND ZONE II ONLY

FIGURE 87

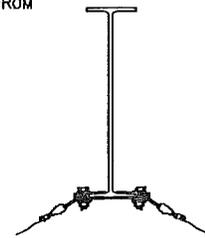


FIGURE 88

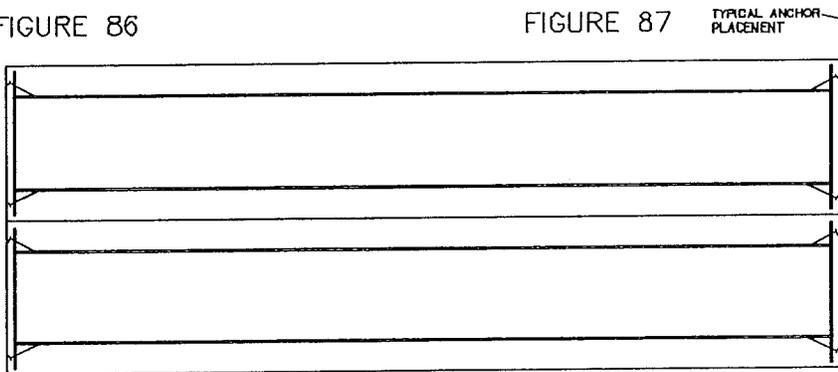



FIGURE 89

CHART 21 LONGITUDINAL TIE-DOWN SPACING FOR 23', 24', 26', 28' AND 32' WDE HOMES.

LONGITUDINAL TIE-DOWN SPACING FOR ROOF SLOPES LESS THAN 4.38/12 (20°) ONLY			
SIDEWALL HEIGHT	PIER HEIGHT	ANCHOR SPACING NOT TO EXCEED	
		ZONE-I	ZONE-II
7.5 FT	25 1/2 IN	13 FT	7.7 FT
7.5 FT	33 1/2 IN	12 FT	7.4 FT
7.5 FT	41 1/2 IN	12 FT	7.1 FT
7.5 FT	49 1/2 IN	11 FT	6.7 FT
7.5 FT	57 1/2 IN	11 FT	6.4 FT
8.0 FT	25 1/2 IN	12 FT	7.3 FT
8.0 FT	33 1/2 IN	12 FT	7.0 FT
8.0 FT	41 1/2 IN	11 FT	6.7 FT
8.0 FT	49 1/2 IN	11 FT	6.4 FT
8.0 FT	57 1/2 IN	10 FT	6.0 FT

CHART 22

LONGITUDINAL TIE-DOWN SPACING FOR ROOF SLOPES TO 5/12			
SIDEWALL HEIGHT	PIER HEIGHT	ANCHOR SPACING NOT TO EXCEED	
		ZONE-I	ZONE-II
7.5 FT	25 1/2 IN	12 FT	7.0 FT
7.5 FT	33 1/2 IN	11 FT	6.7 FT
7.5 FT	41 1/2 IN	11 FT	6.4 FT
7.5 FT	49 1/2 IN	10 FT	6.1 FT
7.5 FT	57 1/2 IN	10 FT	5.8 FT
8.0 FT	25 1/2 IN	11 FT	6.7 FT
8.0 FT	33 1/2 IN	11 FT	6.4 FT
8.0 FT	41 1/2 IN	10 FT	6.1 FT
8.0 FT	49 1/2 IN	10 FT	5.8 FT
8.0 FT	57 1/2 IN	9 FT	5.6 FT

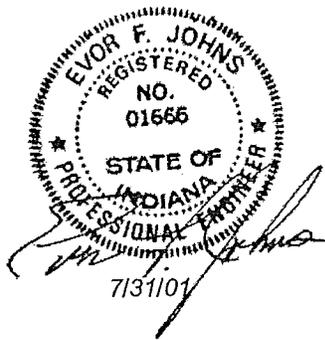

MINUTE MAN ANCHORS			
MODEL	DESCRIPTION	USE ON SOIL TYPE	DEPTH OF EMBEDMENT
650-DH 5/8	DOUBLE HEAD, EARTH AUGER ANCHOR	2,3,4	48"
650-DH 3/4	DOUBLE HEAD, EARTH AUGER ANCHOR	2,3,4	48"
650-DH 11/16	DOUBLE HEAD, EARTH AUGER ANCHOR	2,3,4	48"
210-PDH	DOUBLE HEAD TENSION DEVICE FOR CONCRETE	SLAB	6"

CHART 23

SOIL TYPE FOR ANCHOR EMBEDMENT	
1.	SOUND HARD ROCK
2.	VERY DENSE AND/OR CEMENTED SANDS, COARSE GRAVEL AND COBBLES, PRE LOADED SILTS, CLAYS, AND CORALS. (PROBE TORQUE VALUE RANGE—GREATER THAN 550 INCH POUNDS).
3.	MEDIUM—DENSE COARSE SANDS, SANDY GRAVELS, VERY SILTS AND CLAYS. (PROBE TORQUE VALUE RANGE— 350—550 INCH POUNDS).
4.	LOOSE TO MEDIUM DENSE SANDS, FIRM TO STIFF CLAYS AND SILTS, ALUVIAN FILL. (PROBE TORQUE VALUE RANGE— 200—349 INCH POUNDS).

CHART 24

NOTE:

IT IS NOT THE INTENT OF THIS COMPANY TO LIMIT THE GROUND ANCHORING EQUIPMENT TO THAT LISTED ABOVE. ALTERNATE GROUND ANCHOR EQUIPMENT MAY BE USED AS LONG AS THE EQUIPMENT CAN BE SHOWN TO COMPLY WITH DESIGN CRITERIA PARAGRAPH NUMBER 5, FOUND EARLIER IN THIS MANUAL. IN ALL CASES, THE LOCAL SOIL CONDITIONS MUST BE CAPABLE OF HOLDING THE ANCHORS USED.

INSTALLATION NOTES

**MISCELLANEOUS,
OPTIONS,
CONNECTIONS, AND
INFORMATION**

MISCELLANEOUS OPTIONS, CONNECTIONS, AND INFORMATION

Central Air Conditioning

If your home was not provided with an air conditioning or make-ready-for-air-conditioning option and you want to install a central air conditioning system, you must first consult the Heating and Cooling Design Basis Certificate, Comfort Cooling section to determine whether your home has been constructed with an air distribution system designed for use with central air conditioning. This certificate is part of the Compliance Certificate, which is located on a wall in the master bedroom clothes closet.

1. Self-Contained Air Conditioning Unit

If a self-contained central air conditioning unit is to be used (separate from the furnace) an automatic damper to prevent cooled air from blowing up into the furnace will have to be installed in the furnace base. Depending on the furnace installed in your home, this damper may already have been installed at the factory, or in some cases, the furnace may be of a type which is labeled as suitable for use with air conditioning without such a damper. In addition, the ducts carrying cooled air from the air conditioning unit into the home and return air from the home to the air conditioning unit (See Figure 91), must contain dampers or be installed in such a way so that when the furnace runs, heated air does not blow through these ducts into the air conditioning unit.

A combination heating/cooling thermostat will also have to be installed to prevent simultaneous operation of the furnace and the air conditioner.

The duct carrying cooled air from the air conditioner to the home should be connected to the bottom of the main duct located in the floor of the home. The connection should be located so that an equal number of floor registers are on each side of the connection. The floor joists within the floor of the home should not be notched or cut into in any way when installing the air conditioner supply duct.

A duct carrying return air from the home back to the air conditioning unit will be necessary. The return air register should be located so that air passage is not restricted, and it should be located between the floor joists within the floor. The floor joists must not be notched or cut into in any way when installing the return air duct.

The connection of the flexible duct to the heat duct within the floor sections of the home must be properly supported to avoid stress on the heat duct and the connection thereto. The flexible ducts must also be supported above the surface of the ground.

2. Split System Air Conditioning Unit

If a split system (a system having an A-coil in the furnace and an external condensing unit) is installed, it must be listed for use with the heating equipment installed in this home. It may be necessary to change the furnace blower when installing this type of system.

3. General A/C Power Supply

NOTICE

**ELECTRICAL CONNECTIONS MADE
TO ENERGIZE AIR CONDITIONING**

Miscellaneous Options, Connections, and Information (continued)

EQUIPMENT SHOULD BE MADE ONLY BY QUALIFIED PERSONNEL. THE COMPLETED INSTALLATION MUST CONFORM TO ARTICLE 440 OF THE NATIONAL ELECTRIC CODE AND APPLICABLE LOCAL CODES.

Branch circuits installed at the factory for the purpose of energizing air conditioning or heat pump equipment will have a junction box located on the bottom side of the home. A data plate will be placed on the side of the home adjacent to this box outlining the maximum full load ampere draw for the indicated branch circuit. In installing air conditioning or heat pump equipment, do not exceed the indicated circuit rating. See Figure 90.

When the electrical connection is made via a junction box beneath the home, the field installation wiring beyond the junction box must incorporate a fuse disconnect (size in accordance with NEC Article 440) located within sight of the condensing unit. The maximum fuse size to be used with the fuse disconnect is marked on the condenser data plate.

When the electrical connection is made for air conditioning or heat pump equipment for which a branch circuit was not provided at the time of manufacture of the home, the connection must be made via a branch circuit originating at a power source outside the home.

In all cases, the installation of air conditioning or heat pump equipment must be in accordance with the manufacturer's written installation instructions. The acceptability of the air conditioning equipment, rating and location of the disconnect, fused type branch circuit protection, and connec-

tions to the equipment are to be determined by the local inspection authorities.

Wood Burning Fireplace

1. If your home is equipped with a built-in fireplace, it will be necessary to complete the installation of the round top assembly, rain cap, spark arrestor, and chimney pipe. See Figure 92.

2. Install the storm collar over the roof flashing. The storm collar must rest on top of the flashing spacers. Install the tabs through the slot on the opposite end of the storm collar and push storm collar down over the chimney so that it rests on the roof flashing. Pull the tab to tighten the storm collar against the chimney pipe. Seal top edge of storm collar with non-combustible waterproof sealant. See Figure 93.

3. Install remaining section of chimney pipe and contemporary cap.

NOTE

THE CHIMNEY OUTLET LOCATED INSIDE THE CONTEMPORARY CAP ASSEMBLY MUST EXTEND AT LEAST 3 FEET ABOVE THE POINT WHERE THE CHIMNEY EXITS THE ROOF AND BE AT LEAST 2 FEET ABOVE THE HIGHEST POINT WITHIN OF THE ROOF OR HOME 10 FEET OF THE CHIMNEY.

4. Do not attempt to use the fireplace until the installation of the fireplace flue has been completed. Make certain that all the temporary weather protection has been removed and the pipe is open.

Miscellaneous Options, Connections, and Information (continued)

5. Follow the manufacturer's instructions provided with your fireplace to install chimney pipe connections along with general hints and maintenance to care for your fireplace.

6. Do not block any portion of the vented area of the round top assembly

Furnace Roof Jack

The furnace roof jack, for your home may have been shipped loose to comply with transportation height requirements. A warning tag may be attached to the fuel supply line, the furnace, and the furnace thermostat if the furnace roof jack was shipped loose. The furnace roof jack and instructions for the installation of the roof jack are provided with your home.

WARNING

THE FURNACE ROOF JACK MUST BE INSTALLED BEFORE THE FURNACE IS OPERATED.

If this home is installed in an area which receives large amounts of snowfall, the flue piping on the furnace may need to be extended to ensure an adequate amount of combustion air. Flue pipe extensions are available from the furnace manufacturer and their service centers. To extend the flue, the termination cap is removed, the extension installed and the termination cap reinstalled. Exact instructions are supplied by the furnace manufacture with each extension and must be followed exactly.

Optional Dryer Venting Installation

A gas or electric clothes dryer installed in the home must be exhausted to the outside by a moisture lint exhaust duct and termination fittings.

CAUTION

DRYER EXHAUST SYSTEM MUST NOT TERMINATE UNDERNEATH THE HOME.

1. An access panel is located in the dryer area to provide access to the dryer end of the duct system. See Figures 95 and 96.

2. Access to rough in from outside may be located on the bottom side of the floor or on an exterior wall. See Figure 94.

3. The exhaust system shall be completed on site as shown with materials provided by the owner. See Figures 95 and 96.

Exhaust duct and termination fittings must be listed by an approved testing agency or certified as components of the dryer.

CAUTION

THE FACTORY-INSTALLED CLOTHES DRYER ELECTRICAL CIRCUIT IS SUPPLIED BY A CABLE CONTAINING 4 ELECTRICAL CONDUCTORS AND TERMINATES WITH A 4-PRONG RECEPTACLE. DO NOT CHANGE THE 4-PRONG RECEPTACLE TO A 3-PRONG RECEPTACLE. PURCHASE A 4-PRONG APPLIANCE CORD AND INSTALL IT ON YOUR DRYER.

Miscellaneous Options, Connections, and Information (continued)

Installation of Accessories

If additional decorative or functional accessories are to be attached to your home such as utility buildings, carports, skirting, and awnings, the following practices must be observed:

1. Read carefully and follow the instructions for any supplemental accessory, which are provided by the manufacturer of such accessory. Always check to determine that the installation conforms to applicable building codes.
2. If direct attachment to the home is necessitated, make certain that solid structural members are behind the attachment point. In the event a carport or awning is being installed, it should be attached only along the top of the wall or the edge of the roof. Proper size fasteners should always be used, and interlocking parts should be carefully fitted.
3. In installing carports, awning rails, or small storage buildings, select a unit that is designed with support columns, which will carry its own weight. As little weight as possible should be attached to the home itself.
4. The foundation system for any structure attached to the home must be equal to the foundation system for the home. If the foundations are not equal, frost heave or settling could occur at different rates. This unequal movement can result in structural damage or lost weather seals, which will promote air and water infiltration.
5. All joints created by attaching accessories to the home should be

properly sealed with weather-stripping and covered, if possible, with molding or flashing. Attaching fasteners should be caulked or sealed. All holes or openings necessitated in the walls or roof of the home should be covered and sealed to insure against leakage.

CAUTION

MODIFICATIONS OR ALTERATIONS OF YOUR HOME MAY MAR ITS APPEARANCE AND WEAKEN IT STRUCTURALLY WHICH COULD VOID YOUR WARRANTY RIGHTS.

Light Fixture and Ceiling Fan Installation

Some light fixtures and ceiling fans may not be installed when the home is built because of possible damage to the fixture while the home is being moved. These fixtures include exterior lights, ceiling fans, and chain hung interior fixtures. When installed, all fixtures must be grounded either by a fixture mounting screw or a fixture-grounding conductor. In the case of a chain-hung fixture, both are required. Typical installations are shown in Figures 97, 98 and 99.

The mounting bracket for ceiling fans must not be fastened to the electrical box for support unless the electrical box is listed for that purpose and the total supported weight is not greater than 35 pounds. See Figure 100 for fan support independent of the electrical box.

Evaporative Cooler Make Ready

Some homes have been made ready for the installation of evaporative

Miscellaneous Options, Connections, and Information (continued)

coolers. The roof structure has been reinforced and a capped duct opening provided. The cooling unit must be installed per its manufacturer installation instructions and a water line with shut off valve provided.

The electrical connection must be made at the junction box provided in the duct (See Figure 101) or on the roof (See Figure 102) in accordance with the requirements of the National Electric Code.

A water overflow hose must be provided to allow the water from the accumulation pan under the cooler coils a pathway away from the home. Do not allow the water to run across the roof and down the side of the home.

Relocation of Home

In the event that the home is to be relocated, the installation process will need to be reversed to make the home ready for transportation. Earlier in this instruction you were made aware to "take special note of temporary structural supports and bracing locations, as they must be reinstalled for any secondary movement." These supports and braces must be reinstalled for a proper secondary movement. Failure to do so could cause the structure of the home to be damaged.

Refer to Section E in your Homeowners Manual for more information on moving regarding the inspection of road gear, packing, overloading, and routing.

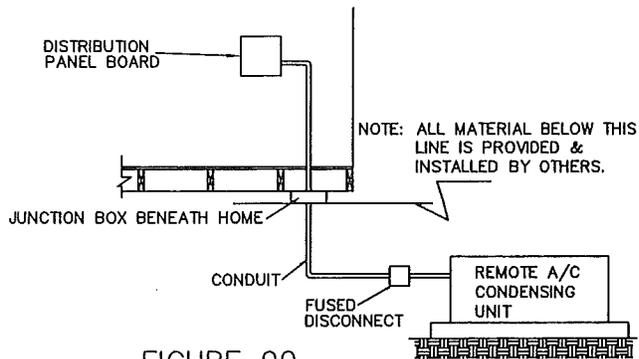


FIGURE 90

SPECIAL NOTES

- (1) FACTORY INSTALLED CIRCUIT HAS BEEN SIZED FOR A MAXIMUM WIRE AMPACITY OF 40 AMPS. & HAS AN OVERCURRENT PROTECTION DEVICE RATED AT 30 AMPS.
- (2) THIS CIRCUIT MAY NEED ADJUSTMENT ACCORDING TO THE AMPACITY OF THE A/C UNIT INSTALLED.
- (3) REFER TO THE NATIONAL ELECTRIC CODE & THE AIR CONDITIONER INSTALLATION REQUIREMENTS.

DOUBLE WIDE APPLICATION
REMOTE AIR OR HEATING

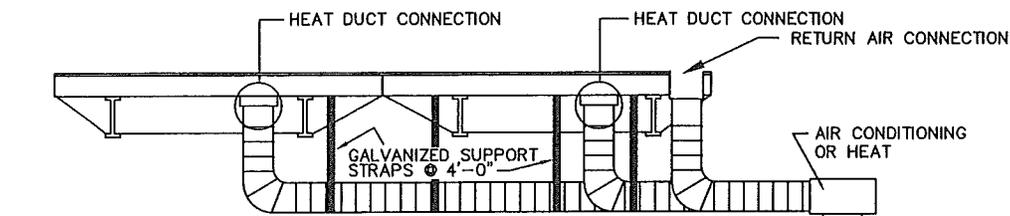


FIGURE 91


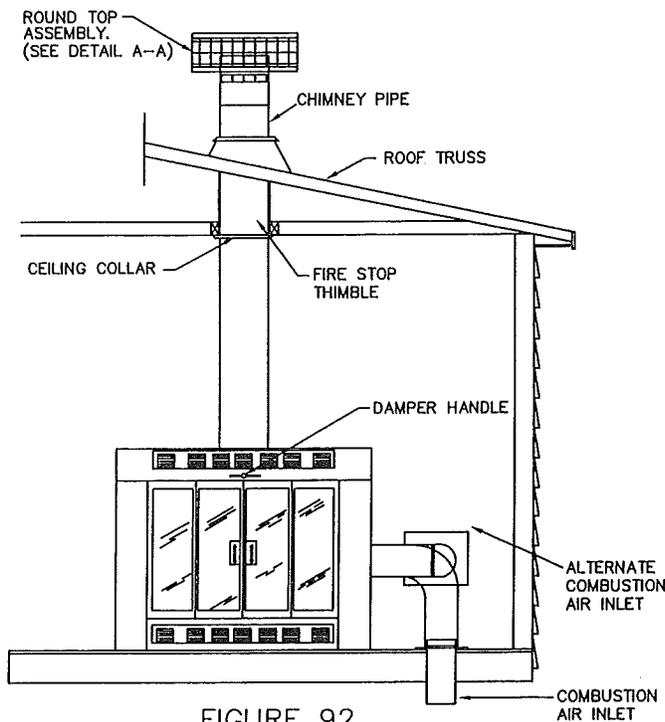


FIGURE 92

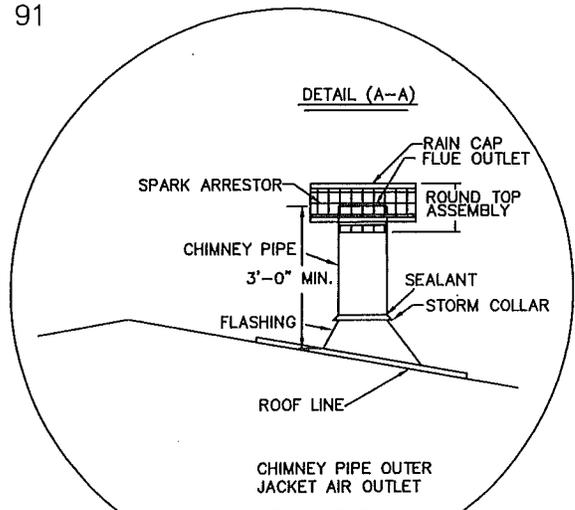

CHIMNEY PIPE OUTER
JACKET AIR OUTLET

FIGURE 93

NOTE
THE CHIMNEY TERMINATION HEIGHT IS DETERMINED BY THE LOCATION OF THE FIREPLACE IN THE HOME. THE MINIMUM CLEARANCES ARE AS FOLLOWS.

- TERMINATION MUST BE AT LEAST 3- FEET ABOVE THE HIGHEST POINT ON THE ROOF THROUGH WHICH THE FLUE PASSES.
- IF THE CENTER OF THE FLUE PIPE IS WITHIN 10- FEET OF THE PEAK, THE FLUE MUST TERMINATE AT LEAST 2- FEET ABOVE THE PEAK.
- IF THE CENTER OF THE FLUE PIPE IS FARTHER THAN 10- FEET FROM THE PEAK, THE FLUE MUST TERMINATE 2- FEET ABOVE THE HIGHEST PORTION OF THE ROOF WITHIN 10- FEET.

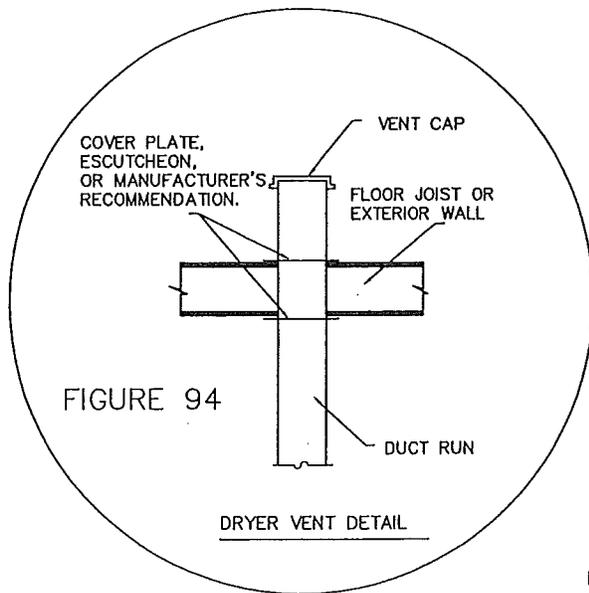


FIGURE 94

DRYER VENT DETAIL

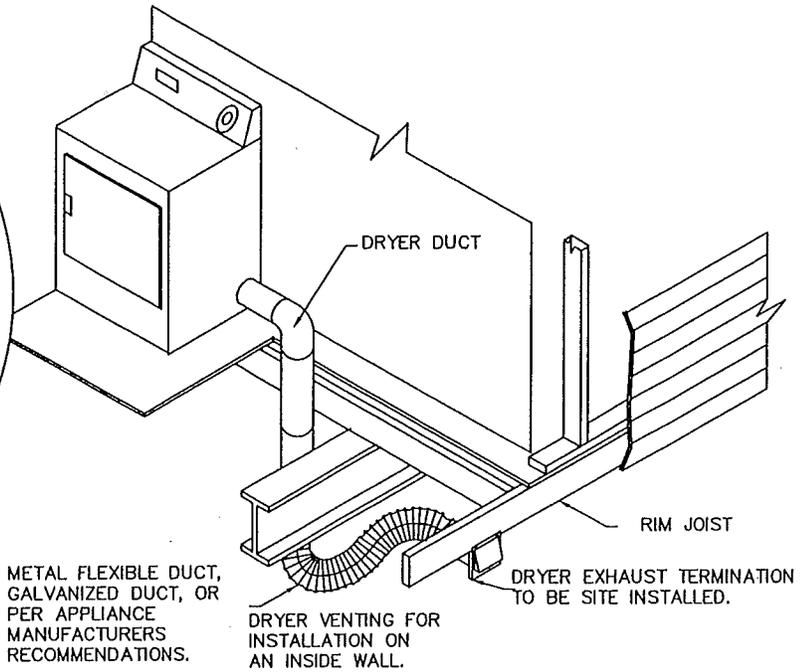


FIGURE 95

DRYER VENTING FOR
INSTALLATION ON
AN OUTSIDE WALL.

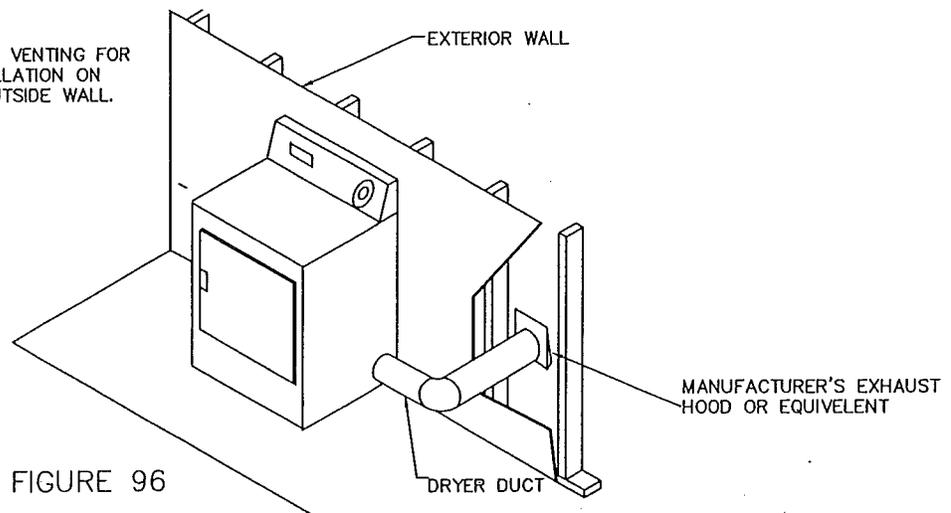


FIGURE 96

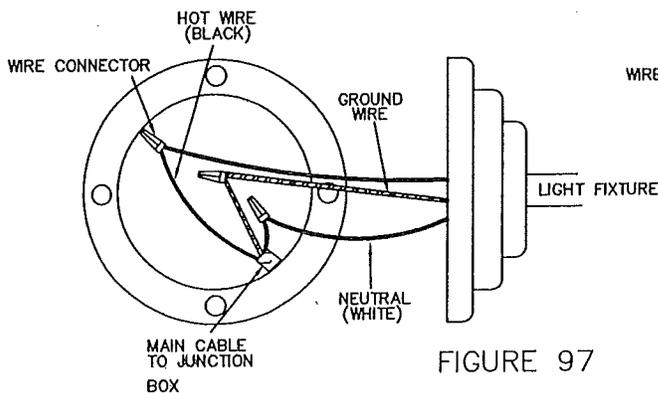


FIGURE 97

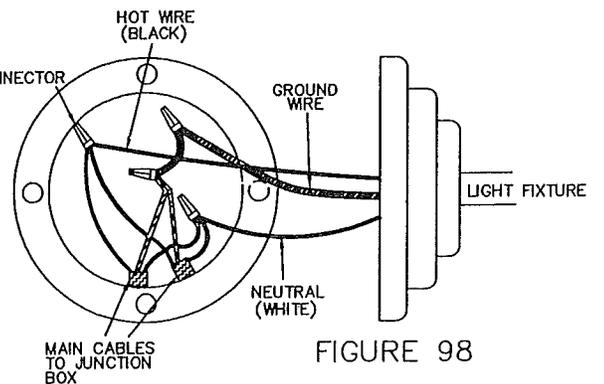


FIGURE 98


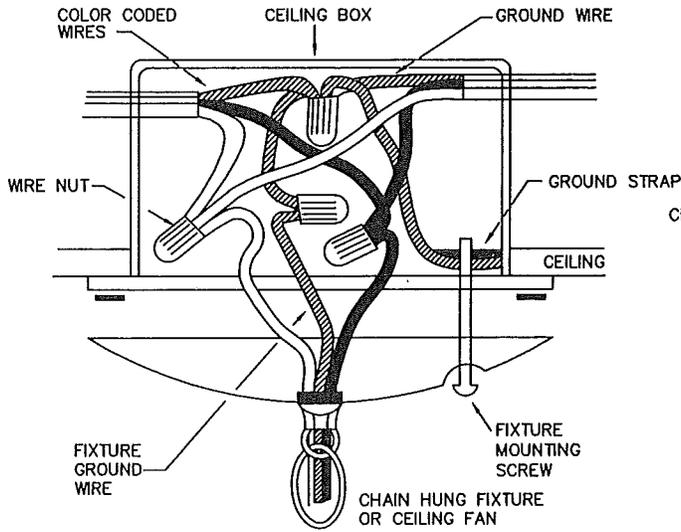


FIGURE 99

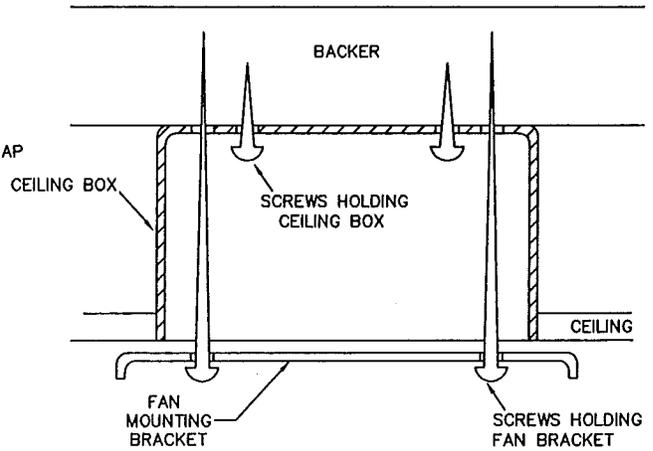

1. USE (2) TWO #8 SCREWS TO HOLD BOX TO BACKER.
2. USE (2) TWO #8 SCREWS TO HOLD BRACKET TO THE BACKER THROUGH THE BOX.
3. BOX MUST NOT SUPPORT BRACKET.
4. FAN BRACKET GROUND CONDUCTOR MUST CONNECT TO CIRCUIT GROUNDING CONDUCTOR.

FIGURE 100

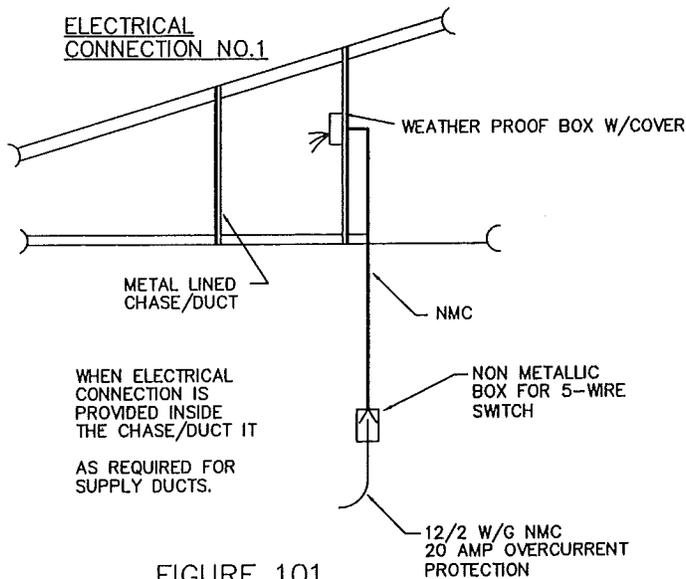


FIGURE 101

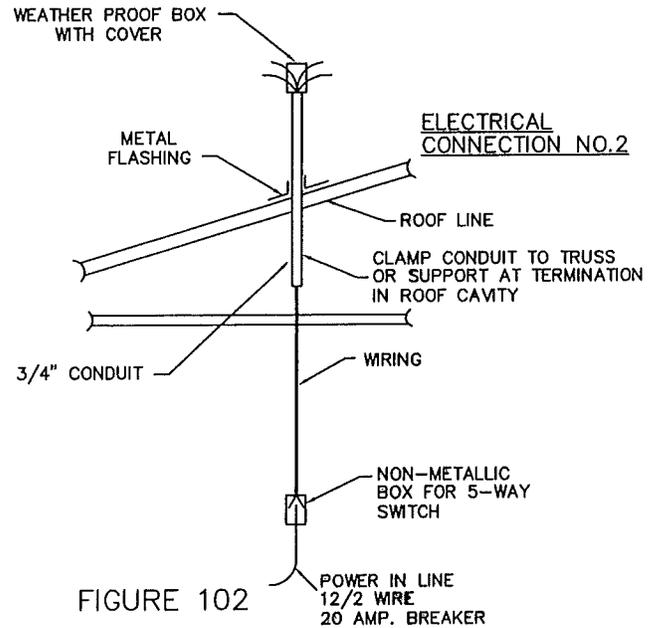


FIGURE 102

INSTALLATION NOTES

FINAL INSPECTION

FINAL INSPECTION

After your home has been completely installed, a final inspection should be made to insure that no items have been overlooked which could cause a problem. Special emphasis should be placed on the following items:

1. Exterior Siding and Trim

A thorough check should be made of all portions of the exterior siding to make certain that it is not cracked or split, buckled, or loose in any manner. Any siding observed to be in this condition should be repaired or replaced. All fasteners that are loose should be retightened or replaced. All decorative trim pieces or molding strips, including molding along the edge of the roof, should have special attention to make certain there are no gaps or voids in the sealant tapes or caulking material. If any such places are observed, they should be resealed.

2. Roofs

The roof must be checked to make certain that all vent, flue and intake flashings are firmly in place. That the roof ventilators, flue pipes, exhaust vents, and air intakes have not become damaged or loosened in transit or installation. That any eave or gable extensions have been soundly installed and that any ridge vent and/or shingle ridge cap is firmly in place.

In certain areas of the shingled roof, protective materials may have been fastened in place to protect the shingles from the affects of transportation. When these materials have been removed, it will be necessary to remove all the fasteners and fill the resultant holes with asphalt plastic roof cement. Further,

while it is recognized that the seal tabs on the shingles will need a few warm days to completely seal down, any problem area can be sealed by placing a small amount of asphalt plastic roof cement under each end of the tab and pressing down firmly.

3. Clearances

If there are any low-hanging trees or bushes adjacent to your home, which could damage the exterior or the roof, they should be trimmed or cut accordingly. Future growth of these bushes or trees should be considered in connection with their possible movement during wind conditions or under snow or ice loads.

4. Caulking and/or Sealers

There are many good brands of caulking material and roof sealers, which can be purchased from local retail stores. Whatever brand of caulking and/or sealer is purchased the instructions regarding application should be read closely. This will include any special preparation of the surface to be coated. Observe the labeling on this material for any notes concerning resistance to running or streaking the sides of the home. This can be very unsightly and, in many cases, extremely difficult to remove. Special detergents or etching agents may be required in some cases to clean the metal surfaces on which caulking or sealers are to be applied. Again, the manufacturer's instructions should be followed to the detail to prevent damaging roof and side metals.

FINAL INSPECTION (continued)

5. Egress Windows

An egress window is provided for each bedroom and a label is located on the window to identify it and to provide opening instructions. The egress windows must be checked to assure that all shipping clips on screens, storm windows, and other appurtenances are removed so that quick and safe exit is possible. Check the window to assure it opens properly.

6. Exterior Doors and Storms

Exterior doors are provided with door plungers and chain stops. Doors must be checked to ensure that these items have been installed and adjusted.

Winter Precautions

In the event you elect to vacate your home during the winter months, care should be taken to ensure that adverse weather conditions will not damage your home.

1. Follow the procedures listed in the Utility Systems section to properly drain your water system and add antifreeze to your P-traps at all locations.
2. The heat should be left on to maintain a temperature that will not allow the build-up of moisture and the growth of mold. Moisture build-up can cause swelling or warping of materials and furnishings.
3. Provisions should also be made to inspect the home on a weekly basis to ensure that the skirting ventilators are open and not snow-covered and to remove any ice and snow build-up along the eaves, as stated in the Home Owners

Manual, to prevent the water created by melting ice and snow from backing up under the shingles or entering the home by other means.

High Wind Precautions

Homes located in Wind Zone II may occasionally be subjected to high winds. In the event of a high wind, you may wish to protect your primary windows, patio doors and entrance doors against the pressures created by the high winds. If you have not already installed storm shutters, these areas may be protected by a covering of plywood fastened to the wall studs, around the window or door frames with wood screws. Any joints in the plywood at patio door openings will need to be secured by fastening a 2 x 4 to each side of the plywood to stiffen the joint. When the plywood is removed the screw holes must be filled with a high quality silicone caulk. Such caulking is available at local retail stores.

Receiving devices, sleeves or anchors for fasteners to be used to secure shutters or other type of manufactured protective covers to the exterior walls at window and door locations have not been provided with this home.

When the wind force is high enough to require the protection of your windows and doors as described above; it is recommended that you seek shelter away from the path of the storm or in specifically designated shelter.

NOTES:

NOTES:

NOTES:

0302

Copyright 2002, Fairmont Homes, Inc.

3-02 DP 57260